


## 5. Airbag Connector

### A: PROCEDURE

#### 1. BUCKLE SWITCH

##### 1) How to disconnect:

- (1) Move the slide lock (A) in the direction of arrow.
- (2) While holding the slide lock (A) in moved position, disconnect the connector.

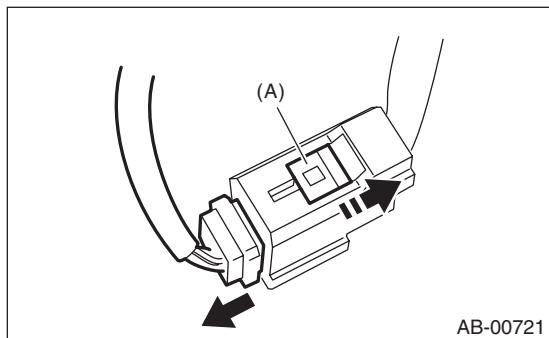


##### CAUTION:

**When pulling the slide lock or disconnecting connector, be sure to hold the connector, not the harness.**

##### 2) How to connect:

Holding the connector (A), and push it in carefully until a clicking sound is heard.

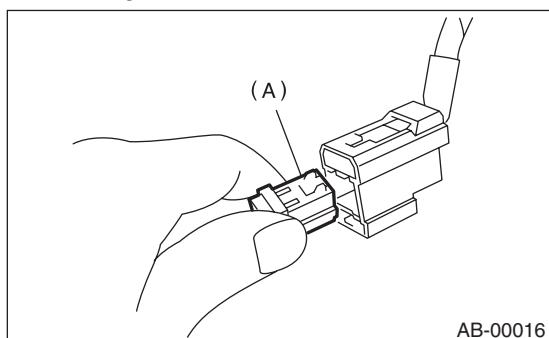


##### CAUTION:

**Be sure to insert the connector in until it is locked. Then pull it gently to make sure that it is locked.**


## 2. DRIVER'S AIRBAG MODULE, CURTAIN AIRBAG MODULE AND PRETENSIONER

##### 1) How to disconnect:

- (1) Using a flat tip screwdriver, pry the push lock upward to unlock.

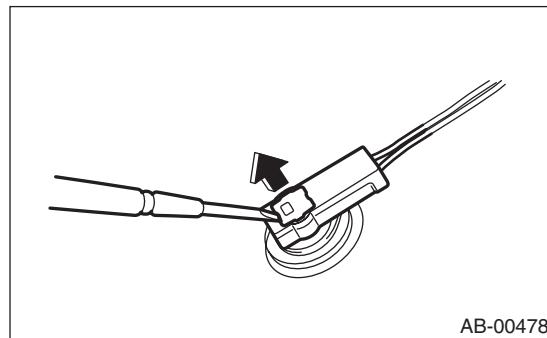

- (2) Pull and disconnect the connector from the driver's airbag module assembly or retractor assembly.

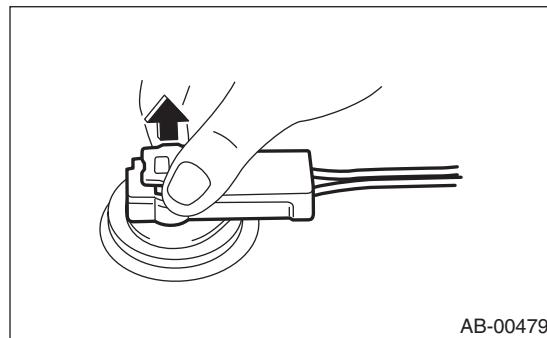


##### 2) How to connect:

Connect the connector in the reverse order of disconnecting. At this time, be sure to insert the push lock until a clicking sound is heard.

##### CAUTION:

- **Be sure to insert the connector in until it is locked. Then pull it gently to make sure that it is locked.**
- **Be sure to push the push lock in securely.**

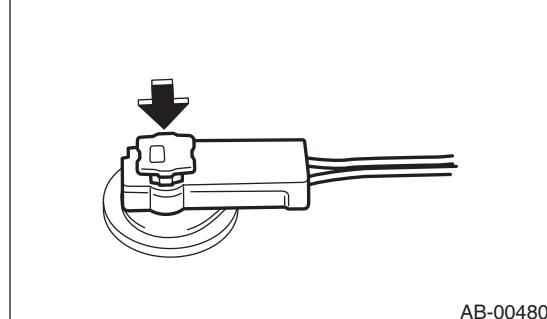

##### NOTE:

The connector can not be connected when the push lock is in the lock position. To connect the connector, set the push lock to unlock position.


# Airbag Connector

## AIRBAG SYSTEM (DIAGNOSTICS)


### 3. DRIVER'S AIRBAG (BETWEEN AIRBAG MAIN HARNESS AND ROLL CONNECTOR) AND PASSENGER'S AIRBAG

#### 1) How to disconnect:

- (1) Push the slide lock (A) into the direction of arrow.

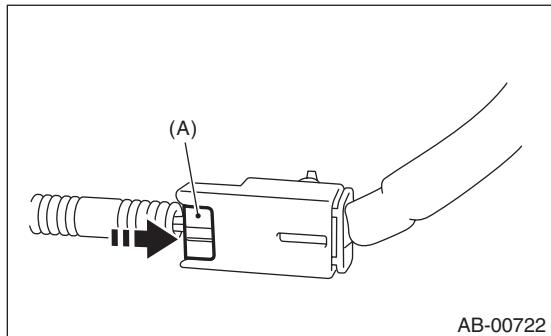

- (2) With the slide lock pushed, disconnect the connector.

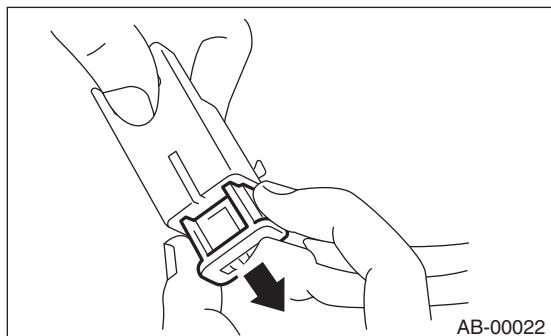

#### CAUTION:


**When pulling the slide lock or disconnecting connector, be sure to hold the connector, not the harness.**

#### 2) How to connect:

Holding the connector, push it in securely until a clicking sound is heard.

#### CAUTION:

**Be sure to insert the connector in until it is locked. Then pull it gently to make sure that it is locked.**

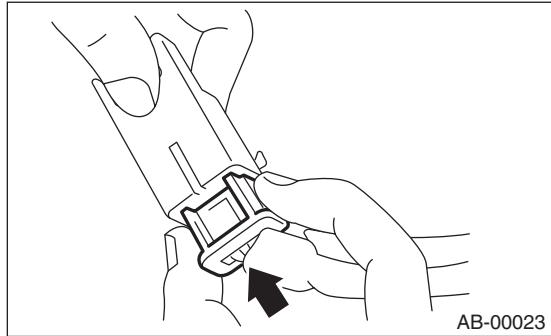


### 4. SIDE AIRBAG

#### 1) How to disconnect:

- (1) Push the lock arm (A).


- (2) With the lock arm (A) pushed in, move the slide lock (B) in the direction of arrow.

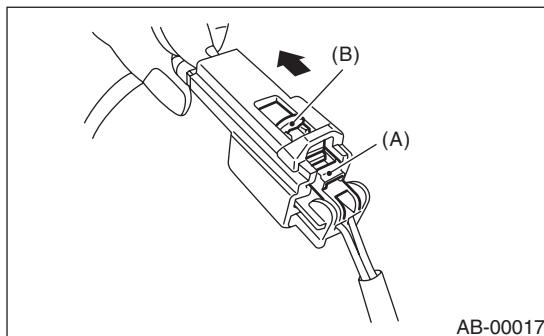

- (3) While holding the slide lock in that position, release the lock arm (back to the original position), and disconnect the connector.

#### CAUTION:

**When pulling the slide lock or disconnecting connector, be sure to hold the connector, not the harness.**

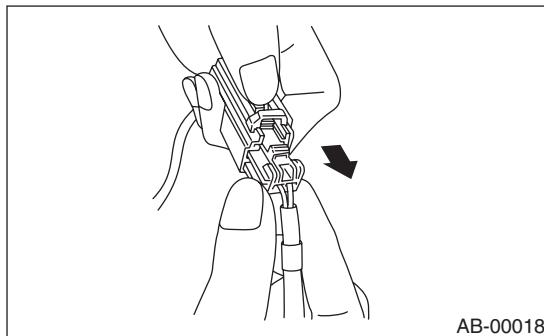


### 5. FRONT SUB SENSOR, SIDE AIRBAG SENSOR, CURTAIN AIRBAG SENSOR AND SEAT POSITION SENSOR LH

#### 1) How to disconnect:

Holding outer part (A), pull it in the direction of arrow.

#### CAUTION:

**When pulling the slide lock or disconnecting connector, be sure to hold the connector, not the harness.**

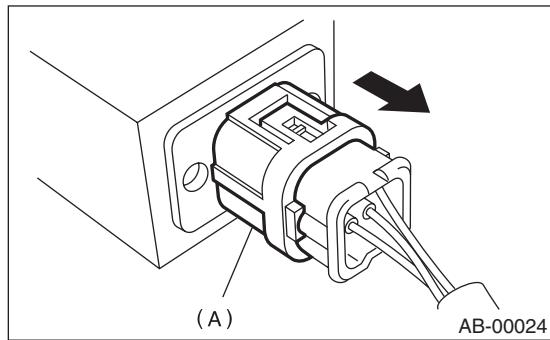

#### 2) How to connect:

Holding the connector, push it in securely until a clicking sound is heard.

#### CAUTION:

- Outer side (A) move back, and so do not put your hand on the outer part.
- Be sure to insert the connector in until it is locked. Then pull it gently to make sure that it is locked.

