

2. Cruise Control Unit

A: NOTE

The control of cruise control system is carried out in engine control module (ECM).

Refer to engine section for removal and installation.

<Ref. to FU(H6DO)-37, Engine Control Module (ECM).>