


2. Front Hood

A: REMOVAL

1. FRONT HOOD INSULATOR


- 1) Release the clips to remove the front hood insulator.

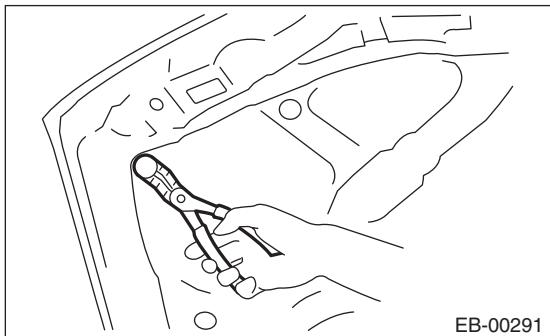

EB-00291

2. FRONT HOOD WEATHER STRIP


- 1) Remove the weather strip.

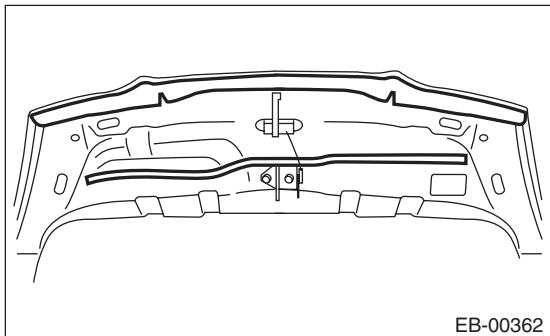

EB-00362

NOTE:


If the weather strip clip is removed with excessive force, the weather strip may be damaged. Be sure to use clip remover to remove.

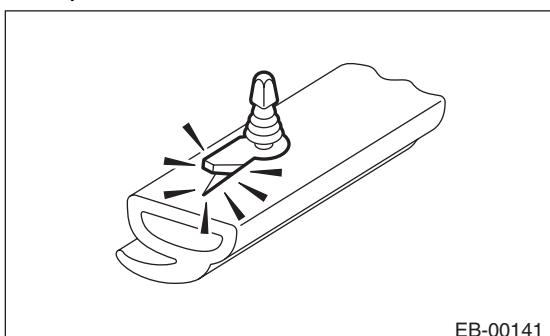

EB-00141


3. FRONT HOOD DAMPER

- 1) Remove the mounting bolts, and remove the damper stay.

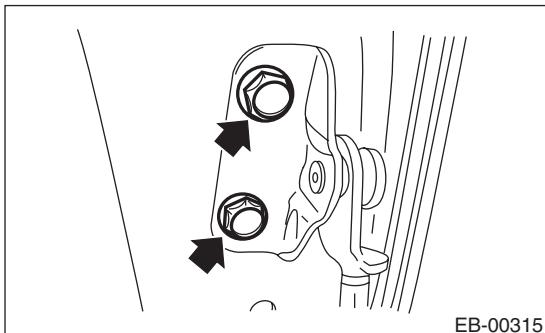

EB-00315


- 2) Remove the mounting bolt of front hood damper stay.

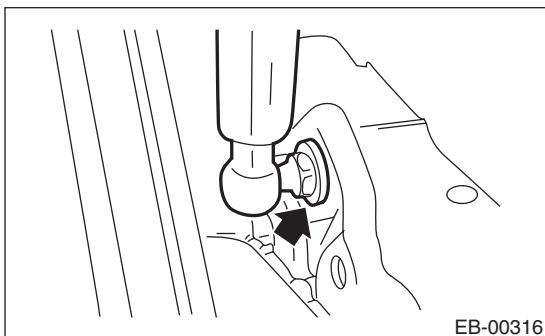


EB-00316

4. FRONT HOOD HINGE


- 1) Remove the front hood damper.
- 2) Remove the bolt, and remove the front hood panel.

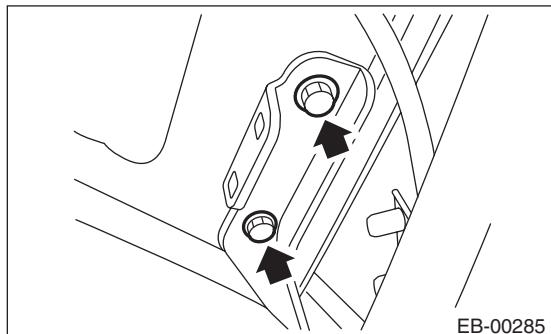

- 3) Remove the clip, and remove the cowl side panel front.

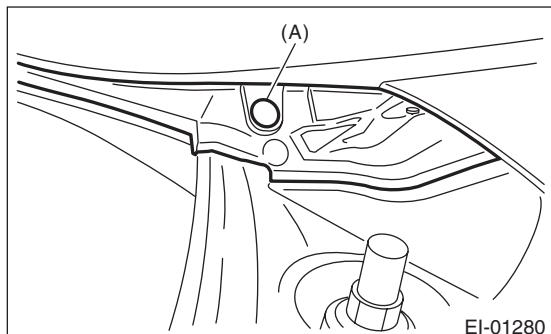

- 4) Remove the front fender. <Ref. to EB-15, REMOVAL, Front Fender.>
- 5) Remove the bolts of front hood hinge.

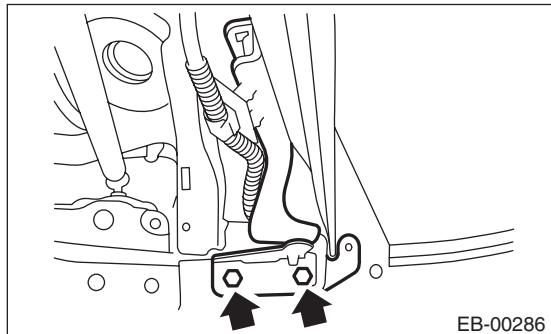


5. FRONT HOOD STRIKER

Refer to the front hood lock assembly of SL section.
<Ref. to SL-43, Front Hood Lock Assembly.>

6. FRONT HOOD PANEL

- 1) Remove the front hood insulator.
- 2) Open the front hood to remove the window washer hose.
- 3) Remove the front hood weather strip.
- 4) Remove the hood lock assembly.
<Ref. to SL-43, REMOVAL, Front Hood Lock Assembly.>
- 5) Remove the window washer hose and nozzle.
<Ref. to WW-18, REMOVAL, Front Washer Nozzle.>
- 6) Remove the front hood damper.
- 7) Remove the bolt, and remove the front hood panel from the front hood hinge.

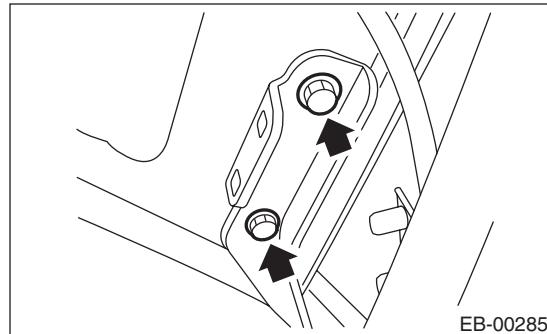

B: INSTALLATION

Install in the reverse order of removal.

NOTE:


Be careful not to catch the window washer hose in.

Tightening torque:

Refer to “COMPONENT” of “General Description”. <Ref. to EB-6, FRONT HOOD, COMPONENT, General Description.>

C: ADJUSTMENT

- 1) Adjust the clearance between front hood panel and front fender panel. Clearance must be equal at both sides. For the dimension of clearance, refer to "SPECIFICATION" in "General Description". <Ref. to EB-2, SPECIFICATION, General Description.>
- 2) Use the hinge mounting bolts to align the front hood longitudinal and lateral position.

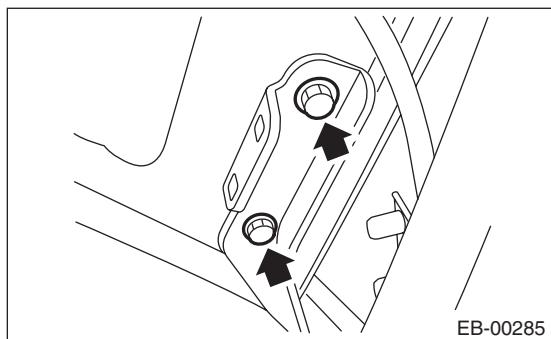

- 3) Adjust the height at the front end of hood. <Ref. to SL-43, ADJUSTMENT, Front Hood Lock Assembly.>
- 4) Rotate the hood buffer to adjust lateral height.



D: DISPOSAL

For the disposal procedures of front hood damper stay, refer to the disposal procedures of rear gate damper stay. <Ref. to EB-24, REAR GATE DAMPER STAY, DISPOSAL, Rear Gate.>