



12. Roof Rail

A: REMOVAL


- 1) Remove the clips (A) and claws (B), and remove the roof rail cover front.

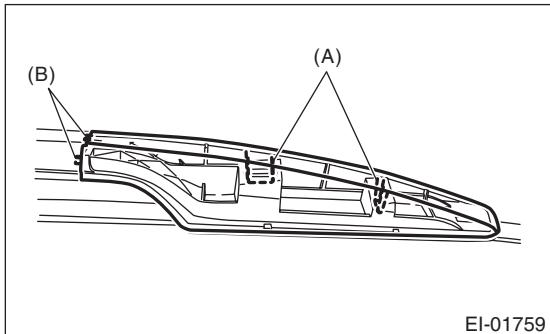

- 2) Remove the clips (A), and then remove the roof rail cover center.

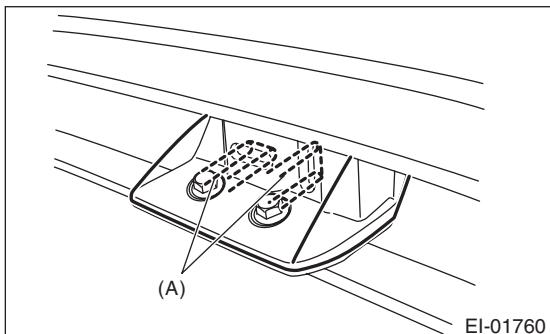

- 3) Remove the clips (A) and claws (B), and remove the roof rail cover rear.

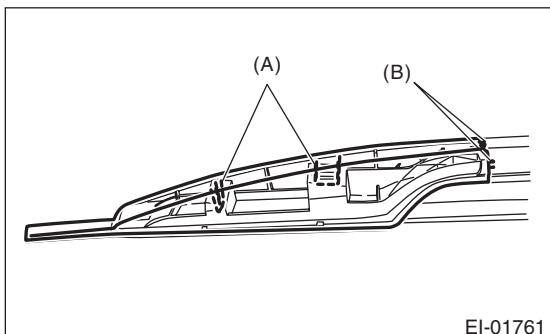

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

7.5 N·m (0.77 kgf·m, 5.53 ft-lb)