


21. Floor Mat

A: REMOVAL

1. FRONT FLOOR MAT


- 1) Remove the front seats. <Ref. to SE-7, REMOVAL, Front Seat.>
- 2) Remove the second row seats. <Ref. to SE-13, REMOVAL, Second Seat.>
- 3) Remove the console box. <Ref. to EI-40, REMOVAL, Console Box.>
- 4) Remove the instrument panel lower cover. <Ref. to EI-38, REMOVAL, Instrument Panel Lower Cover.>
- 5) Remove the glove box. <Ref. to EI-39, REMOVAL, Glove Box.>
- 6) Remove the following trims. <Ref. to EI-45, REMOVAL, Side Trim.>
 - Front door scuff plate
 - Rear door scuff plate
 - Front pillar lower trim
 - Center pillar lower trim
- 7) Remove the remote opener cover. <Ref. to SL-44, REMOVAL, Remote Openers.>
- 8) Remove the navigation unit. <Ref. to ET-23, REMOVAL, Navigation Body.>
- 9) Remove the clips, then remove the front floor mats.

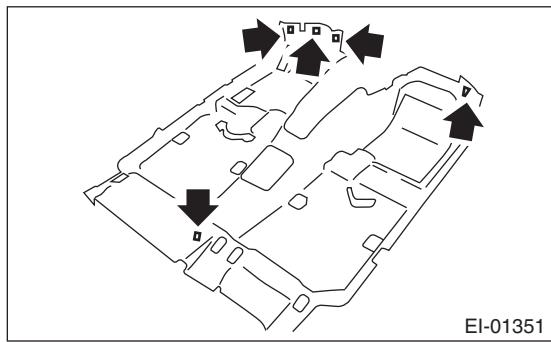

EI-01351

2. REAR FLOOR MAT

- 1) Remove the second row seats. <Ref. to SE-13, REMOVAL, Second Seat.>
- 2) Remove the third-row seats. (7 seater model) <Ref. to SE-19, REMOVAL, Third Seat.>
- 3) Remove the luggage box (front). (5 seater model)
- 4) Remove the rear quarter lower trim. <Ref. to EI-47, REMOVAL, Rear Quarter Trim.>
- 5) Remove the clips, then remove the rear floor mats.

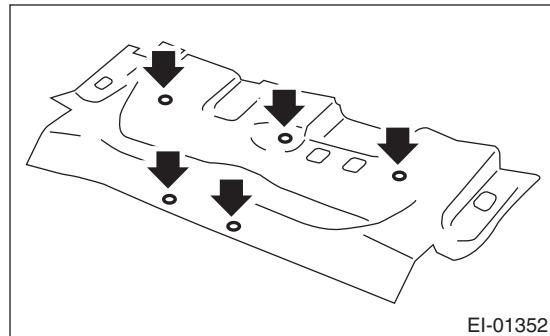

EI-01352

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

- Secure the mat firmly with hook and clip.
- Insert the mat edge firmly into the groove of side sill cover.