


## 26. Rear Gate Garnish

### A: REMOVAL

- 1) Remove the rear gate trim. <Ref. to EI-53, RE-MOVAL, Rear Gate Trim.>
- 2) Disconnect the connector of license plate light and rear camera.
- 3) Remove the nut from the back of the rear gate garnish.
- 4) Remove the rear gate garnish.

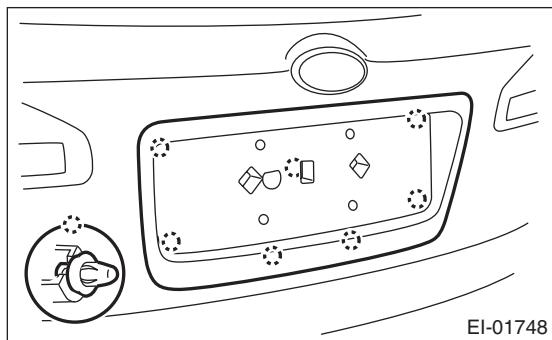

### B: INSTALLATION

Install in the reverse order of removal.

***Tightening torque:***

**4.5 N·m (0.46 kgf·m, 3.32 ft-lb)**