


4. Mud Guard


A: REMOVAL

- 1) Remove the wheels.
- 2) Loosen the screws and clips to remove mud guard.

- Front mud guard

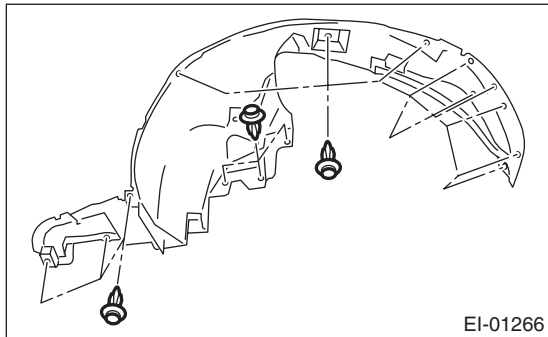

- Rear mud guard

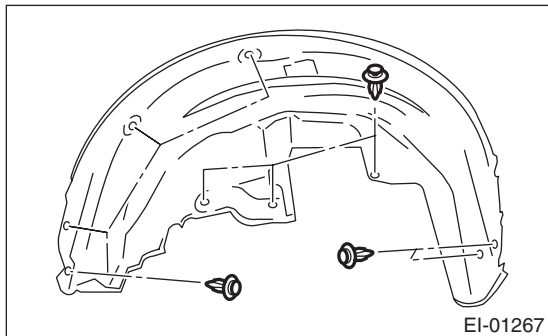

B: INSTALLATION

Install in the reverse order of removal.