


## 7. Rear Bumper


### A: REMOVAL

#### 1. REAR BUMPER FACE


- 1) Turn over the mud guard, and remove the clip (A) and (B) inside wheel house and in the lower side of bumper.

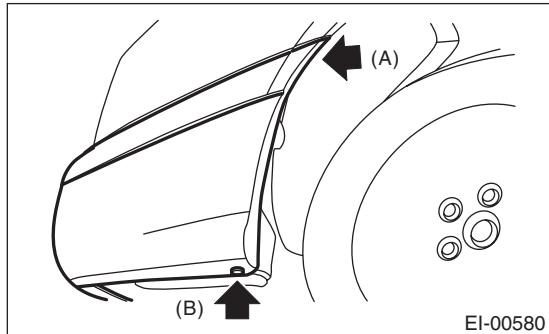

- 2) Remove the clips on the lower side of rear bumper.

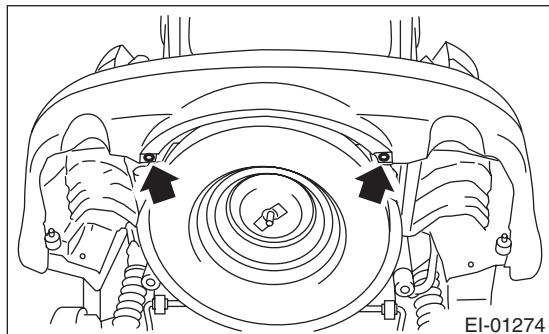

- 3) Remove the rear bumper from vehicle body.

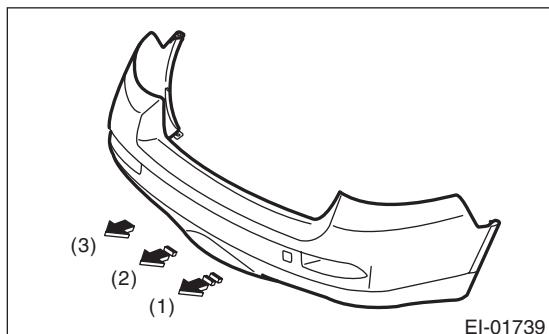

#### CAUTION:


Do not pull with a excessive force. Otherwise the bracket installation area may be damaged.

#### NOTE:

- Lifting the bumper face upward, and removing in the order of (B), (1)-(3) of the fender side, will make it easier to remove.
- When removing the bumper face from bracket, it is easier to remove from the end in order.
- 4) Remove the reflector or rear fog light.


### 2. REAR BUMPER BRACKET

- 1) Remove the rear bumper face from vehicle body.
- 2) Remove the corner and side bracket.

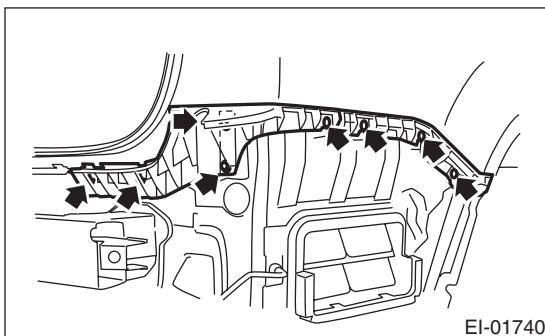

### 3. REAR BUMPER BEAM ASSEMBLY

- 1) Remove the rear bumper face.
- 2) Remove the energy absorber foam.
- 3) Remove the nuts, and remove the bumper beam assembly from vehicle body.

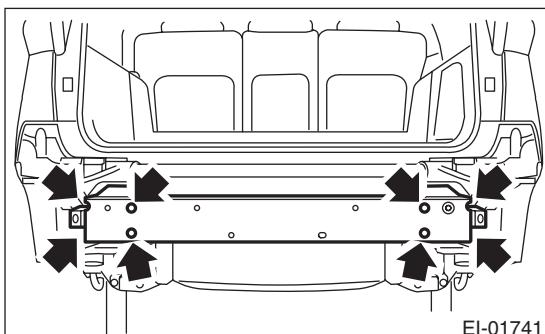

### B: INSTALLATION

Install in the reverse order of removal.

#### Tightening torque:

Refer to “COMPONENT” of “General Description”.

<Ref. to EI-5, REAR BUMPER, COMPONENT, General Description.>

### C: REPAIR

Refer to front bumper repair. <Ref. to EI-24, REPAIR, Front Bumper.>