

7. Scalp Cap


A: REPLACEMENT

CAUTION:

Do not remove caps such as scalp cap forcibly.


The lower hooks may be damaged.

- 1) Remove the outer mirror. <Ref. to GW-15, REPLACEMENT, Outer Mirror.>
- 2) Disengage the claws (A) from inside of the outer mirror, and remove the scalp cap.

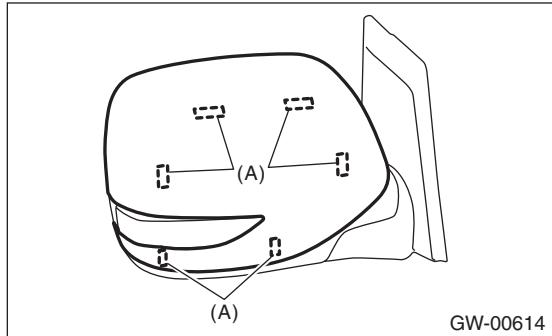

GW-00614

- 3) Disengage the claws (A) and (B) from inside of the outer mirror, and remove the mirror body cover.

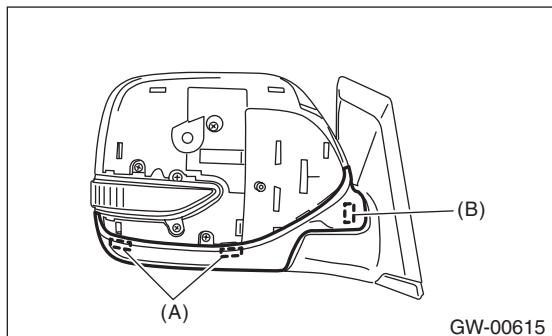

GW-00615

CAUTION:

Claw (B) cannot be disengaged from the inside of the outer mirror. When removing, be careful not to damage the parts.

- 4) Install the scalp cap and mirror body cover clips (A) securely.