


## 8. Outer Mirror Assembly

### A: REMOVAL

1) Remove the mirror gusset cover.

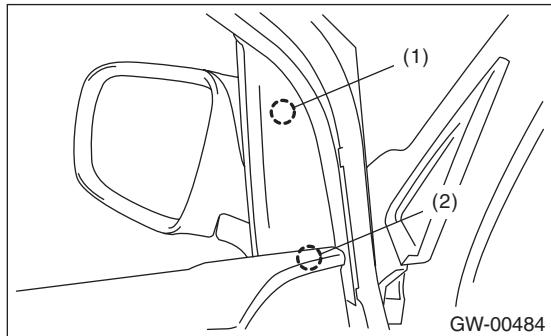


(1) Clip  
(2) Hook

2) Remove the door trim. <Ref. to EI-37, REMOV-AL, Door Trim.>


3) Disconnect the mirror connector.

4) Remove the screws to remove outer mirror assembly.

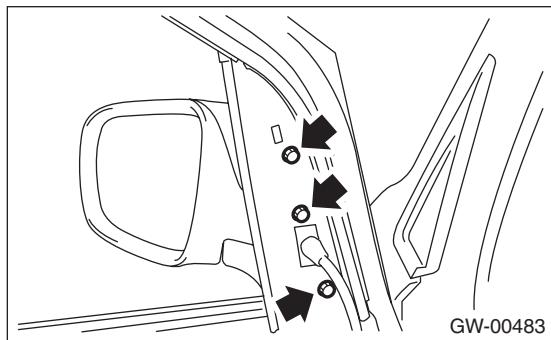

5) Remove the outer mirror assembly. (Model without door visor)


6) Using the upper part of the mirror assembly (A) as a supporting point, pull it upward while drawing the lower part. (Model with door visor)

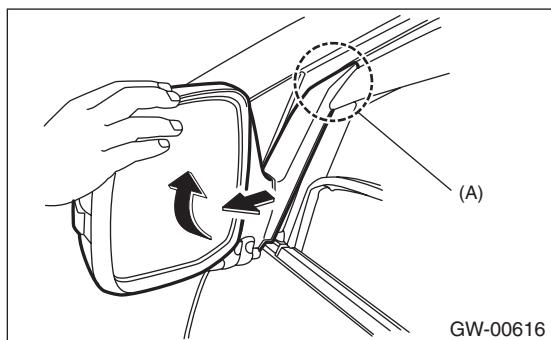

#### CAUTION:

- Do not remove forcibly, otherwise door visor may be damaged.
- Apply protective tape as necessary in order to avoid scratching the door visor and mirror assembly.

7) Remove the mirror assembly from the vehicle body by pulling it downward. (Model with door visor)

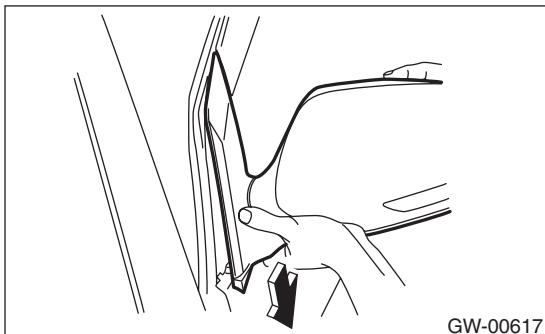


GW-00617

### B: INSTALLATION

Install in the reverse order of removal.

### C: INSPECTION

Check that the rearview mirror moves properly when the battery voltage is applied to terminals.

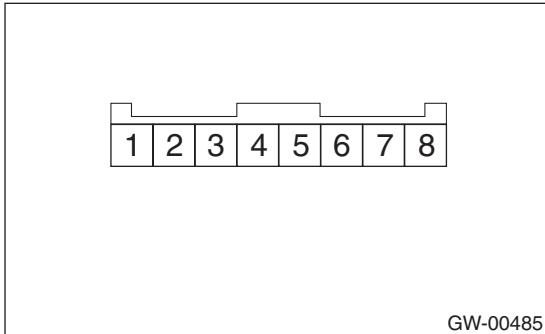

GW-00485

Mirror movement	Terminal No.
OFF	—
UP	5 (+) and 6 (-)
DOWN	6 (+) or 5 (-)
LEFT	8 (+) and 7 (-)
RIGHT	7 (+) or 8 (-)

Replace the outer mirror assembly if defective.