


### 13. Control Unit (Auto A/C Model)

#### A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the glove box. <Ref. to EI-39, REMOV-AL, Glove Box.>
- 3) Remove the screw, disconnect the connector and remove the control unit.

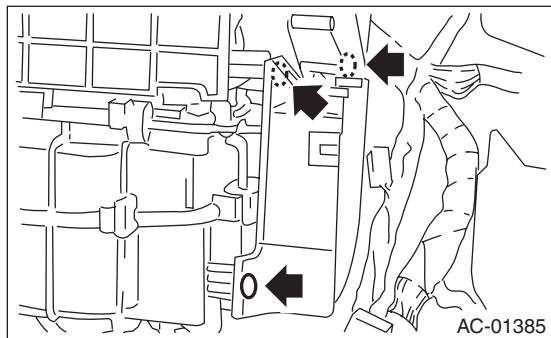

#### B: INSTALLATION

Install in the reverse order of removal.