
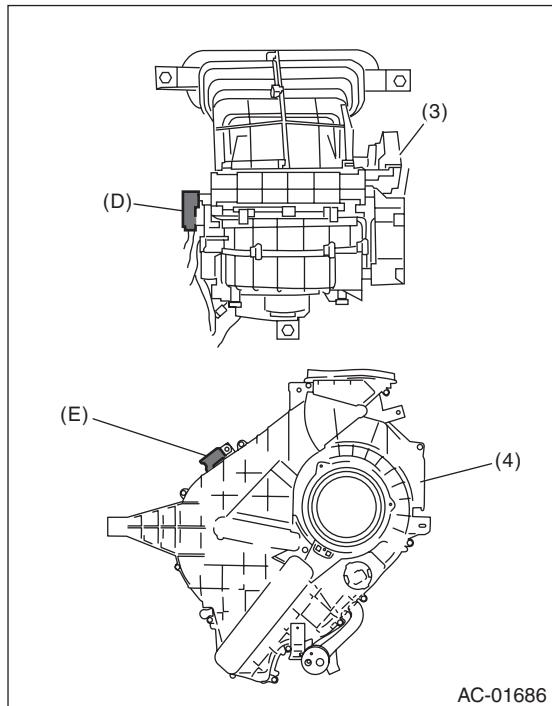


# Relay and Fuse

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

## 19. Relay and Fuse

### A: LOCATION

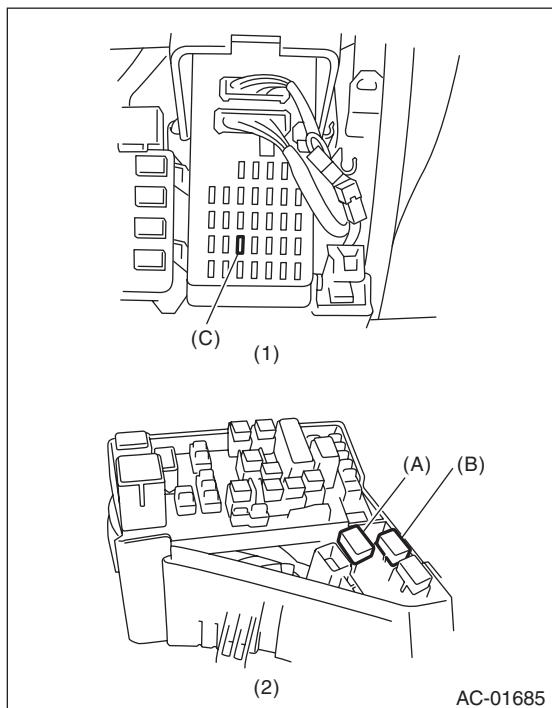

(3) Blower motor unit


(4) Rear cooler unit

(1) Joint box  
(2) Main fuse box

Main fan relay 1	(A)
A/C relay	(B)
A/C Fuse	(C)
Front blower relay	(D)
Rear blower relay	(E)

### B: INSPECTION


- A/C relay

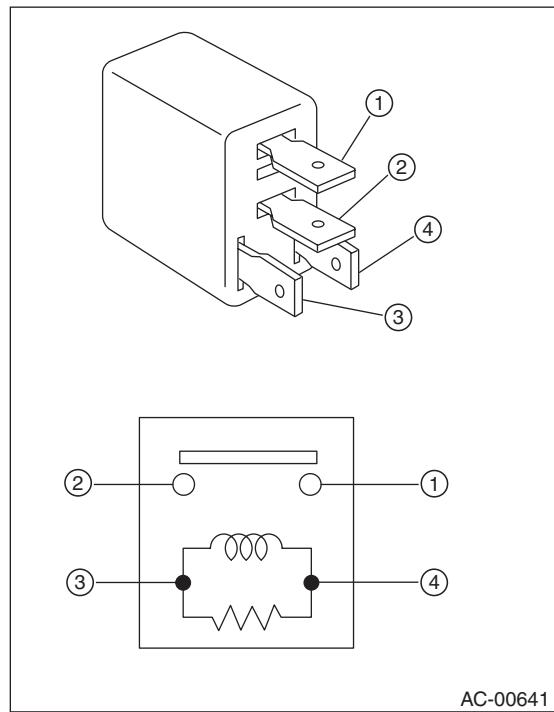

(3) — (4): Continuity exists

(1) — (2): Continuity does not exist


- Main fan relay 1, Front blower relay

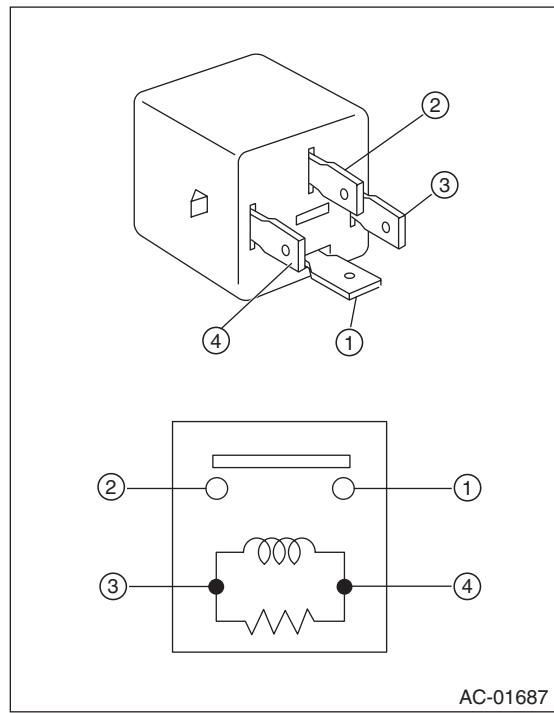

(3) — (4): Continuity exists

(1) — (2): Continuity does not exist

- Rear blower relay

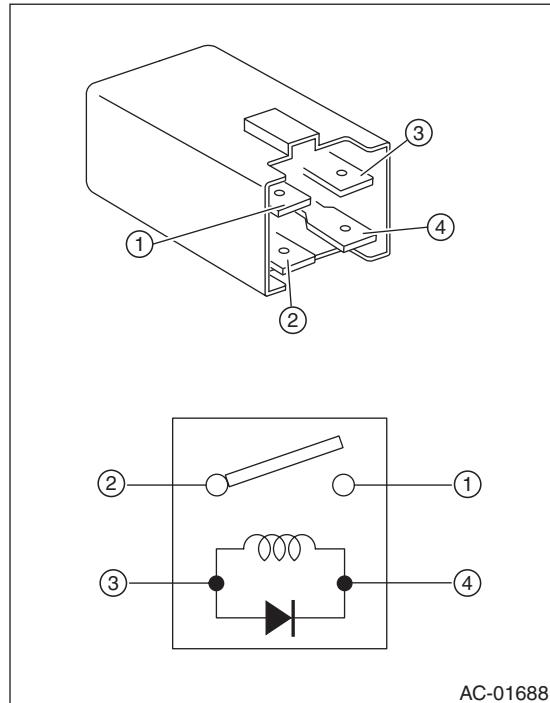

(3) — (4): Continuity exists

(1) — (2): Continuity does not exist

While applying battery voltage to the terminal between (3) and (4), check continuity between (1) and (2). If no continuity exists, replace the relay with a new part.