


### 23. Sunload Sensor (Auto A/C Model)

#### A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Disconnect the connector and remove the sun-load sensor.

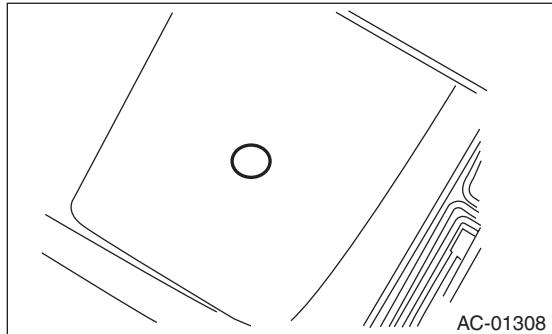

#### CAUTION:

Be careful not to damage the interior trims when removing the sensor.

#### B: INSTALLATION

Install in the reverse order of removal.

#### C: INSPECTION

<Ref. to AC(diag)-36, SUNLOAD SENSOR, Diagnostic Procedure for Sensors.>