

# Refrigerant Recovery Procedure

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

## 3. Refrigerant Recovery Procedure

### A: PROCEDURE

#### CAUTION:


- During operation, be sure to wear protective goggles and protective gloves.
- Connect the refrigerant recovery system with the manifold gauge set to discharge the refrigerant from the A/C system and recycle the gas.
- When recycling the discharged refrigerant, keep service cans on hand. Because the recovery rate with the recovery system is approx. 90%, service cans are necessary to charge the refrigerant.
- Follow the detailed operation procedure described in the operation manual attached to the refrigerant recovery system.

1) Perform the compressor oil return operation.

<Ref. to AC-28, PROCEDURE, Compressor Oil.>


2) Stop the engine.

3) Make sure the valves on low-/high-pressure sides of manifold gauge set are fully closed.

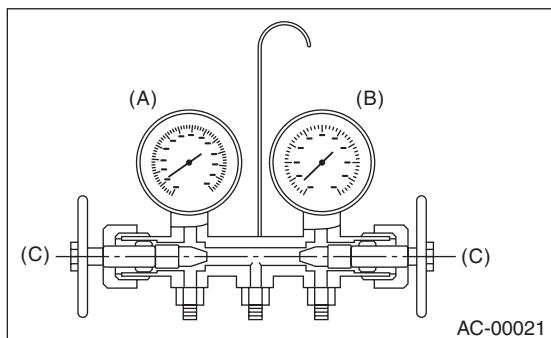

(A) Low-pressure gauge (Compound pressure gauge)  
(B) High-pressure gauge  
(C) Close

4) Install the low-/high-pressure hoses to the service ports on the low-/high-pressure sides of the vehicle respectively.

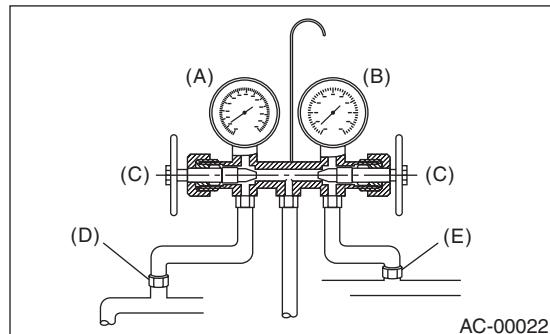

(A) Low-pressure gauge (Compound pressure gauge)  
(B) High-pressure gauge  
(C) Close  
(D) Low-pressure side service port  
(E) High-pressure side service port

5) Connect the center hose to the refrigerant recovery system.

6) Follow the operation manual to activate the refrigerant recovery system.