



## 11. Headlight Assembly

### A: REMOVAL


- 1) Disconnect the ground cable from the battery.
- 2) Remove the air intake duct.

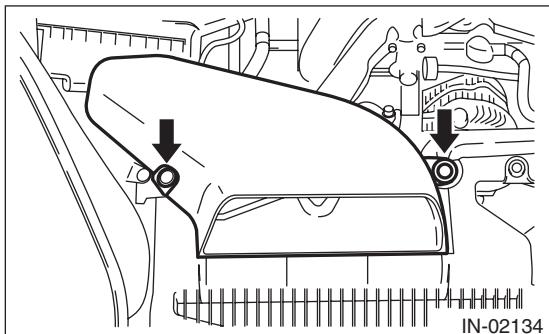

- 3) Remove the front bumper. <Ref. to EI-22, REMOVAL, Front Bumper.>
- 4) Remove the support plate.

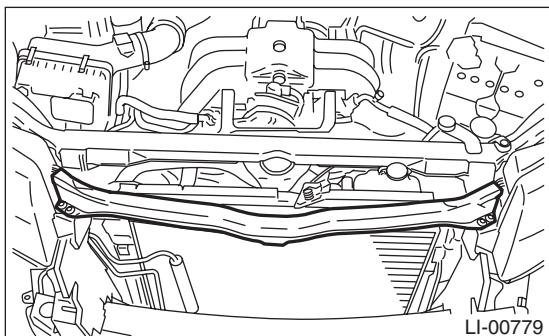

- 5) Remove the 5 bolts and then remove the headlight assembly.

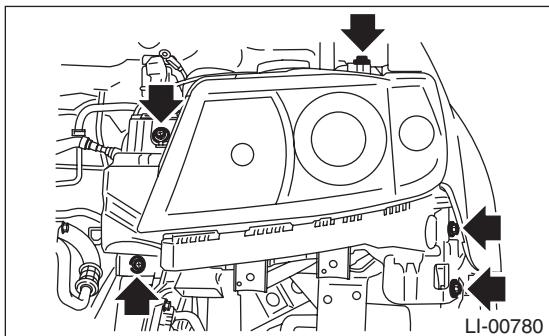

- 6) Disconnect the connector and then detach the rear headlight assembly.

### B: INSTALLATION

Install in the reverse order of removal.

### C: ADJUSTMENT

#### 1. HEADLIGHT AIMING

##### NOTE:

Aiming of this headlight can be adjusted only in the vertical direction. It cannot be adjusted in the horizontal direction.

##### CAUTION:

**Turn off the light before adjusting the headlight beam level. If it is necessary to inspect the beam level, do not turn on the light for more than two minutes.**

##### NOTE:

Before checking the headlight beam level, be sure of the following:

- Check the area around the headlight for any scratches, damage or other type of deformation.
- Make sure that the vehicle is parked on a level surface.
- Make sure that the inflation pressure of tires are correct.
- Check that the vehicle fuel tank is full.

- 1) Bounce the vehicle several times to normalize the suspension.
- 2) Make certain that someone is seated in the driver's seat.
- 3) Measure the heights of headlights and the distance between the centers of left and right LO beam bulbs.




# Headlight Assembly

## LIGHTING SYSTEM

4) Turn the headlights on and then adjust the low beam pattern.

**NOTE:**

Adjust the headlight beam level by turning the adjusting screw. The adjusting screw can be accessed from a direction described in the figure.

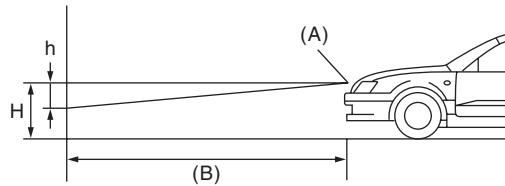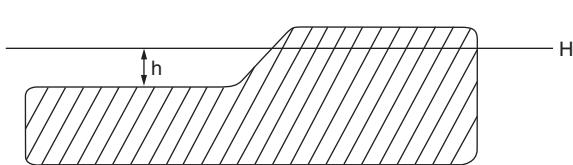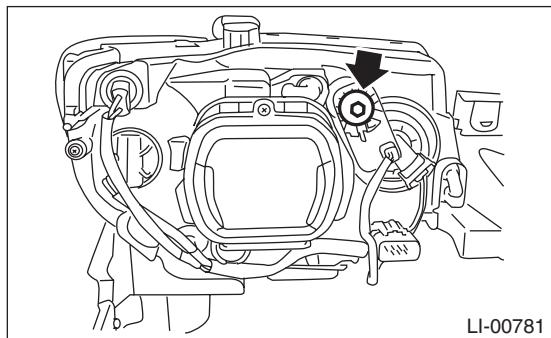

(A) Bulb center marking

(B) 3 m (10 ft)

h mm (in) at 3 m (10 ft)	21 (0.83)
--------------------------	-----------