


## 20. Tail/Stop Light Bulb

### A: REMOVAL


#### 1. COMBINATION LIGHT

- 1) Remove the rear combination light assembly.  
<Ref. to LI-24, REMOVAL, Rear Combination Light Assembly.>
- 2) Turn the socket and remove the bulb.

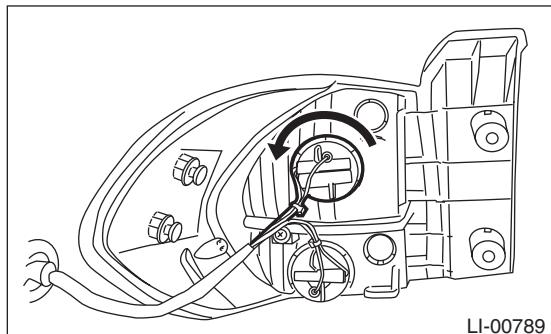

#### 2. FINISHER LIGHT

- 1) Remove the bulb inspection cover of the rear gate trim.
- 2) Turn the socket and remove the bulb.

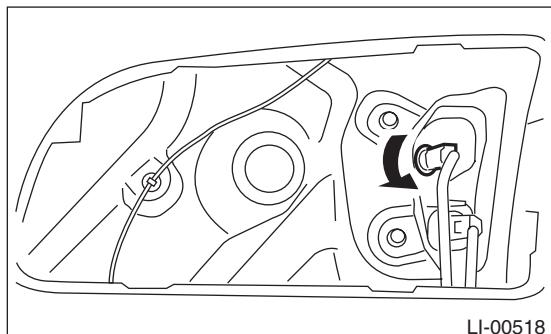

### B: INSTALLATION

Install in the reverse order of removal.

### C: INSPECTION

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATION, General Description.>
- 3) If NG, replace the bulb with a new one.