


## 33. Door Step Light

### A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the front door trim or the rear door trim.  
<Ref. to EI-37, REMOVAL, Door Trim.>
- 3) Disconnect the harness connector.
- 4) Remove the mounting screw from the rear side of trim and remove the door step light.

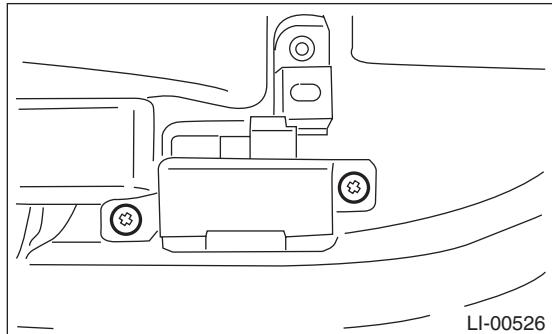

### B: INSTALLATION

Install in the reverse order of removal.

### C: INSPECTION

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification.  
<Ref. to LI-2, SPECIFICATION, General Description.>
- 3) If NG, replace the bulb with a new one.