


11. Rear Door Latch and Door Lock Actuator Assembly

A: REMOVAL

- 1) Raise the door glass to the top position.
- 2) Disconnect the ground cable from the battery.
- 3) Remove the rear door trim. <Ref. to EI-37, REMOVAL, Door Trim.>
- 4) Remove the cable from rear inner remote. <Ref. to SL-37, REMOVAL, Rear Inner Remote.>
- 5) Remove the sealing cover. <Ref. to EB-21, REMOVAL, Rear Sealing Cover.>
- 6) Remove the rear sash. <Ref. to GW-18, REMOVAL, Rear Regulator and Motor Assembly.>
- 7) Remove the three screws and one bolt.

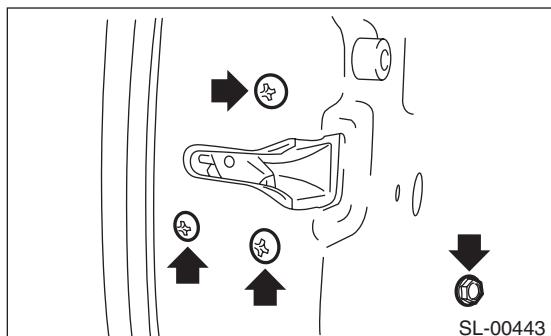

- 8) Disconnect the connectors, and then remove the rear door latch and door lock actuator assembly.

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Check the following items during the installation:

- Is the rod deformed?
- Does the cable have deformation such as snag?

C: INSPECTION

After the installation, inspect the following items:

- Do the lever, rod, and cable operate smoothly?
- Do the rear door outer handle, cable, rear door latch, and door lock operate smoothly?