


13. Rear Gate Release Switch

A: REMOVAL

- 1) Remove the rear gate trim. <Ref. to EI-53, REMOVAL, Rear Gate Trim.>
- 2) Disconnect the harness connector of the rear gate release switch.
- 3) Hold the rear gate release switch hook, and remove the rear gate release switch.

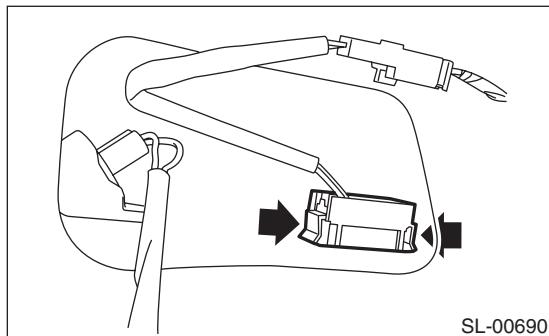

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Make sure the rear gate latch assembly works properly after installation.

C: INSPECTION

- 1) Disconnect the harness connector of the rear gate release switch.
- 2) Inspect the continuity between the rear gate release switch connector terminals.

Switch	Terminals	Standard
Open		Less than 1 Ω
Close	No. 1 and No. 2	1 M Ω or more

If NG, replace the rear gate release switch.