


15. Front Hood Lock Assembly

A: REMOVAL

- 1) Open the front hood.
- 2) Remove the engine front cover.
- 3) Remove the bolts, and then detach the front hood lock assembly.

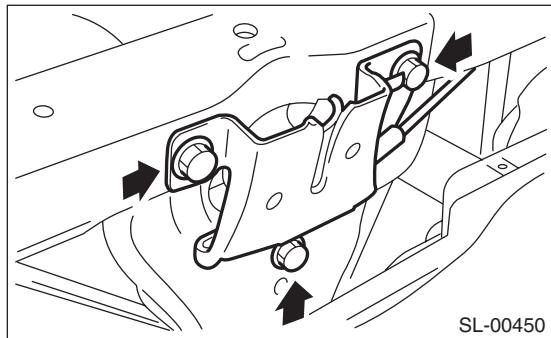

- 4) Remove the cable from lock assembly.

B: INSTALLATION

Install in the reverse order of removal.


NOTE:

Check the following items during the installation:

- Is the grease sufficiently applied to the movable parts?
- Does the cable work correctly after installation?

C: ADJUSTMENT

Loosen the bolt, and adjust the lock assembly while moving it up and down.

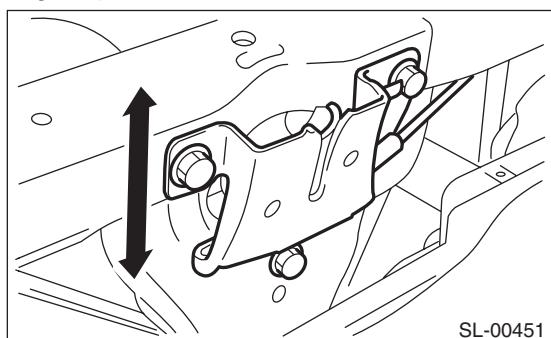

D: INSPECTION

After the installation, inspect the following items:

- Check the striker for deformation or abnormal wear.
- Check the safety lever for improper movement.
- Check other levers and springs for rust formation or unsmooth movement.