


7. Front Door Latch and Door Lock Actuator Assembly

A: REMOVAL

- 1) Raise the front door glass to the top position.
- 2) Disconnect the ground cable from the battery.
- 3) Remove the front door trim. <Ref. to EI-37, RE-MOVAL, Door Trim.>
- 4) Remove the cable from the front inner remote. <Ref. to SL-33, REMOVAL, Front Inner Remote.>
- 5) Remove the sealing cover. <Ref. to EB-18, RE-MOVAL, Front Sealing Cover.>
- 6) Remove the door sash. <Ref. to GW-10, RE-MOVAL, Front Door Glass.>
- 7) Remove the connection rod of the key cylinder lever. (Driver's side only)
- 8) Remove the three screws.

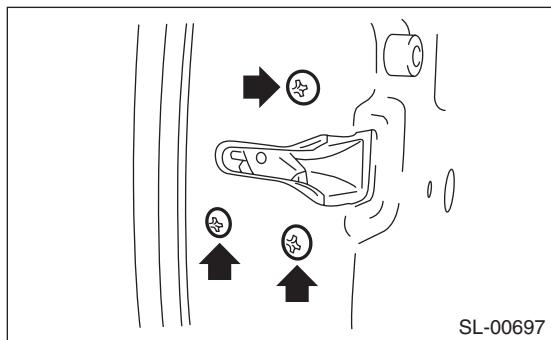

- 9) Remove the front door latch and actuator assembly, and disconnect the connector.

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Check the following items during the installation:

- Is the rod deformed?
- Does the cable have deformation such as snag?

C: INSPECTION

After the installation, inspect the following items:

- Do the lever, rod, and cable operate smoothly?
- Do the front door outer handle, cable, front door latch, and door lock operate smoothly?