


9. Rear Inner Remote

A: REMOVAL

- 1) Remove the rear door trim. <Ref. to EI-37, REMOVAL, Door Trim.>
- 2) Remove the screw, slide the inner remote to the rear, and remove from the panel.
- 3) Remove the cable (1).
- 4) Remove the cable end (2), and detach the inner remote handle.

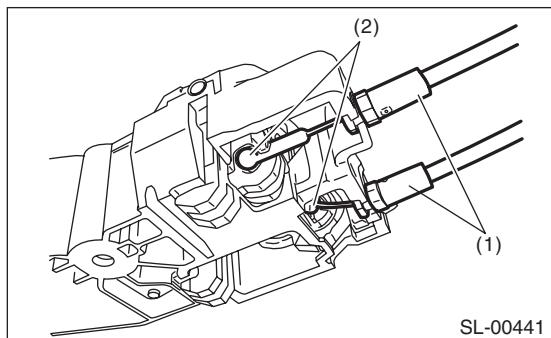

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Check the following items during the installation:

- Does the cable have deformation such as snag?
- Is the grease sufficiently applied to the cable connection?

When the amount of grease is small, apply additional grease before assembling the cable.

C: INSPECTION

After the installation, inspect the following items:

- Do the lever, cable, and lock knob operate smoothly?
- After the door is closed, does the inner remote operate properly?
- Check the child safety lock for correct operations.