


## 4. Sunroof Assembly

### A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the roof trim. <Ref. to EI-52, REMOVAL, Roof Trim.>
- 3) Disconnect the harness connector of sunroof motor.
- 4) Remove the glass lid. <Ref. to SR-5, REMOVAL, Glass Lid.>
- 5) Remove the drain tube from frame assembly.
- 6) Remove the bolts, and then detach the frame assembly.

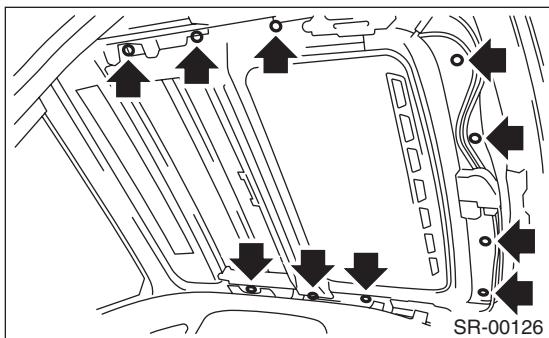

### B: INSTALLATION

Install in the reverse order of removal.

#### CAUTION:


**Be careful not to snag the harness.**

#### NOTE:

- Be sure to connect the harness connector.
- When installing the drain tube, insert it securely into drain pipe.

#### Length A:

**15 mm (0.59 in) or more**

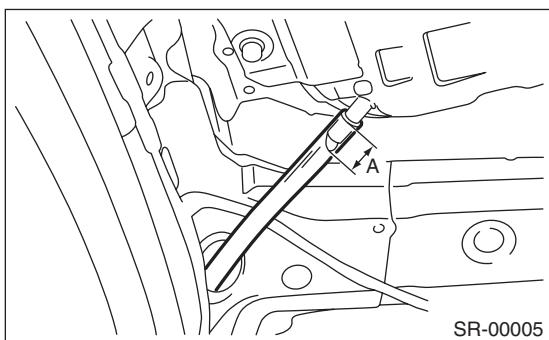

### C: DISASSEMBLY

- 1) Remove the sunroof motor. <Ref. to SR-8, REMOVAL, Sunroof Motor.>
- 2) Remove the sunshade. <Ref. to SR-11, REMOVAL, Sunshade.>

### D: ASSEMBLY

Assemble in the reverse order of disassembly.