

## List of Diagnostic Trouble Code (DTC)

BRAKE VACUUM CONTROL(BVC) (DIAGNOSTICS)

### 10. List of Diagnostic Trouble Code (DTC)

#### A: LIST

DTC	Display	Content of diagnosis	Reference
11	Sensor Output Out of Range	Brake vacuum sensor output error	<Ref. to BVC(diag)-17, DTC 11 SENSOR OUTPUT OUT OF RANGE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
12	Compare Error in Other Sensor	Error in comparison with other brake booster relative pressure	<Ref. to BVC(diag)-21, DTC 12 COMPARE ERROR IN OTHER SENSOR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
13	Pressure Sensor Output	Brake vacuum sensor seizure malfunction	<Ref. to BVC(diag)-26, DTC 13 PRESSURE SENSOR OUTPUT, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
21	Discrepancy in Relay (ON)	Drive does not match between brake vacuum pump relay and brake vacuum pump.	<Ref. to BVC(diag)-32, DTC 21 DISCREPANCY IN RELAYS (ON), Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
22	Discrepancy in Relay (OFF)	Drive does not match between brake vacuum pump relay and brake vacuum pump.	<Ref. to BVC(diag)-38, DTC 22 DISCREPANCY IN RELAYS (OFF), Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
23	Pump Continuous Work	Malfunction in brake vacuum pump continuous drive error	<Ref. to BVC(diag)-42, DTC 23 PUMP CONTINUOUS WORK, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>