

General Diagnostic Table

TIRE PRESSURE MONITORING SYSTEM (DIAGNOSTICS)

12.General Diagnostic Table

A: INSPECTION

| Symptom | | Problem parts |
|--|--|---|
| Tire pressure warning light illuminates. | Tire pressure is reduced. | <ul style="list-style-type: none">• Improper tire pressure adjustment• Punctured tire |
| Tire pressure warning light blinks 25 times and then illuminates. | Tire pressure monitoring system has malfunction. | <ul style="list-style-type: none">• Air pressure sensor malfunction• Air pressure sensor is out of battery.• Tire pressure monitoring control module is faulty.• Defective combination meter• Defective vehicle harness |
| Tire pressure is dropping but the warning light does not illuminate. | Tire pressure warning light does not illuminate. | <ul style="list-style-type: none">• Air pressure sensor malfunction• Tire pressure monitoring control module is faulty.• Defective combination meter |

General Diagnostic Table

TIRE PRESSURE MONITORING SYSTEM (DIAGNOSTICS)

DIFFERENTIALS

DI

| | Page |
|---|------|
| 1. General Description | 2 |
| 2. Differential Gear Oil | 14 |
| 3. Front Differential Assembly | 15 |
| 4. Rear Differential (VA-type) | 16 |
| 5. Rear Differential Front Oil Seal | 32 |
| 6. Rear Differential Side Oil Seal | 34 |
| 7. Rear Differential Front Member | 35 |
| 8. General Diagnostic Table | 36 |