

## EXHAUST


## 2. Front Exhaust Pipe

### A: REMOVAL


#### CAUTION:

Vehicle components are extremely hot after driving. Be wary of receiving burns from heated parts.

- 1) Set the vehicle on a lift.
- 2) Disconnect the ground cable from the battery.
- 3) Lift up the vehicle.
- 4) Remove the under cover.
- 5) Remove the front oxygen (A/F) sensor connector (A) and rear oxygen sensor connector (B).

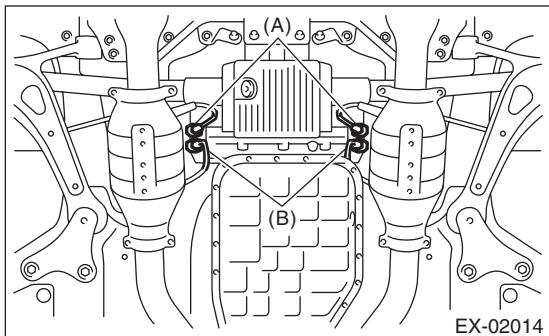


- 6) Separate the front exhaust pipe from rear exhaust pipe.

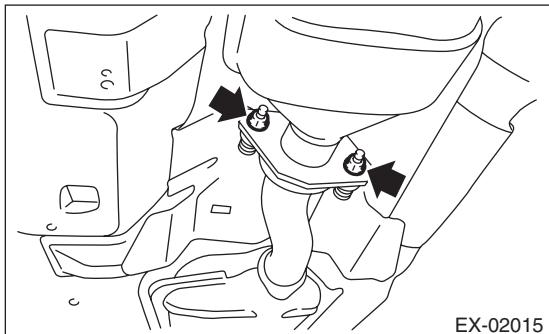


- 7) Remove the nuts which hold front exhaust pipe onto cylinder heads.

#### CAUTION:

Be careful not to pull down the front exhaust pipe assembly.

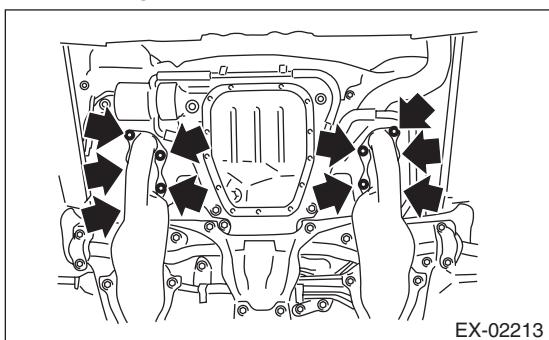


- 8) Remove the bolts which hold front exhaust pipe assembly to hanger bracket.

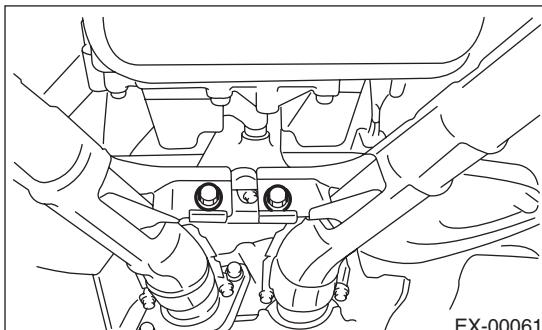

- 9) Remove the front exhaust pipe assembly from vehicle.

#### CAUTION:

- Be careful not to let the front exhaust pipe assembly fall off when removing, since it is very heavy.
- After removing the front exhaust pipe assembly, do not apply excessive pulling force on the rear exhaust pipe.
- 10) Separate the front exhaust pipe (RH) from front exhaust pipe assembly.

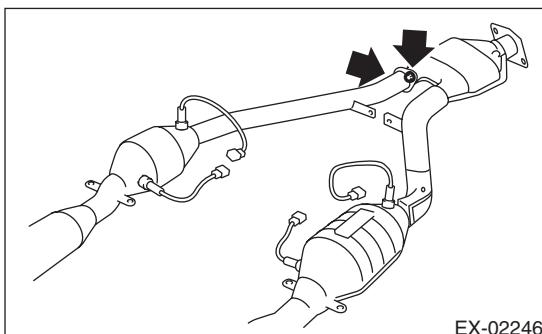

- 11) Remove the front oxygen (A/F) sensor and rear oxygen sensor. <Ref. to FU(H6DO)-33, REMOVAL, Front Oxygen (A/F) Sensor. > <Ref. to FU(H6DO)-35, REMOVAL, Rear Oxygen Sensor. >

**B: INSTALLATION**

1) Install the front oxygen (A/F) sensor and rear oxygen sensor. <Ref. to FU(H6DO)-33, INSTALLATION, Front Oxygen (A/F) Sensor.> <Ref. to FU(H6DO)-35, INSTALLATION, Rear Oxygen Sensor.>


2) Install the front exhaust pipe (RH) to front exhaust pipe (LH).

NOTE:

Use a new gasket.

**Tightening torque:**

**30 N·m (3.1 kgf·m, 22.1 ft-lb)**

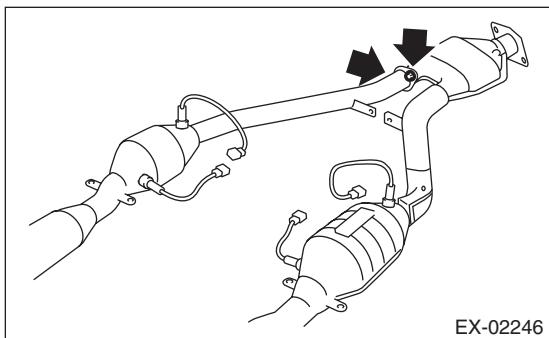


EX-02246

3) Install the front exhaust pipe assembly to vehicle.

4) Temporarily tighten the nuts to cylinder head which hold front exhaust pipe.


NOTE:

Use a new gasket.

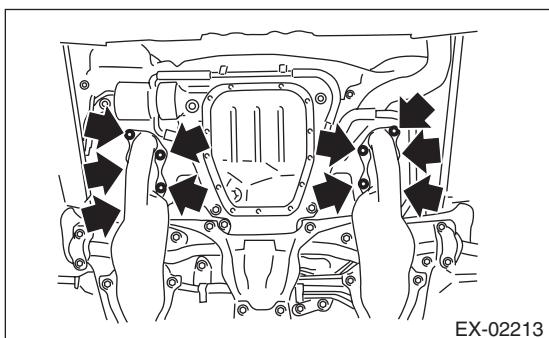

EX-02213

5) Temporarily tighten the bolts which hold front exhaust pipe assembly to hanger bracket.

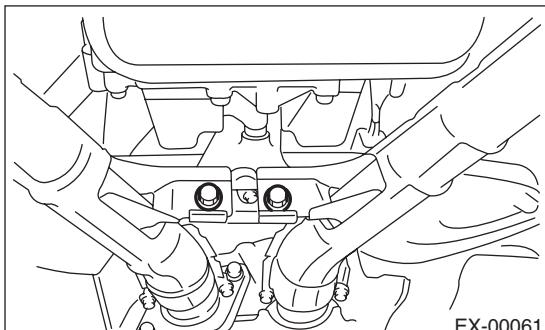

EX-00061


6) Tighten the bolts which install front exhaust pipe to rear exhaust pipe.

NOTE:

Use a new gasket.

**Tightening torque:**

**18 N·m (1.8 kgf·m, 13.3 ft-lb)**

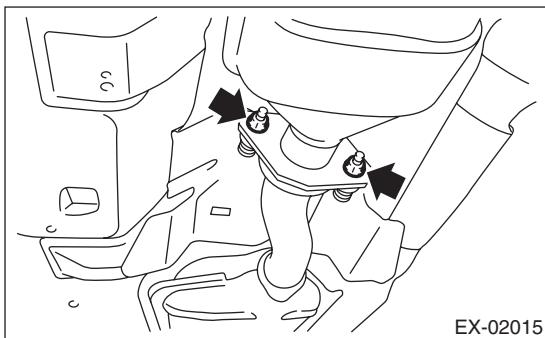


EX-02015

7) Tighten the bolts which hold front exhaust pipe assembly to hanger bracket.

**Tightening torque:**

**35 N·m (3.6 kgf·m, 25.8 ft-lb)**

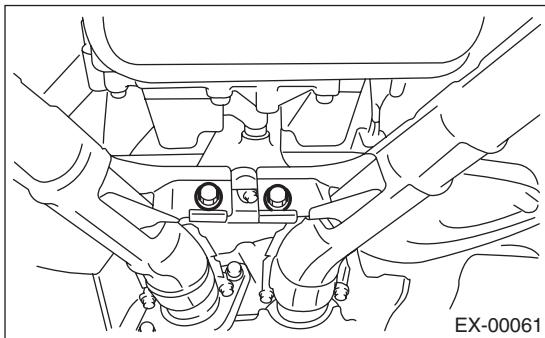

EX-00061


# Front Exhaust Pipe

## EXHAUST


- 8) Install the nuts to cylinder head which hold front exhaust pipe.

**Tightening torque:**

70 N·m (7.1 kgf·m, 51.6 ft-lb)

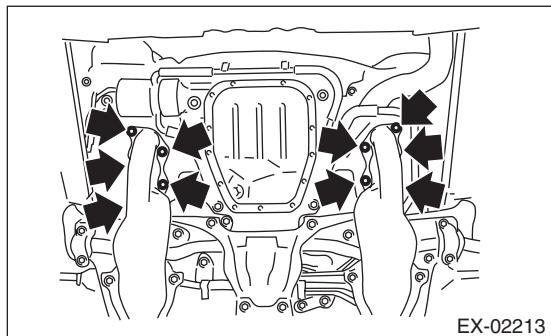

- 9) Install the under cover.
- 10) Connect the front oxygen (A/F) sensor connector (A) and rear oxygen sensor connector (B).

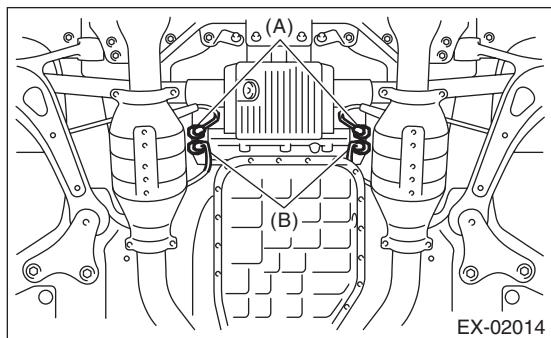

- 11) Lower the vehicle.
- 12) Connect the battery ground cable to the battery.

## C: INSPECTION

- 1) Check the connections and welds for exhaust leaks.
- 2) Make sure there are no holes or rusting.