


16. Rear Oxygen Sensor


A: REMOVAL

- 1) Set the vehicle on a lift.
- 2) Disconnect the ground cable from the battery.
- 3) Lift up the vehicle.
- 4) Disconnect the connector from rear oxygen sensor.

- LH side

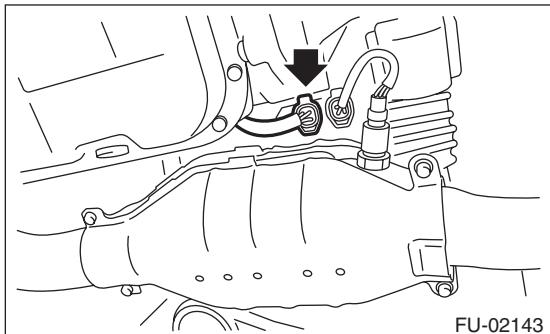

- RH side

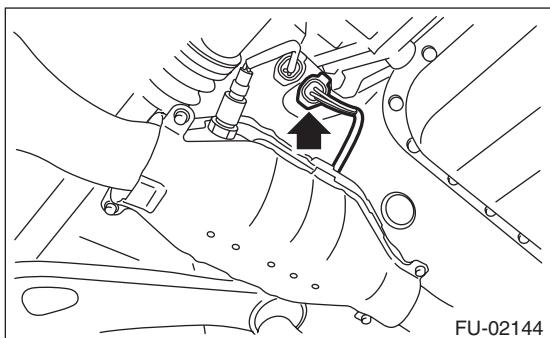


- 5) Remove the clip holding the harness.
- 6) Apply spray-type lubricant to the threaded portion of rear oxygen sensor, and leave it for one minute or more.
- 7) Remove the rear oxygen sensor.


CAUTION:

When removing the rear oxygen sensor, wait until exhaust pipe cools, otherwise it will damage the exhaust pipe.

- LH side

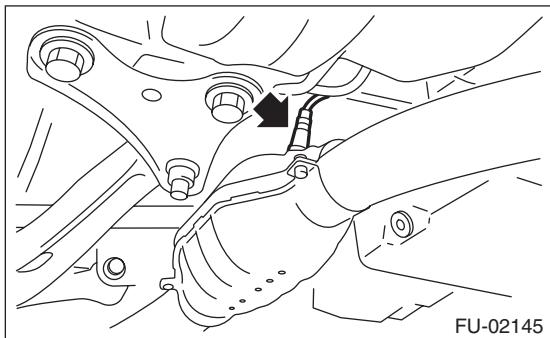

- RH side

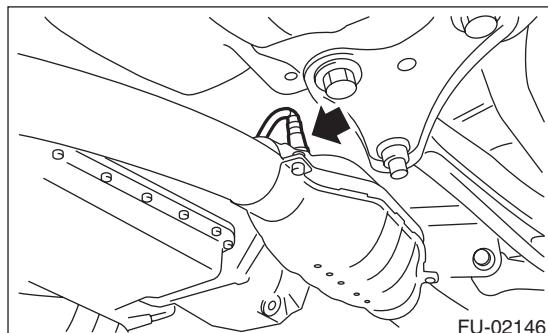

B: INSTALLATION

- 1) Before installing rear oxygen sensor, apply the anti-seize compound only to the threaded portion of rear oxygen sensor to make the next removal easier.

Anti-seize compound:

NEVER-SEEZ NSN, JET LUBE SS-30 or equivalent

CAUTION:


Never apply anti-seize compound to the protector of rear oxygen sensor.

- 2) Install the rear oxygen sensor.


Tightening torque:

21 N·m (2.1 kgf·m, 15.5 ft-lb)

- LH side

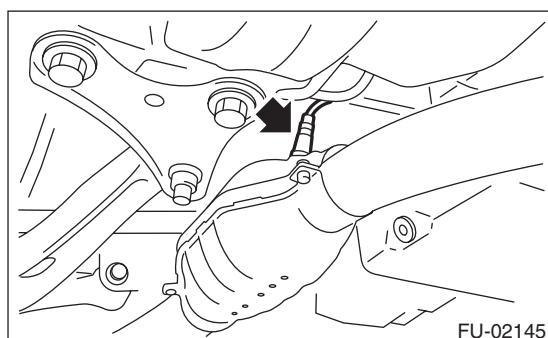

- RH side

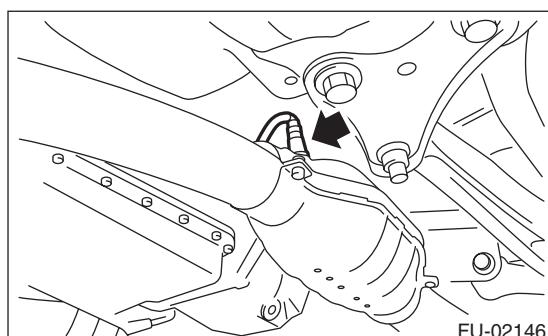


- 3) Hold the harness with clip.

Rear Oxygen Sensor


FUEL INJECTION (FUEL SYSTEMS)

4) Connect the connector to rear oxygen sensor.

- LH side

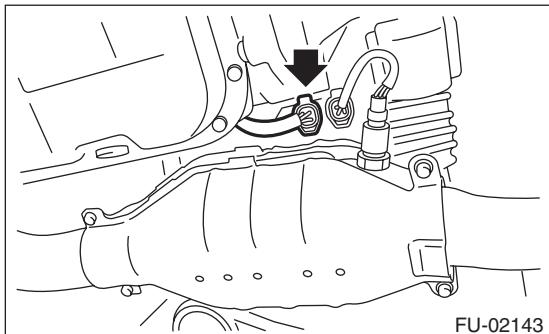

- RH side

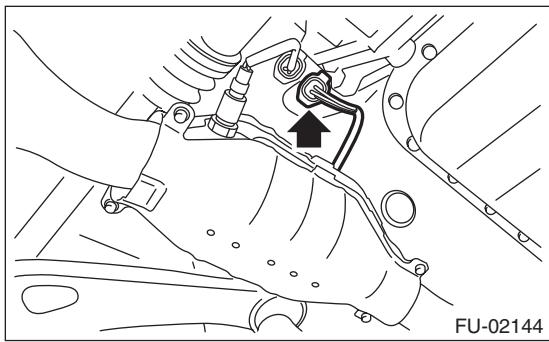

5) Lower the vehicle.

6) Connect the battery ground cable to the battery.