

## 22. Fuel

### A: PROCEDURE

#### 1. RELEASING OF FUEL PRESSURE


**WARNING:**

Place "NO FIRE" signs near the working area.

**CAUTION:**

Be careful not to spill fuel.

- 1) Remove the fuse of fuel pump from main fuse box.

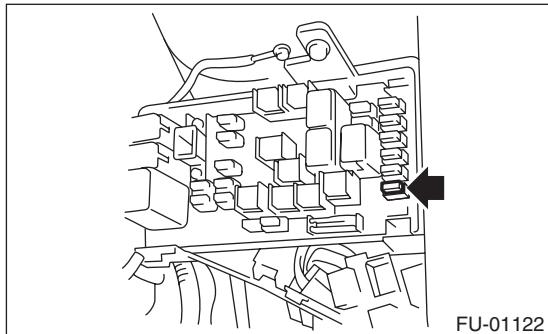

- 2) Start the engine and run until it stalls.
- 3) After the engine stalls, crank it for five more seconds.
- 4) Turn the ignition switch to OFF.

#### 2. DRAINING FUEL (WITH SUBARU SELECT MONITOR)

**WARNING:**

Place "NO FIRE" signs near the working area.

**CAUTION:**

Be careful not to spill fuel.

**NOTE:**

- If the fuel pump is not driven, refer to DRAINING FUEL (THROUGH THE FUEL FILLER HOSE).   
<Ref. to FU(H6DO)-42, DRAINING FUEL (THROUGH THE FUEL FILLER HOSE), PROCEDURE, Fuel.>
- Be careful not to let the battery run out.


- 1) Release the fuel pressure. <Ref. to FU(H6DO)-42, RELEASING OF FUEL PRESSURE, PROCEDURE, Fuel.>

- 2) Attach ST to the fuel delivery pipe and push ST in the direction of arrow mark to disconnect the fuel delivery hose.

ST 42099AE000 QUICK CONNECTOR RELEASE

**CAUTION:**

- Be careful not to spill fuel.
- Catch the fuel from hoses using a container or cloth.

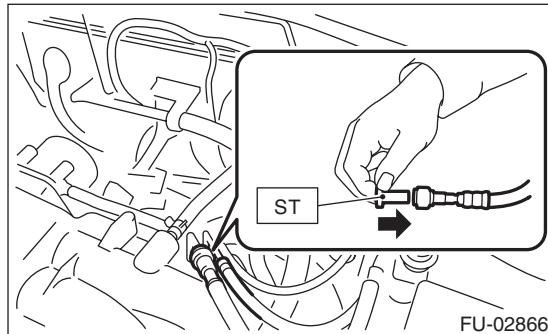

- 3) Connect ST to the fuel delivery hose.

ST 18471AA000 FUEL PIPE ADAPTER

- 4) Connect the gasoline proof hose to ST and put the end of the hose in the container.

5) Drive the fuel pump and drain the fuel using Subaru Select Monitor. <Ref. to EN(H6DO)(diag)-59, FUEL PUMP CONTROL (ON/OFF OPERATION), OPERATION, System Operation Check Mode.>

**CAUTION:**

Be careful not to spill fuel.

#### 3. DRAINING FUEL (THROUGH THE FUEL FILLER HOSE)

**WARNING:**

Place "NO OPEN FLAMES" signs near the working area.

**CAUTION:**


- Be careful not to spill fuel.
- The fuel may remain in the fuel filler pipe. Drain the fuel from the fuel filler pipe through the fill opening using the gasoline proof pump and the gasoline proof hose (ø10 or less) before the operation.

- 1) Set the vehicle on a lift.
- 2) Lift up the vehicle.
- 3) Remove the rear exhaust pipe and muffler. <Ref. to EX(H6DO)-7, REMOVAL, Rear Exhaust Pipe.> <Ref. to EX(H6DO)-9, REMOVAL, Muffler.>
- 4) Open the fuel filler flap lid, and remove the fuel filler cap.
- 5) Drain the fuel from the fuel filler pipe through the fill opening using the gasoline proof pump and the gasoline proof hose (ø10 or less) before the operation.

6) Disconnect the fuel filler hose from the fuel filler pipe.

**CAUTION:**

- Be careful not to spill fuel.
- Catch the fuel from hoses using a container or cloth.

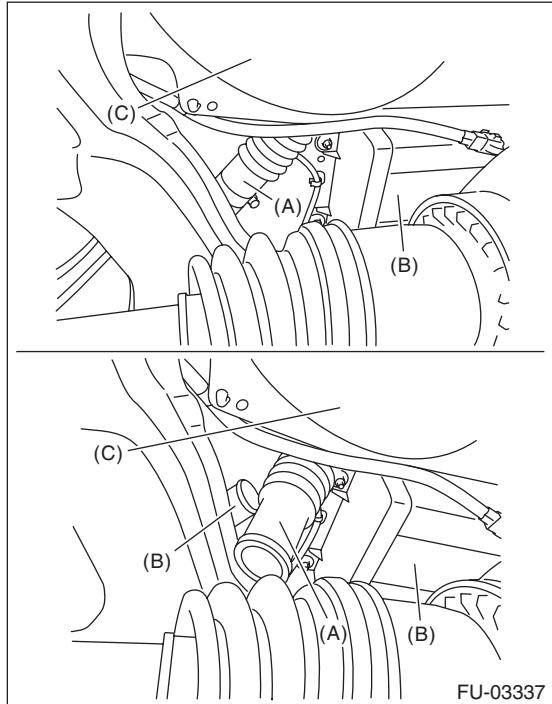

- (A) Fuel filler hose
- (B) Canister
- (C) Fuel tank
- (D) Fuel filler pipe

7) Set a container under the vehicle and insert the gasoline proof hose ( $\varnothing 10$  or less) through the fuel filler hose to drain fuel.

**CAUTION:**

Be careful not to spill fuel.