


## 2. Air Cleaner Element


### A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Disconnect the connector from mass air flow and intake air temperature sensor.

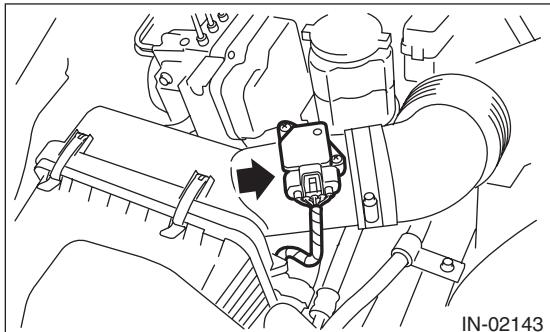


IN-02143

- 3) Loosen the clamp (A) which connect the air cleaner case (rear) to intake duct.
- 4) Remove the clip (B) on the upper side of air cleaner case.

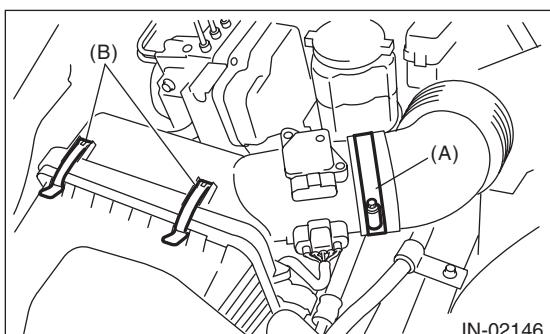

IN-02146

- 5) Pull the air cleaner case (rear) backward of the vehicle, and remove the air cleaner element.

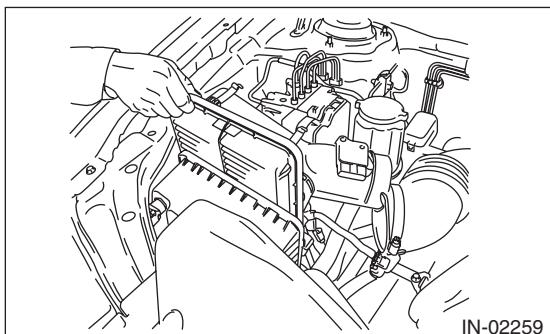

IN-02259

### B: INSTALLATION


Install in the reverse order of removal.

#### CAUTION:

When replacing the air cleaner element, use the Subaru genuine air cleaner element according to the engine type. Use of other air cleaner elements may do harm to engine performance.

#### NOTE:

Fasten with a clip after inserting the lower tab of case.

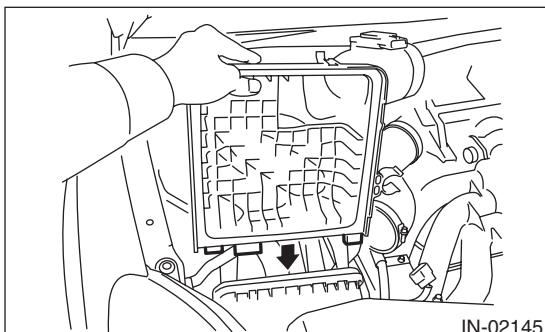

IN-02145

### C: INSPECTION

Replace if excessively damaged or dirty.