

## 6. Resonator Chamber

### A: REMOVAL

The resonator chamber and air cleaner case are integrated into one unit; therefore, refer to "Air Cleaner Case" for removal procedure. <Ref. to IN(H6DO)-5, REMOVAL, Air Cleaner Case.>

### B: INSTALLATION

The resonator chamber and air cleaner case are integrated into one unit; therefore, refer to "Air Cleaner Case" for installation procedure. <Ref. to IN(H6DO)-5, INSTALLATION, Air Cleaner Case.>

### C: INSPECTION

Check for cracks or loose connections.

# MECHANICAL

# *ME(H6DO)*

---

	Page
1. General Description .....	2
2. Compression .....	25
3. Idle Speed .....	26
4. Ignition Timing .....	27
5. Intake Manifold Vacuum .....	28
6. Engine Oil Pressure .....	29
7. Fuel Pressure .....	30
8. Valve Clearance .....	31
9. Engine Assembly .....	36
10. Engine Mounting .....	44
11. Preparation for Overhaul .....	45
12. V-belt .....	46
13. Crank Pulley .....	47
14. Chain Cover .....	48
15. Timing Chain Assembly .....	53
16. Cam Sprocket .....	73
17. Crank Sprocket .....	74
18. Camshaft .....	75
19. Cylinder Head .....	82
20. Cylinder Block .....	95
21. Oil Flow Control Solenoid Valve .....	118
22. Intake and Exhaust Valve .....	119
23. Piston .....	120
24. Connecting Rod .....	121
25. Crankshaft .....	122
26. Engine Trouble in General .....	123
27. Engine Noise .....	129