


### 29. Parking Pawl


#### A: REMOVAL

- 1) Remove the transmission assembly from vehicle body. <Ref. to 5AT-40, REMOVAL, Automatic Transmission Assembly.>
- 2) Remove the extension case. <Ref. to 5AT-67, REMOVAL, Extension Case.>
- 3) Remove the center differential carrier. <Ref. to 5AT-76, REMOVAL, Center Differential Carrier.>
- 4) Remove the front vehicle speed sensor. <Ref. to 5AT-52, REMOVAL, Front Vehicle Speed Sensor.>
- 5) Remove the parking support actuator.

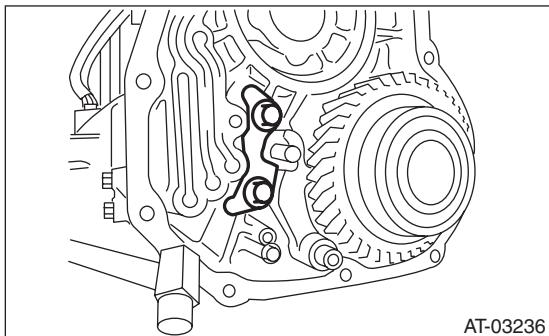

AT-03236


- 6) Remove the parking pawl, parking pawl shaft and return spring.

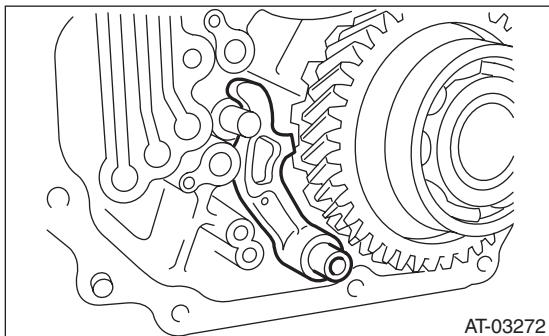

AT-03272

#### B: INSTALLATION

- 1) Set the transmission to the "N" range.
- 2) Install the parking pawl, parking pawl shaft and return spring.

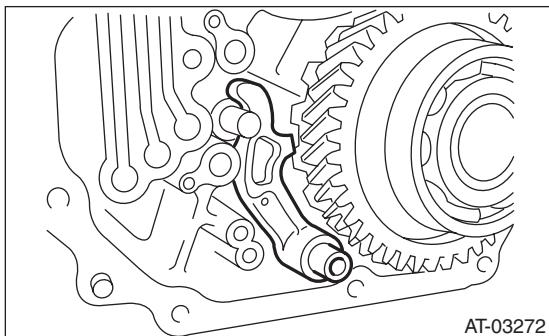


AT-03272

- 3) Install the parking support actuator.

#### Tightening torque:

$10\pm2\text{ N}\cdot\text{m}$  ( $1.0\pm0.2\text{ kgf}\cdot\text{m}$ ,  $7.4\pm1.5\text{ ft}\cdot\text{lb}$ )

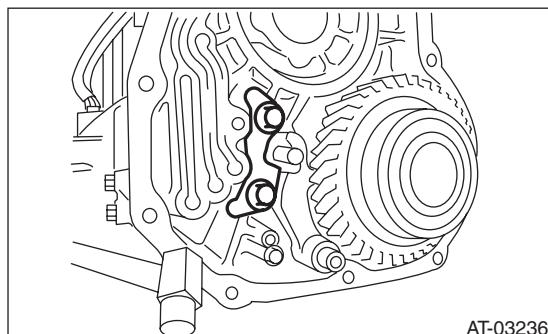

AT-03236

- 4) Using the ST, tighten the bolts which tightened in step 3) with specified angle.


#### Tightening angle:

$17\pm2^\circ$


ST 18854AA000 ANGLE GAUGE

#### NOTE:

Do not use extension as much as possible.

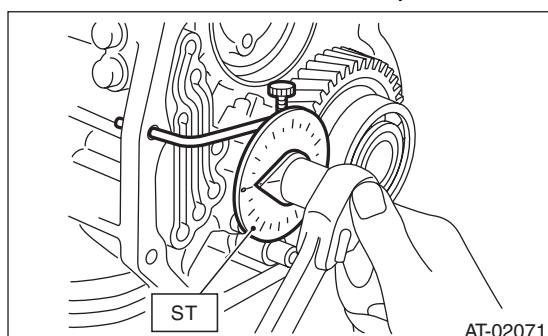


AT-02071

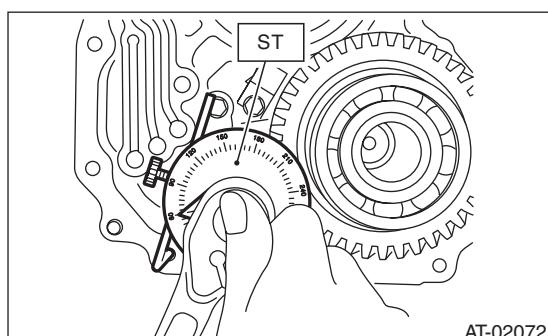

AT-02072

5) Make sure that the return spring is sticking out of the parking pole hole.

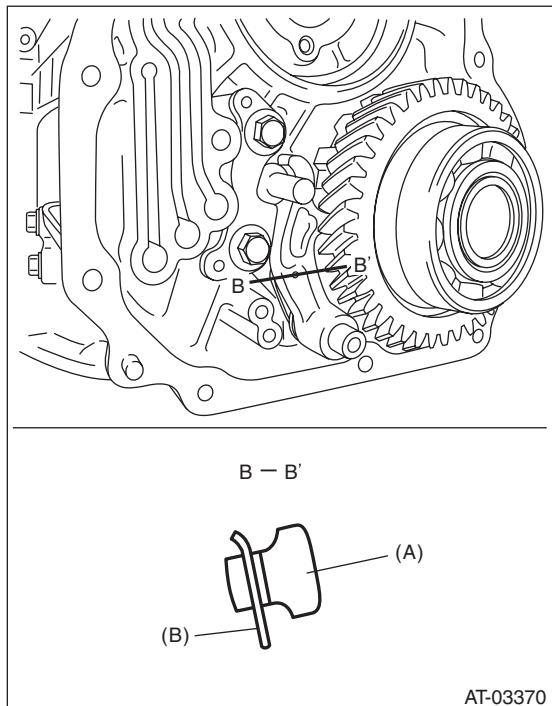

(A) Parking pawl

(B) Return spring

6) Install the front vehicle speed sensor. <Ref. to 5AT-53, INSTALLATION, Front Vehicle Speed Sensor.>

7) Install the center differential carrier. <Ref. to 5AT-76, INSTALLATION, Center Differential Carrier.>

8) Install the extension case. <Ref. to 5AT-67, INSTALLATION, Extension Case.>

9) Install the transmission assembly to the vehicle. <Ref. to 5AT-43, INSTALLATION, Automatic Transmission Assembly.>

## C: INSPECTION

Make sure that the tab of parking pawl on reduction driven gear is not worn or otherwise damaged.