

6. Subaru Select Monitor

A: OPERATION


1. READ DIAGNOSTIC TROUBLE CODE (DTC)

- 1) Prepare the Subaru Select Monitor kit. <Ref. to 5AT(diag)-6, PREPARATION TOOL, General Description.>
- 2) Prepare PC with Subaru Select Monitor installed.
- 3) Connect USB cable to SDI (Subaru Diagnostic Interface) and PC USB port (Subaru Select Monitor dedicated port).

NOTE:

Subaru Select Monitor dedicated port indicates USB port used when Subaru Select Monitor is installed.

- 4) Connect the diagnosis cable to SDI.
- 5) Connect SDI to data link connector located in the lower portion of the instrument panel (on the driver's side).

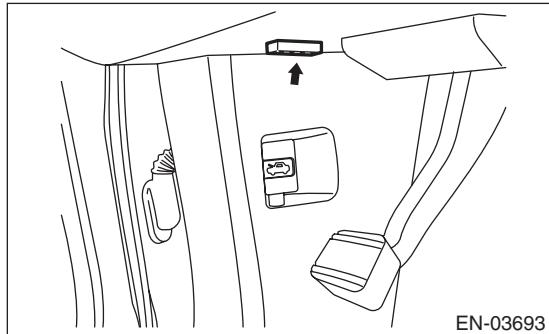

CAUTION:

Do not connect scan tools other than the Subaru Select Monitor.

- 6) Start the PC.
- 7) Turn the ignition switch to ON (engine OFF).
- 8) Run the "PC application for Subaru Select Monitor".
- 9) On the «Main Menu» display screen, select the {Each System Check}.
- 10) On the «System Selection Menu», select {Transmission}.
- 11) After transmission type information pops up, select [OK].
- 12) On the «Transmission Diagnosis», select {DTC Display}.
- 13) On the «Diagnostic Trouble Code» screen, select {Temporary Code} or {Memory Code}.

2. READ CURRENT DATA

- 1) On the «Main Menu» display screen, select the {Each System Check}.
- 2) On the «System Selection Menu», select {Transmission}.
- 3) After transmission type information pops up, select [OK].
- 4) On the «Transmission Diagnosis» screen, select {Current Data Display & Save}.
- 5) Select {Normal Measurement} on the «Current Data Display & Save» screen.

Subaru Select Monitor

AUTOMATIC TRANSMISSION (DIAGNOSTICS)

6) Using the scroll key, scroll the display screen up or down until the desired data is shown.

- A list of the support data is shown in the following table.

Item	Display	Unit of measure
Engine speed signal	Engine speed	rpm
Battery voltage	Battery Voltage	V
Accelerator pedal position sensor	Accel. Opening Angle	%
Front vehicle speed sensor signal	Front Wheel Speed	km/h
Gear position	Gear Position	—
Turbine speed sensor signal	Turbine Revolution Speed	rpm
Rear vehicle speed sensor signal	Rear Wheel Speed	km/h
Lateral G sensor	Lateral G Sensor	V
ATF temperature sensor signal	ATF Temp.	°C
Turbine speed sensor 1 signal	AT Turbine Speed 1	rpm
Turbine speed sensor 2 signal	AT Turbine Speed 2	rpm
High & low reverse clutch solenoid indicator current	H&LR/C Solenoid Current	A
Direct clutch solenoid indicator current	D/C Solenoid Current	A
Front brake solenoid indicator current	F/B Solenoid Current	A
Input clutch solenoid indicator current	I/C Solenoid Current	A
Line pressure solenoid indicator current	P/L Solenoid Current	A
Lock-up solenoid indicator current	L/U Solenoid Current	A
Transfer solenoid indicator current	4WD Sol. Current	A
High & low reverse clutch solenoid target oil pressure	H&LR/C Solenoid Pressure	kPa
Direct clutch solenoid target oil pressure	D/C Solenoid Pressure	kPa
Front brake solenoid target oil pressure	F/B Solenoid Pressure	kPa
Input clutch solenoid target oil pressure	I/C Solenoid Pressure	kPa
Line pressure solenoid target oil pressure	P/L Solenoid Pressure	kPa
Lock-up solenoid target oil pressure	L/U Solenoid Pressure	kPa
Transfer solenoid target oil pressure	4WD Solenoid Pressure	kPa
Ignition switch	Ignition switch	ON Input or OFF Input
Tip signal	Tiptronic Mode Switch	ON or OFF
Cruise control ON signal	Cruise Control Signal	ON or OFF
Tip down shift signal	Down Switch	ON or OFF
Stop light switch signal	Stop Light Switch	ON or OFF
Tip up shift signal	Up Switch	ON or OFF
Drive range signal	D Range	ON or OFF
Reverse range signal	R Range	ON or OFF
Diagnosis light output signal	Diagnosis Lamp	ON or OFF
ATF temperature light signal	ATF Temperature Lamp	ON or OFF
Parking range signal	P range	ON or OFF
P/N range output signal	P/N Signal	ON or OFF
Neutral range signal	N range	ON or OFF
Inhibitor switch 1 input signal	Inhibitor SW1	High or Low
Inhibitor switch 2 input signal	Inhibitor SW2	High or Low
Inhibitor switch 3 input signal	Inhibitor SW3	High or Low
Inhibitor switch 4 input signal	Inhibitor SW4	High or Low
Backup light relay output signal	Back-up light relay	ON or OFF
High & low reverse clutch oil pressure switch input signal	H&LR/C Fluid Pressure	ON or OFF
Direct clutch oil pressure switch input signal	D/C Fluid Pressure	ON or OFF
Front brake oil pressure switch input signal	Fr/B Oil Pressure SW	ON or OFF
Input clutch oil pressure switch input signal	I/C Fluid Pressure	ON or OFF
Forward brake indicator current	Fwd/B Solenoid Current	A
Forward brake solenoid input signal	Fwd/B Solenoid Pressure	kPa
Forward brake oil pressure switch input signal	Fwd/B Fluid Pressure	ON or OFF

NOTE:

For details concerning the operation procedure, refer to the «PC application for Subaru Select Monitor».

3. CLEAR MEMORY MODE

- 1) Check that the select lever is in “P” range.
- 2) On the «Main Menu» display screen, select the {Each System Check}.
- 3) On the «System Selection Menu», select {Transmission}.
- 4) After transmission type information pops up, select [OK].
- 5) On the «Transmission Diagnosis», select {Clear Memory}.
- 6) When the “Done. Turn ignition switch to OFF” pops up, select [OK].
- 7) Turn Subaru Select Monitor and ignition switch to OFF. To turn the ignition switch to ON again, wait for more than 10 seconds.

NOTE:

- To clear the previous DTC, use {Clear Memory}, and to clear the learned value, use {Clear Memory 2}.
- For details concerning the operation procedure, refer to the «PC application for Subaru Select Monitor».