


## 5. Passenger's Airbag Module

### A: REMOVAL


#### CAUTION:

Refer to "CAUTION" of "General Description" before handling the airbag module. <Ref. to AB-4, CAUTION, General Description.>

- 1) Turn the ignition switch to OFF.
- 2) Disconnect the ground cable from battery and wait for at least 20 seconds before starting work.
- 3) Remove the glove box. <Ref. to EI-38, REMOVAL, Glove Box.>
- 4) Remove the mounting bolts of the passenger's side airbag module.

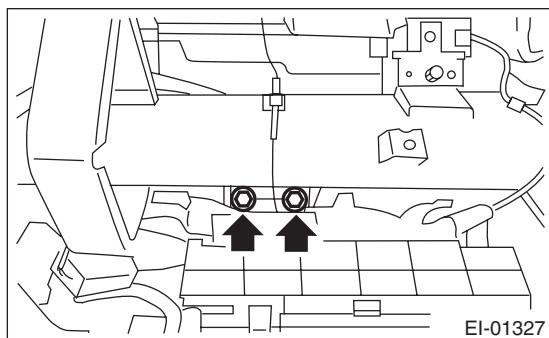

- 5) Remove the instrument panel upper. <Ref. to EI-41, INSTRUMENT PANEL UPPER, REMOVAL, Instrument Panel Assembly.>
- 6) Remove the screws, and remove the passenger's airbag module.

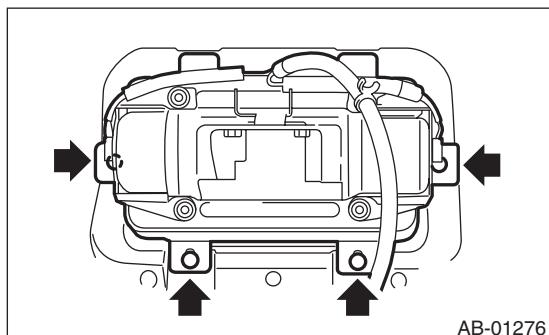

- 7) Refer to "CAUTION" for handling a removed airbag module. <Ref. to AB-4, CAUTION, General Description.>

### B: INSTALLATION

#### CAUTION:

Refer to "CAUTION" of "General Description" before handling the airbag module. <Ref. to AB-4, CAUTION, General Description.>

Install in the reverse order of removal.

#### *Tightening torque:*

7.4 N·m (0.75 kgf·m, 5.5 ft-lb)

### C: INSPECTION

#### CAUTION:

Refer to "CAUTION" of "General Description" before handling the airbag module. <Ref. to AB-4, CAUTION, General Description.>

Check for the following, and replace the damaged parts with new parts.

- Airbag module, harness, connector and mounting bracket are damaged. <Ref. to AB-12, PASSENGER'S AIRBAG MODULE, INSPECTION, Inspection Locations After a Collision.>