

10. Clear Memory Mode

A: OPERATION

Clear the memory in the following steps after the malfunction is repaired.

For details concerning DTC clear operation, refer to "Subaru Select Monitor". <Ref. to AB(diag)-24, Subaru Select Monitor.>