

## 7. Inhibitor Switch

### A: NOTE

Inhibitor switch cannot be removed and checked, because the inhibitor switch is installed on control valve assembly.

When a malfunction occurs, refer to 5AT (diag) section. <Ref. to 5AT(diag)-33, DTC P0705 TRANSMISSION RANGE SENSOR CIRCUIT (PRNDL INPUT), Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

## **Inhibitor Switch**

CRUISE CONTROL SYSTEM

---

# CRUISE CONTROL SYSTEM (DIAGNOSTICS)

# CC(*diag*)

---

	Page
1. Basic Diagnostic Procedure .....	2
2. General Description .....	4
3. Electrical Component Location .....	5
4. Engine Control Module (ECM) I/O Signal .....	6
5. Subaru Select Monitor .....	7
6. Diagnostics with Phenomenon .....	9
7. List of Cancel Code .....	11
8. Diagnostic Procedure with Cancel Code .....	13