


## 15. Noise Suppressor

### A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the rear gate trim. <Ref. to EI-52, REMOVAL, Rear Gate Trim.>
- 3) Disconnect harness connector from noise suppressor.
- 4) Remove the screws and detach the noise suppressor.

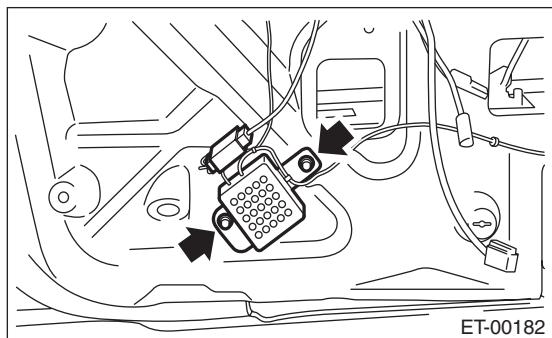

### B: INSTALLATION

Install in the reverse order of removal.