


19. GPS Antenna

A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the combination meter. <Ref. to IDI-12, REMOVAL, Combination Meter.>
- 3) Remove the audio. <Ref. to ET-13, REMOVAL, Audio.>
- 4) Remove the navigation display. <Ref. to ET-24, REMOVAL, Navigation Display.>
- 5) Remove the screw to remove the GPS bracket.

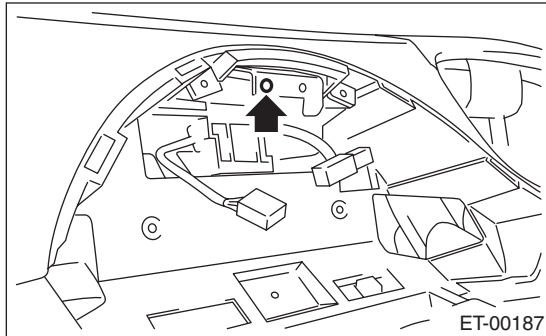

- 6) Remove the GPS antenna cord connector from the steering support beam stay (on the driver's side).

B: INSTALLATION

Install in the reverse order of removal.