


## 21. Rearview Camera Control Unit

### A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the left rear quarter lower trim. <Ref. to EI-46, REMOVAL, Rear Quarter Trim.>
- 3) Remove the nut, disconnect the connector and remove the control unit.

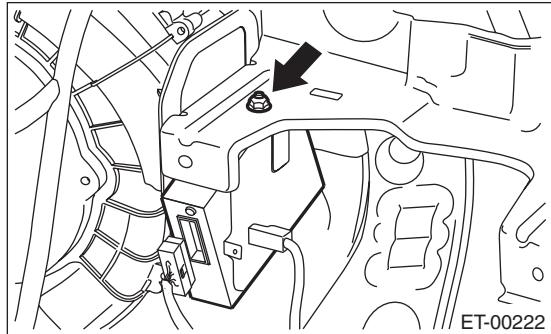

### B: INSTALLATION

Install in the reverse order of removal.

#### NOTE:

Make sure the maker position of the rear view camera after installation. <Ref. to ET-6, ADJUSTMENT, Rearview Camera System.>