

## 5. Multi-function Display (MFD) System

### A: WIRING DIAGRAM

<Ref. to WI-125, WIRING DIAGRAM, Multi-function Display (MFD) System.>

### B: INSPECTION

| Symptom  | Repair order   |
|--|--|
| No power coming in.<br>• Light does not illuminate.<br>• Display does not come on. | 1. Check the fuse and power supply for the display.<br>2. Check the ground circuit of the display.<br>3. Remove the display to repair. |
| A specific light or display does not come on.                                      | 1. Check the display.<br>2. Check the output circuit between unit and display.   |

### 1. MFD ERROR DISPLAY AND FAULT CONTENT

| Display contents | Fault cause  |
|------------------|--|
| CHECK_DISC       | <ul style="list-style-type: none"><li>During playback, it was not possible to read data from the CD due to scratches on the CD, etc.</li><li>Disc inserted upside-down, cannot detect disc.</li><li>Because of a focus error, cannot read disc.</li><li>An error occurred in the decoder section.</li><li>A problem occurred in the internal circuit during playback due to high temperature, etc.</li></ul> |
| MECHA_ERROR      | <ul style="list-style-type: none"><li>During disc loading, a problem occurred in the traverse drive.</li><li>Operation became impossible during disc change, loading, or eject.</li></ul>  |
| NO_FILE          | <ul style="list-style-type: none"><li>After disc read operation is completed, the number of files was 0</li><li>A disc with no data was inserted.</li></ul>  |
|                  | <ul style="list-style-type: none"><li>Disc is dirty, or is upside down.</li><li>Nothing is recorded.</li><li>Is not an audio disc.</li><li>There are scratches on the disk.</li><li>A disc that cannot be played back was used.</li></ul>  |
|                  | A mechanical error/operational error of some sort occurred.  |
|                  | No disc is inserted.   |

#### NOTE:

When the above errors are displayed, check the disc, and if no problems can be found, repair or replace the unit.