


General Description

EXTERIOR/INTERIOR TRIM

1. General Description

A: COMPONENT

1. UNDER COVER

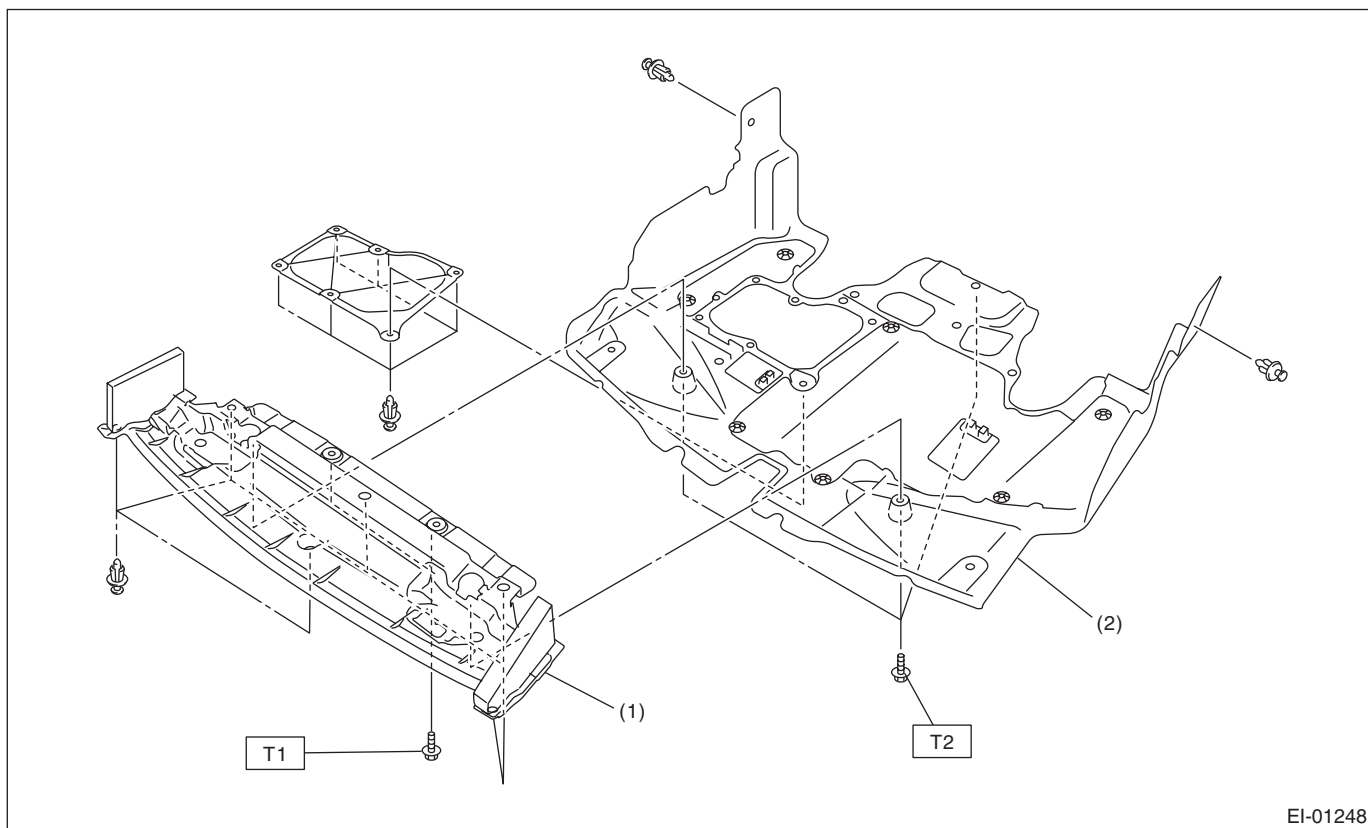

(1) Front lower cover


(2) Under cover

Tightening torque:N-m (kgf-m, ft-lb)

T1: 7.5 (0.76, 5.5)

T2: 17.5 (1.78, 12.7)

2. UNDER PROTECTOR

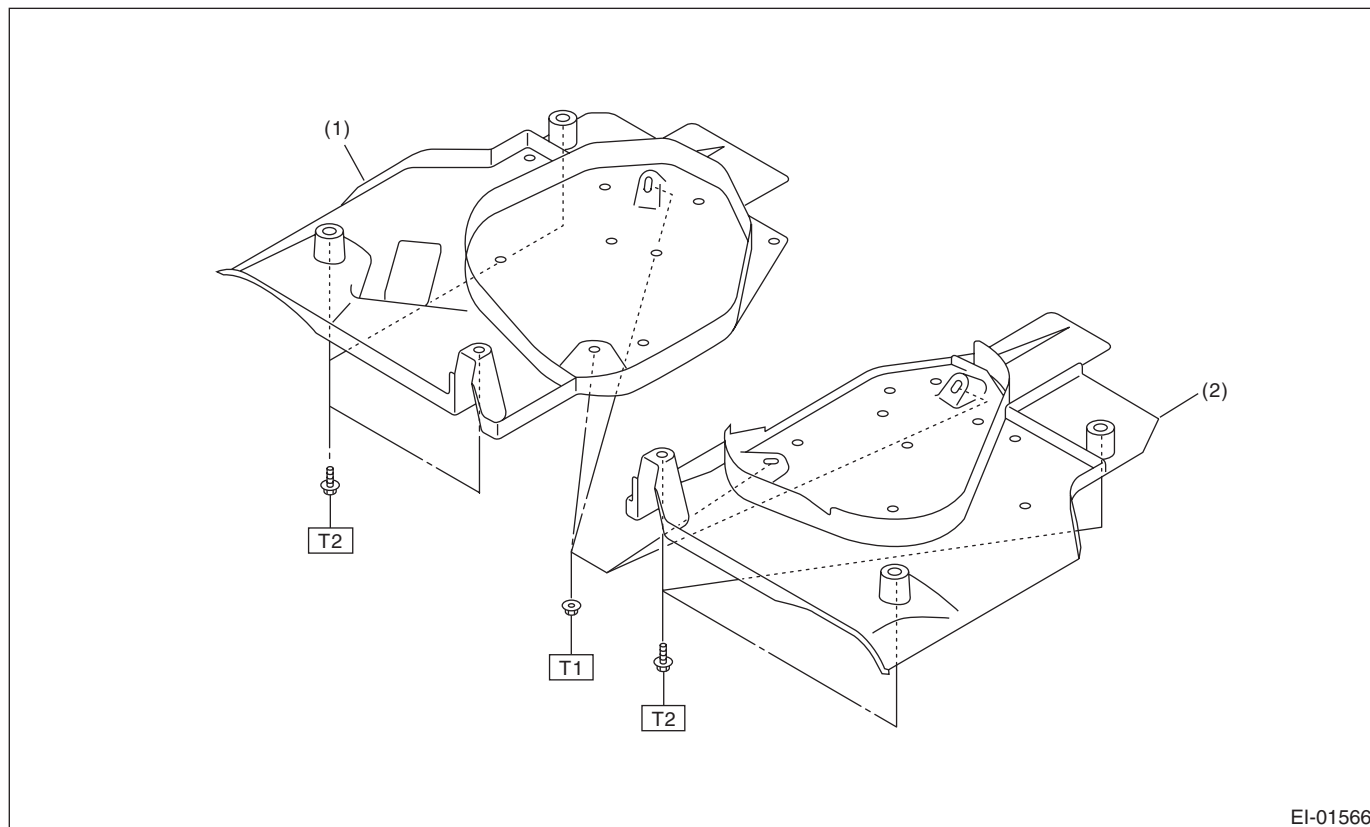

EI-01566

(1) Fuel tank protector RH

(2) Fuel tank protector LH

Tightening torque: N·m (kgf-m, ft-lb)


T1: 9.0 (0.92, 6.6)

T2: 17.5 (1.78, 12.9)

General Description

EXTERIOR/INTERIOR TRIM

3. FRONT BUMPER

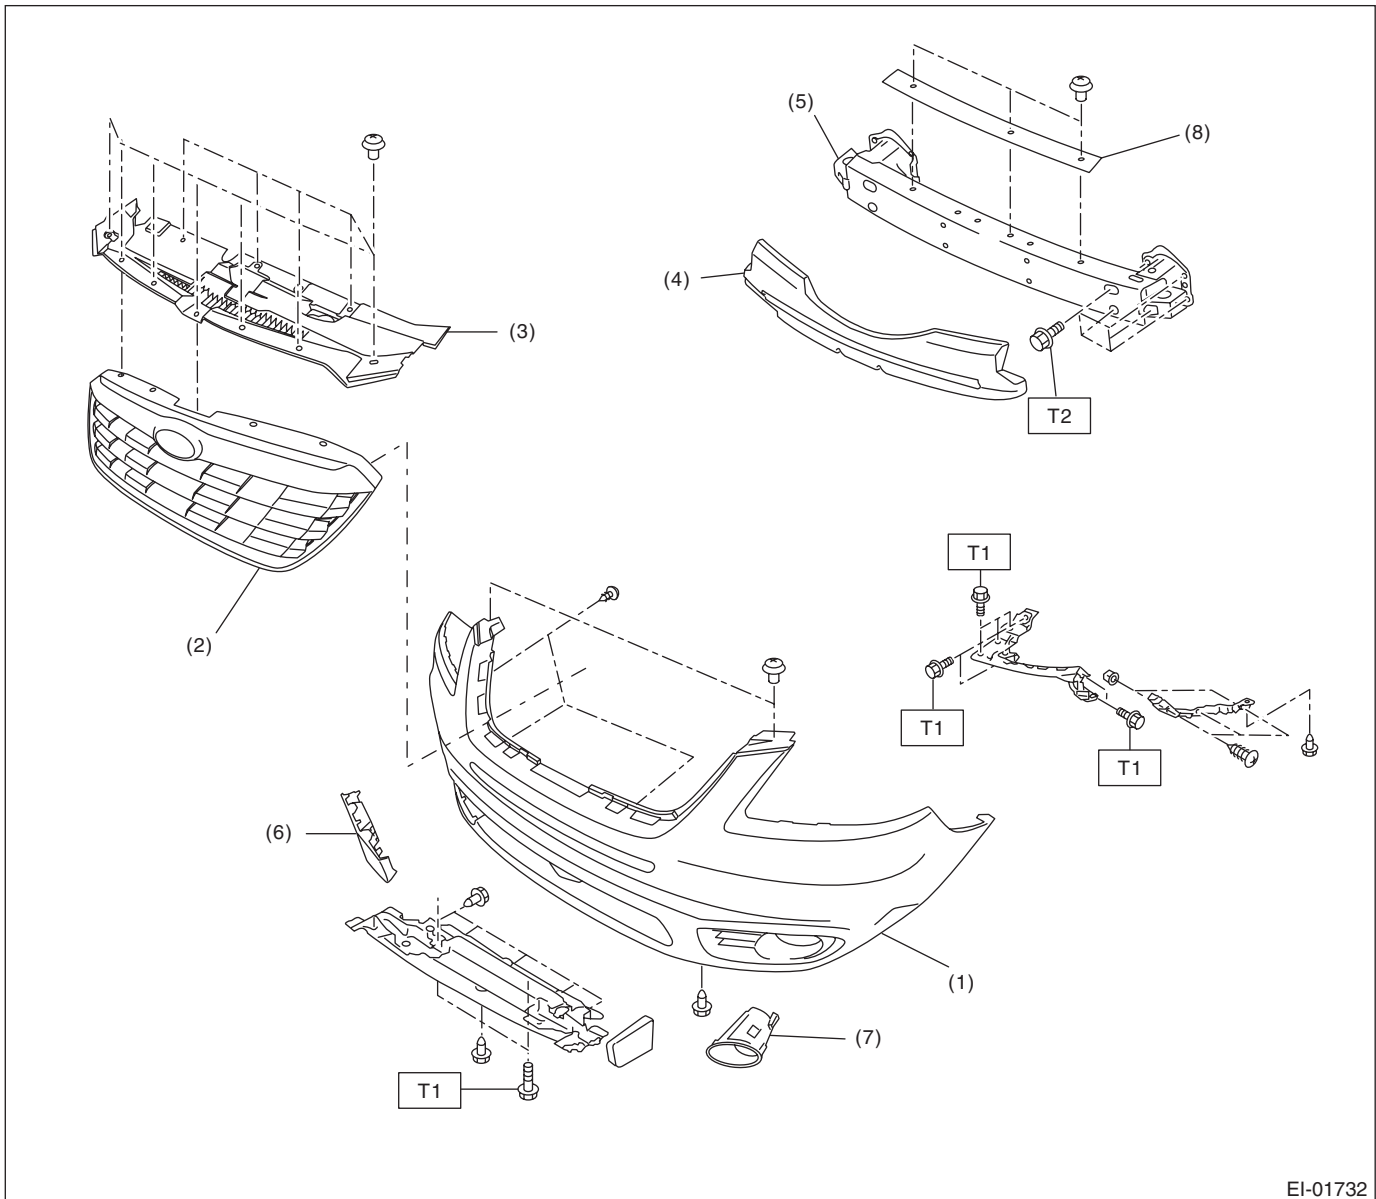

EI-01732


- | | |
|--------------------------|-------------------------------|
| (1) Bumper face | (5) Bumper beam reinforcement |
| (2) Front grille | (6) Towing hook cover |
| (3) Front upper cover | (7) Fog light ASSY |
| (4) Energy absorber foam | (8) Bumper beam cover |

Tightening torque: N·m (kgf-m, ft-lb)

T1: 7.5 (0.76, 5.5)

T2: 33 (3.4, 24)

4. REAR BUMPER

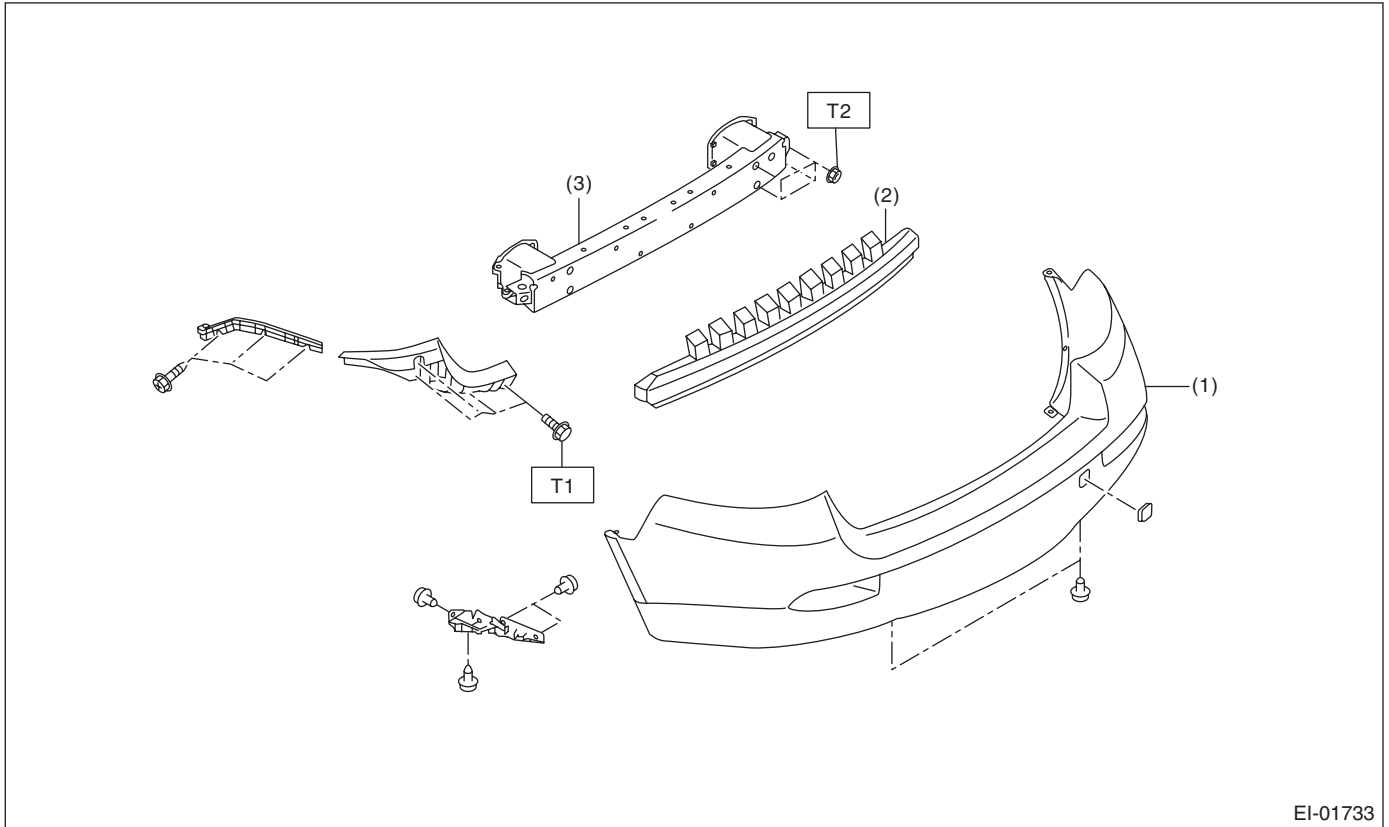

- (1) Bumper face
- (2) Energy absorber foam


- (3) Bumper beam reinforcement

Tightening torque: N·m (kgf-m, ft-lb)

T1: 7.5 (0.76, 5.5)

T2: 53 (5.4, 38)

5. MUD GUARD

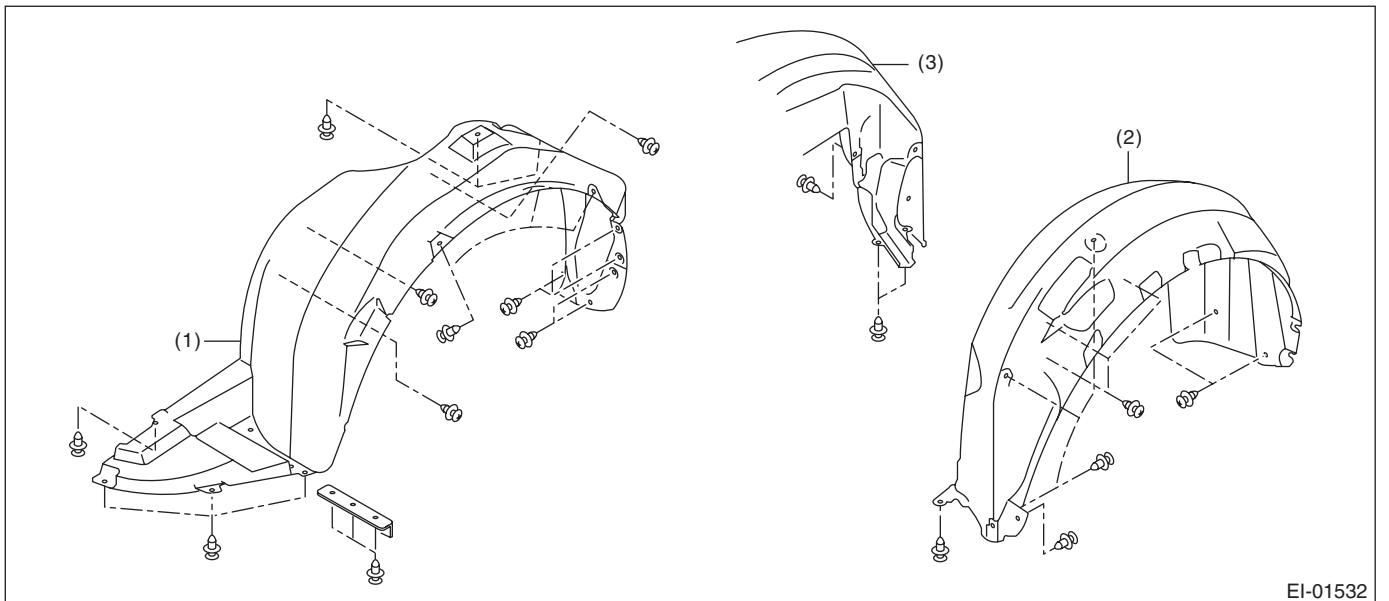

- (1) Front mud guard


- (2) Rear mud guard LH

- (3) Rear mud guard RH

General Description

EXTERIOR/INTERIOR TRIM

6. COWL PANEL

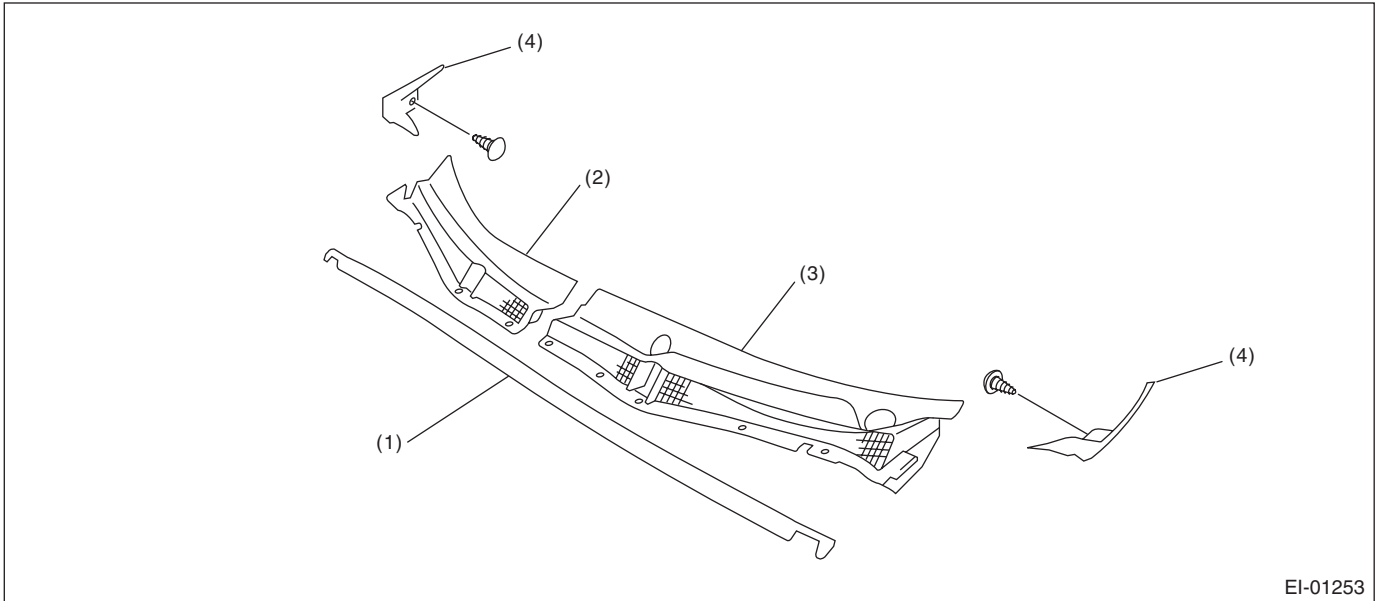


EI-01253

- (1) Weather strip
- (2) Cowl panel RH

(3) Cowl panel LH

(4) Cowl panel side

7. ROOF SPOILER

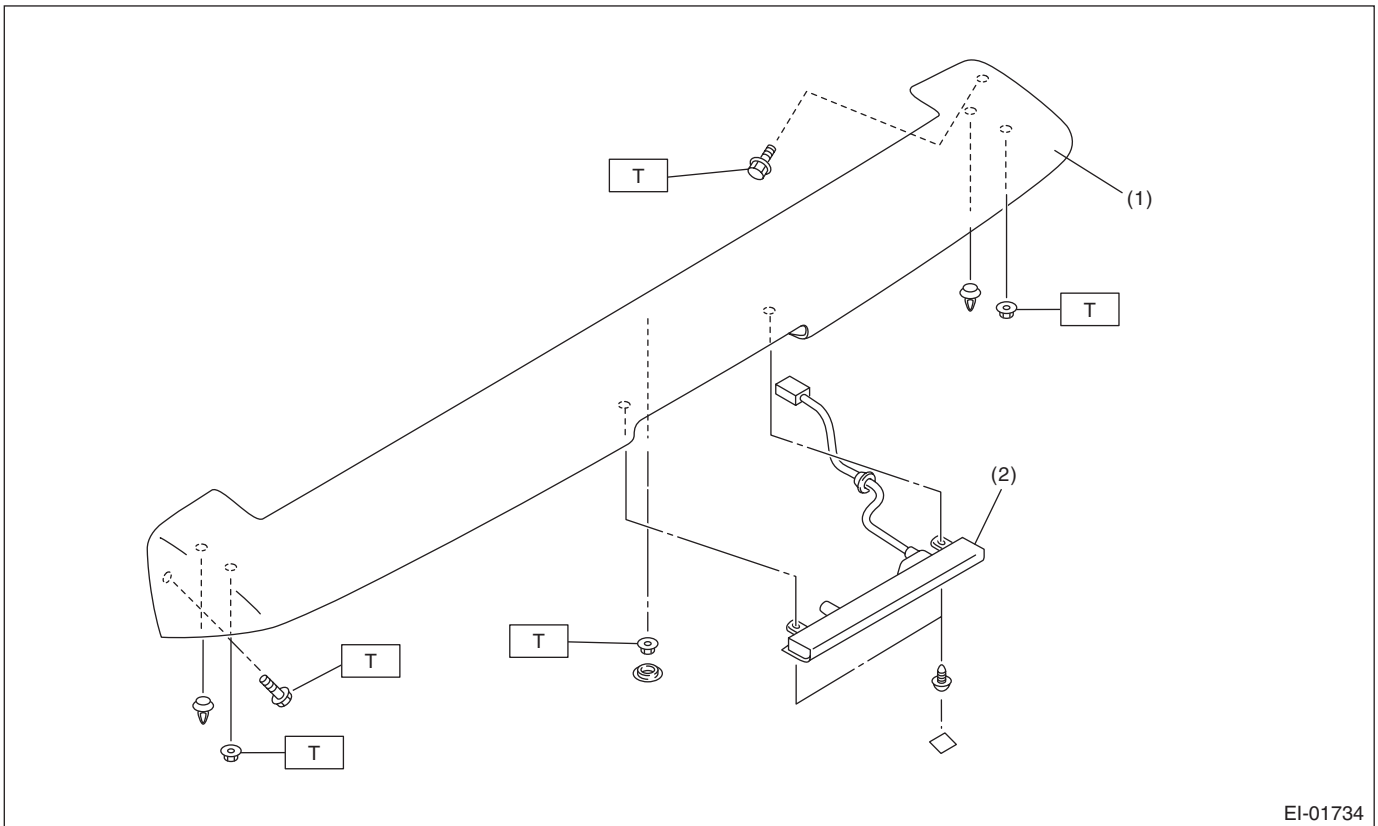


EI-01734

- (1) Roof spoiler
- (2) High-mounted stop light

Tightening torque: N·m (kgf-m, ft-lb)
T: 4.5 (0.46, 3.32)

8. ROOF MOLDING

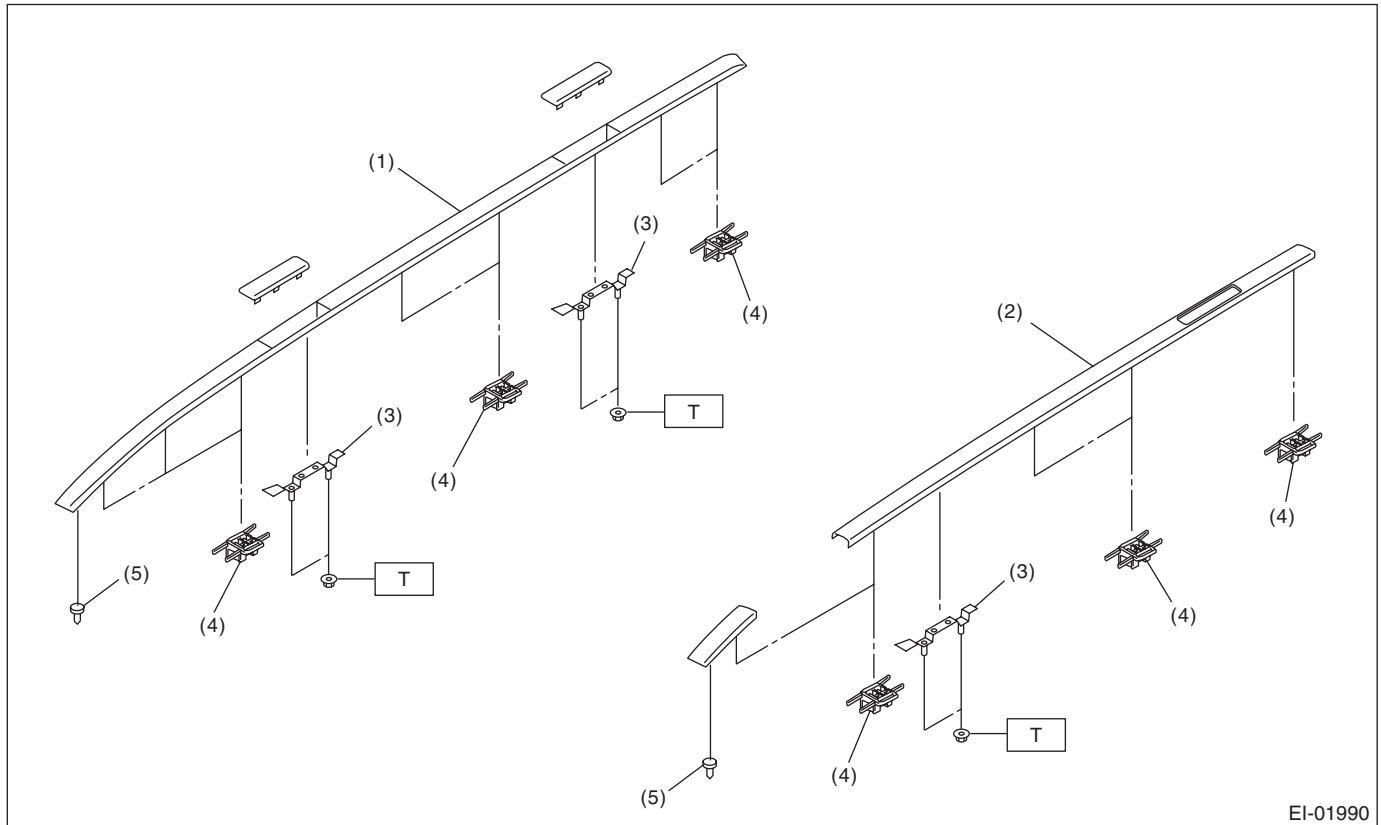

EI-01990


- | | |
|-----------------------------------|-----------|
| (1) Roof molding | (4) Clip |
| (2) Roof molding (with roof rail) | (5) Rivet |
| (3) Roof carrier attachment | |

Tightening torque: N·m (kgf-m, ft-lb)
T: 10 (1.0, 7.23)

General Description

EXTERIOR/INTERIOR TRIM


9. ROOF RAIL

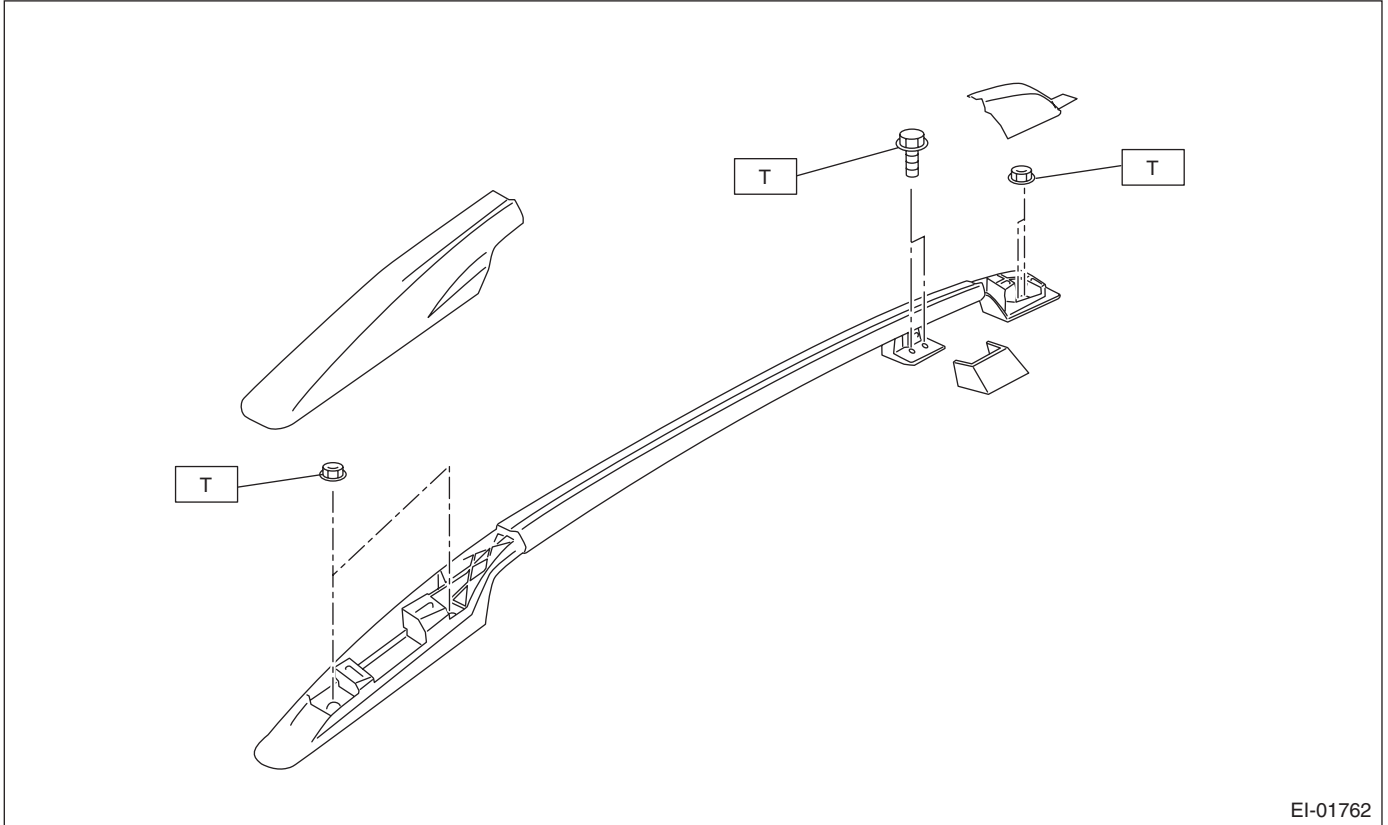

Tightening torque:N·m (kgf-m, ft-lb)

T: 7.5 (0.76, 5.5)

10.SIDE GARNISH

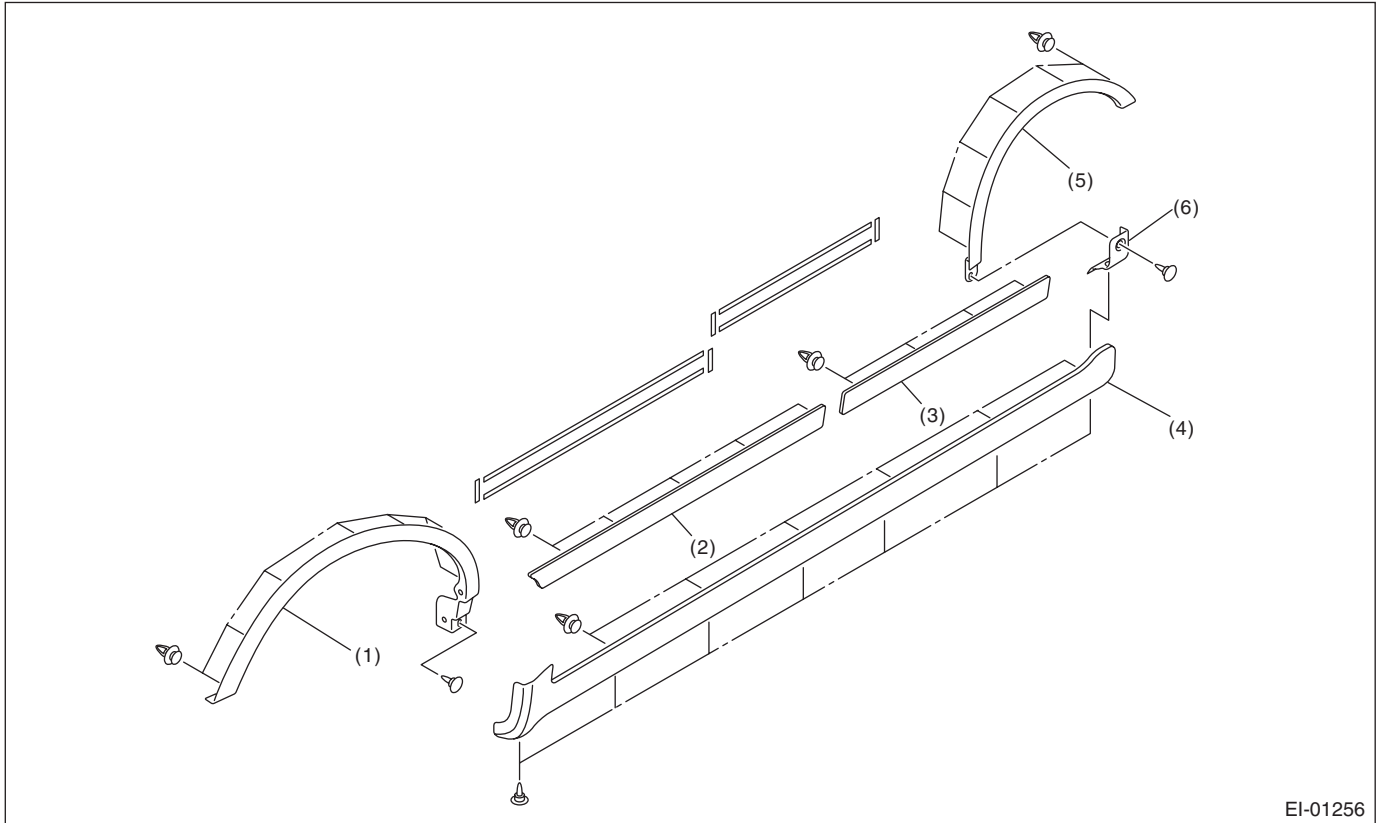


EI-01256

- | | | |
|--------------------------|-----------------------|--------------------------|
| (1) Front fender garnish | (3) Rear door garnish | (5) Rear quarter garnish |
| (2) Front door garnish | (4) Side sill garnish | (6) Garnish end cover |

General Description

EXTERIOR/INTERIOR TRIM


11.DOOR TRIM

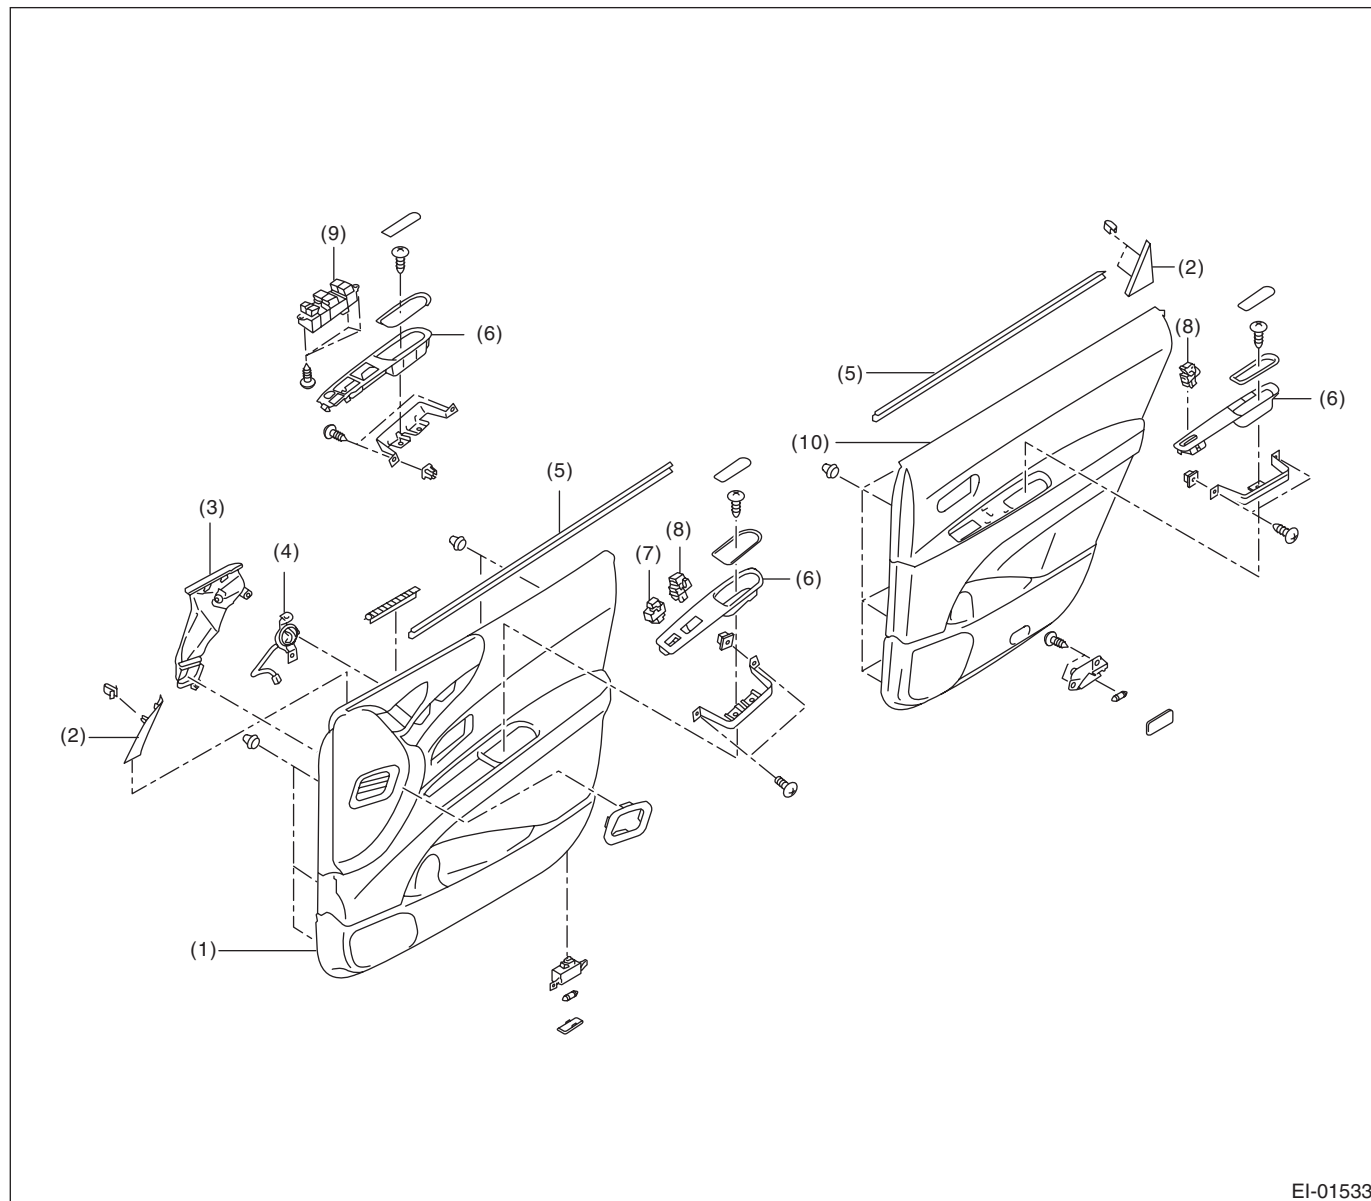

EI-01533

- | | | |
|---------------------|-------------------------------|-----------------------------------|
| (1) Front door trim | (5) Weather strip | (9) Power window main switch ASSY |
| (2) Gusset cover | (6) Power window switch cover | (10) Rear door trim |
| (3) Defroster duct | (7) Door lock switch | |
| (4) Tweeter | (8) Power window sub-switch | |

12.CONSOLE BOX

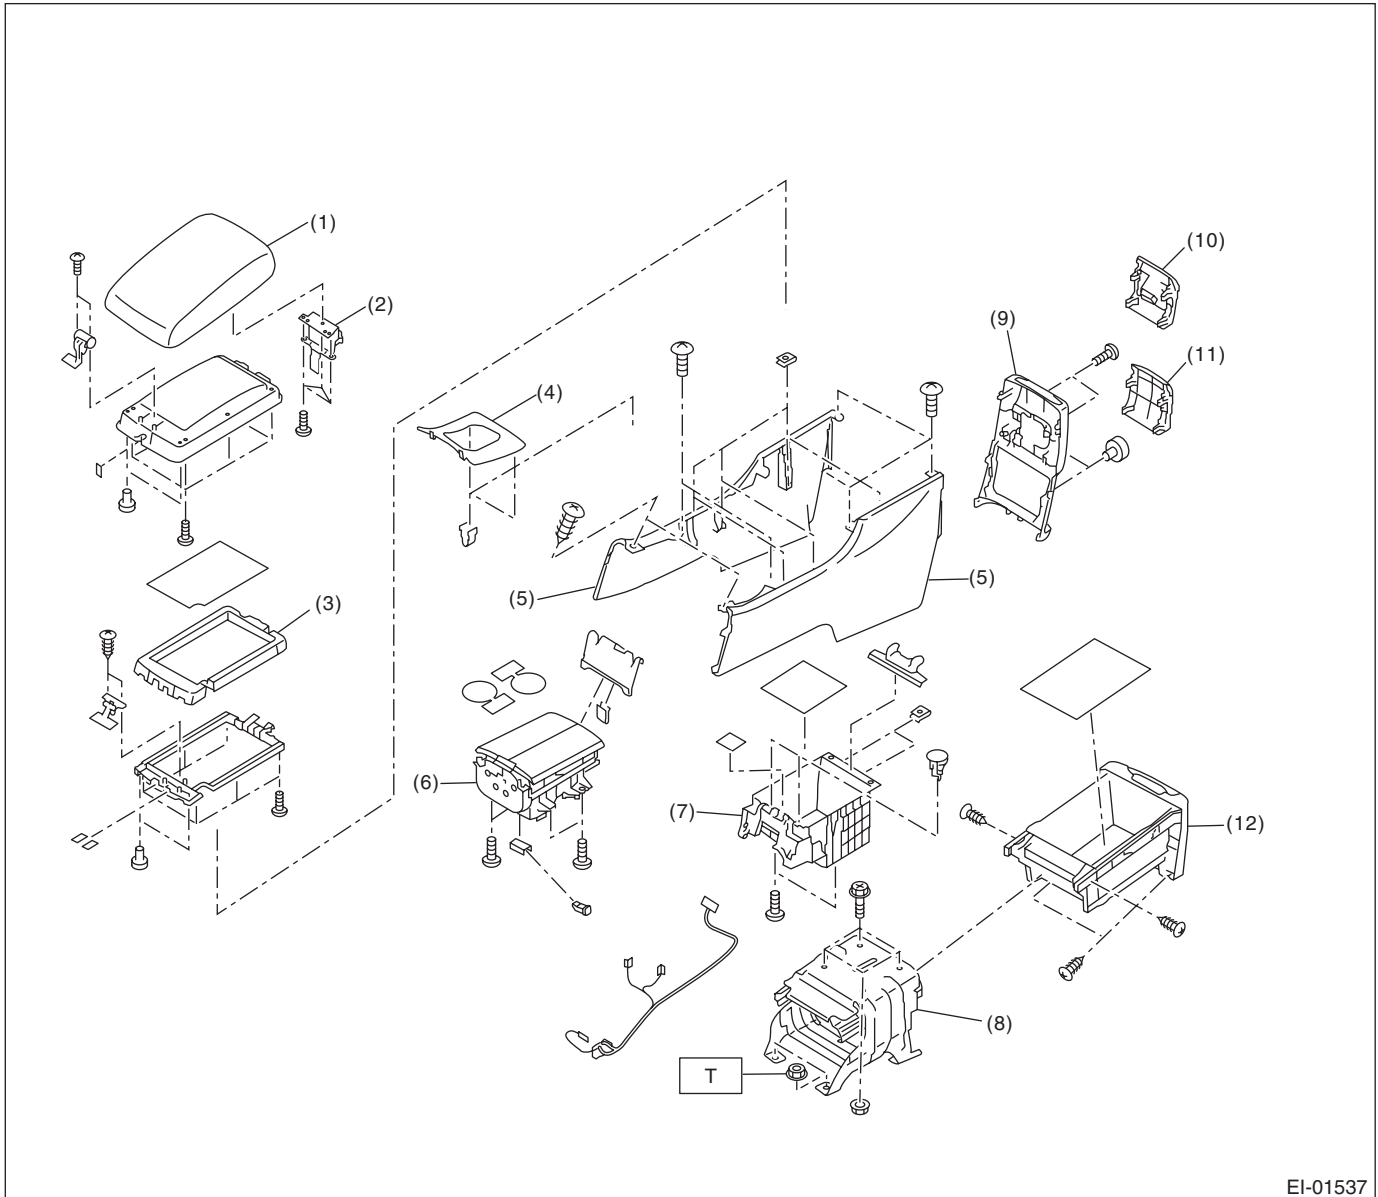

EI-01537

- | | | |
|-------------------------|--|---------------------------|
| (1) Console upper lid | (7) Console pocket | (11) Rear panel cover |
| (2) Lid hinge | (8) Console frame | (12) Console lower pocket |
| (3) Console lower lid | (9) Console rear panel | |
| (4) Console front panel | (10) Rear panel cover (with rear cooler) | |
| (5) Console side panel | | |
| (6) Cup holder ASSY | | |


Tightening torque: N·m (kgf-m, ft-lb)

T: 6.5 (0.66, 4.79)

General Description


EXTERIOR/INTERIOR TRIM

13. INSTRUMENT PANEL

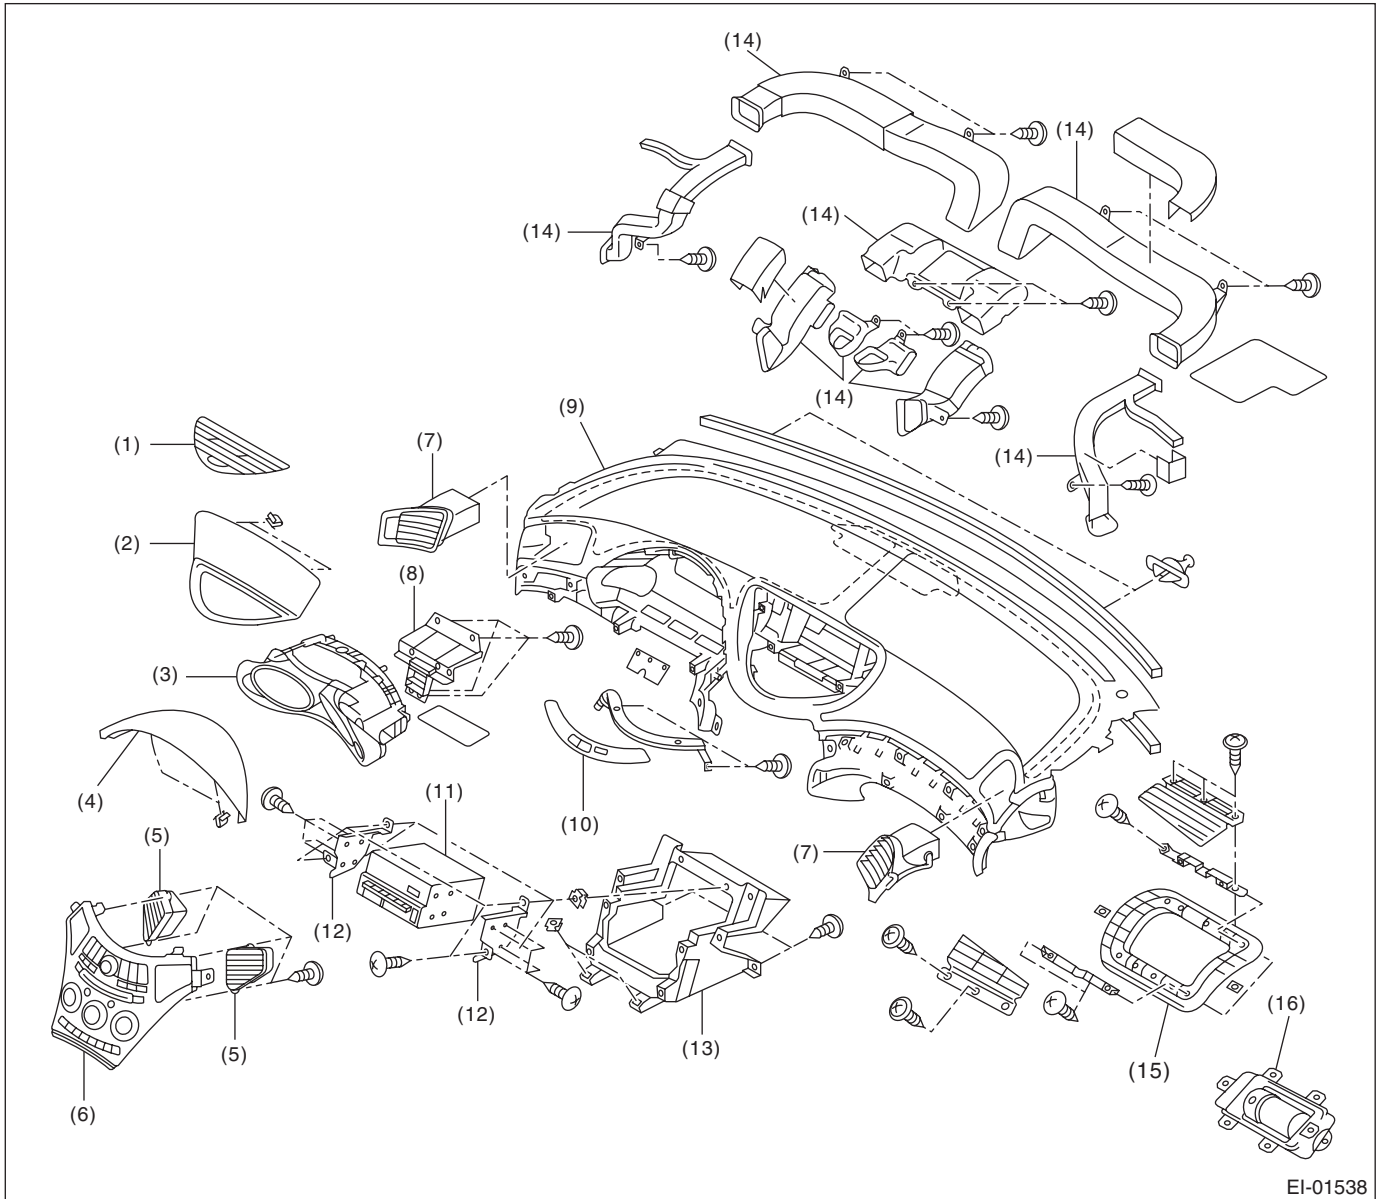

EI-01538

- | | | |
|----------------------------|---------------------------------|-------------------------------------|
| (1) Air vent upper grille | (7) Air vent side grille | (12) Audio bracket |
| (2) Display cover | (8) Meter stay | (13) Center console frame |
| (3) Combination meter ASSY | (9) Instrument panel upper ASSY | (14) Air vent duct |
| (4) Meter visor | (10) Upper control switch | (15) Passenger's airbag stay |
| (5) Air vent center grille | (11) Audio ASSY | (16) Passenger's airbag module ASSY |
| (6) Control panel | | |

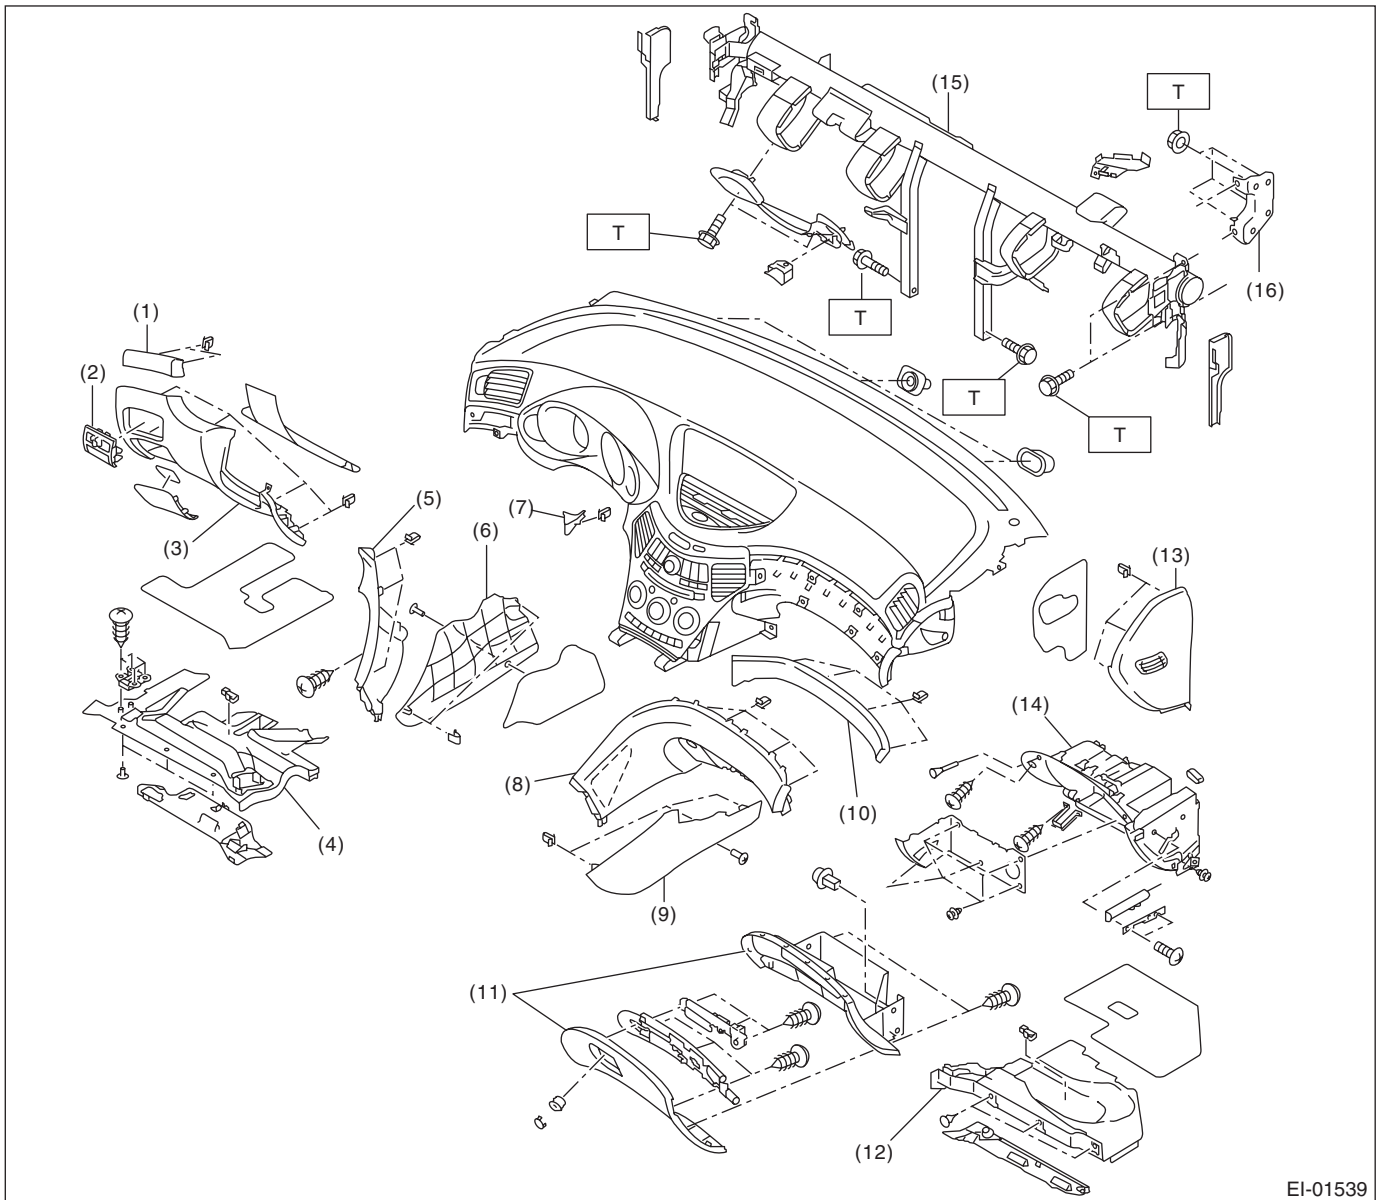

EI-01539

- (1) Garnish LH
- (2) Switch ASSY
- (3) Instrument panel lower cover upper
- (4) Instrument panel lower cover under
- (5) Console side panel upper LH

- (6) Console side panel lower LH
- (7) Garnish CTR
- (8) Console side panel upper RH
- (9) Console side panel lower RH
- (10) Garnish RH
- (11) Glove box lid
- (12) Glove box lower cover


- (13) Instrument panel side cover
- (14) Glove box panel
- (15) Steering support beam ASSY
- (16) Steering support beam bracket

Tightening torque: N·m (kgf-m, ft-lb)
T: 25 (25.5, 18)

General Description

EXTERIOR/INTERIOR TRIM

14.SIDE TRIM

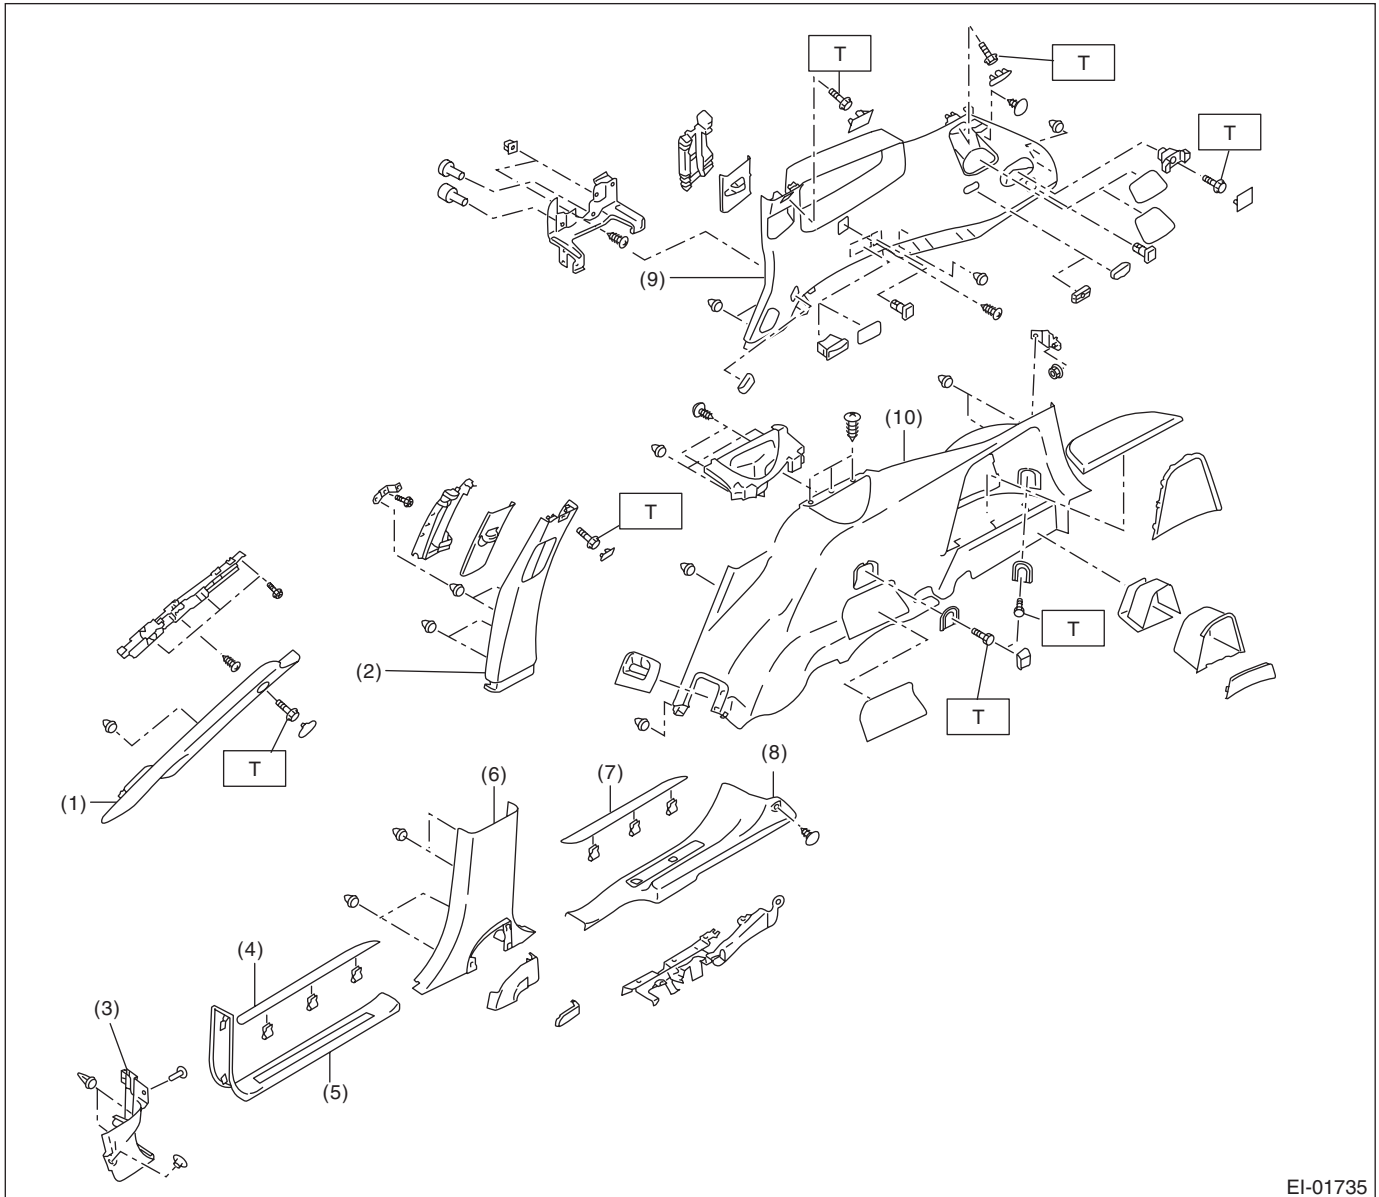

EI-01735


- (1) Front pillar upper trim
- (2) Center pillar upper trim
- (3) Front pillar lower trim
- (4) Front scuff plate
- (5) Front door scuff plate

- (6) Center pillar lower trim
- (7) Rear scuff plate
- (8) Rear door scuff plate
- (9) Rear quarter upper trim

- (10) Rear quarter lower trim

Tightening torque: N·m (kgf-m, ft-lb)
T: 7.5 (0.76, 5.5)

15.REAR GATE TRIM

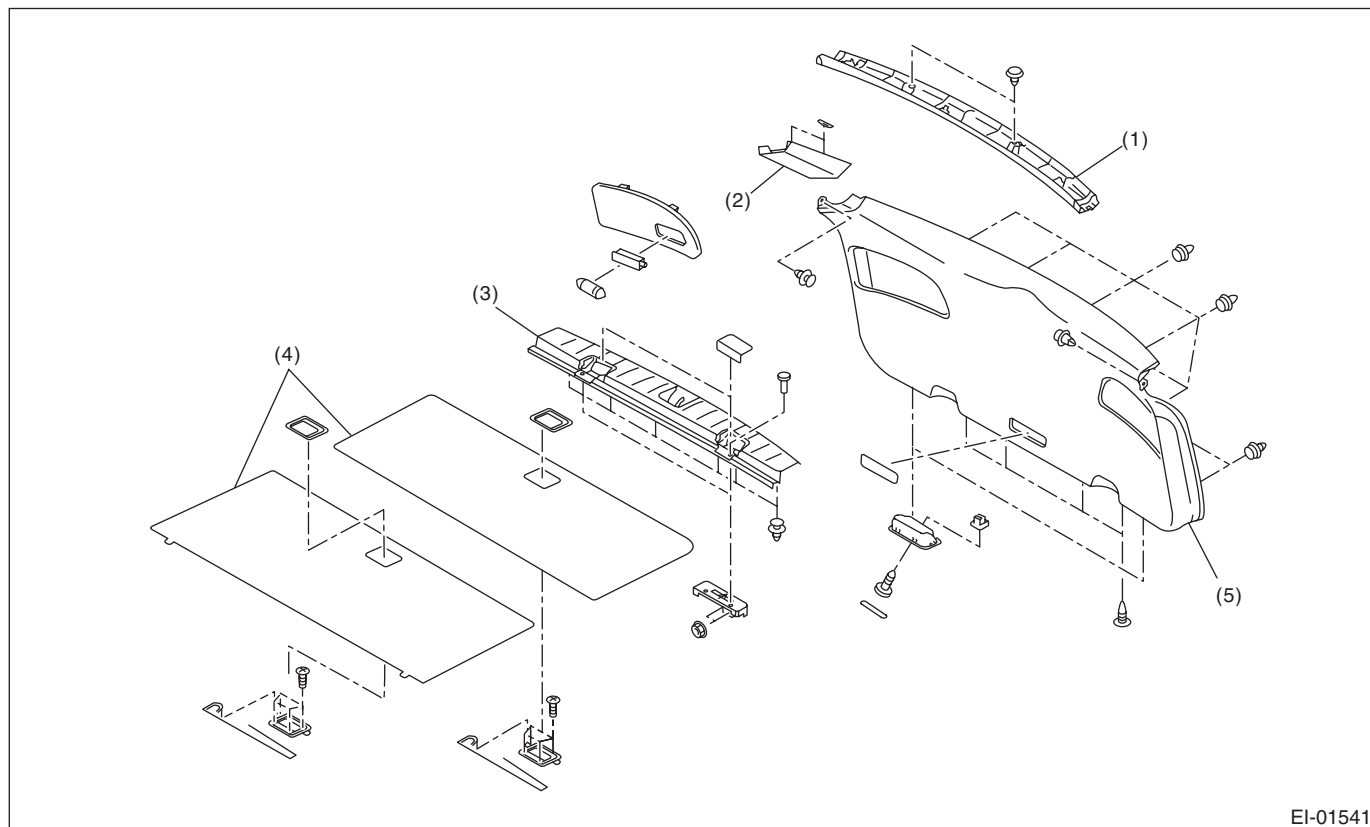


EI-01541

- | | | |
|---------------------------------|-----------------------------|--------------------------------|
| (1) Rear gate panel upper trim | (3) Luggage floor end cover | (5) Rear gate panel lower trim |
| (2) Rear gate panel pillar trim | (4) Luggage floor mat | |

General Description

EXTERIOR/INTERIOR TRIM

16.ROOF TRIM

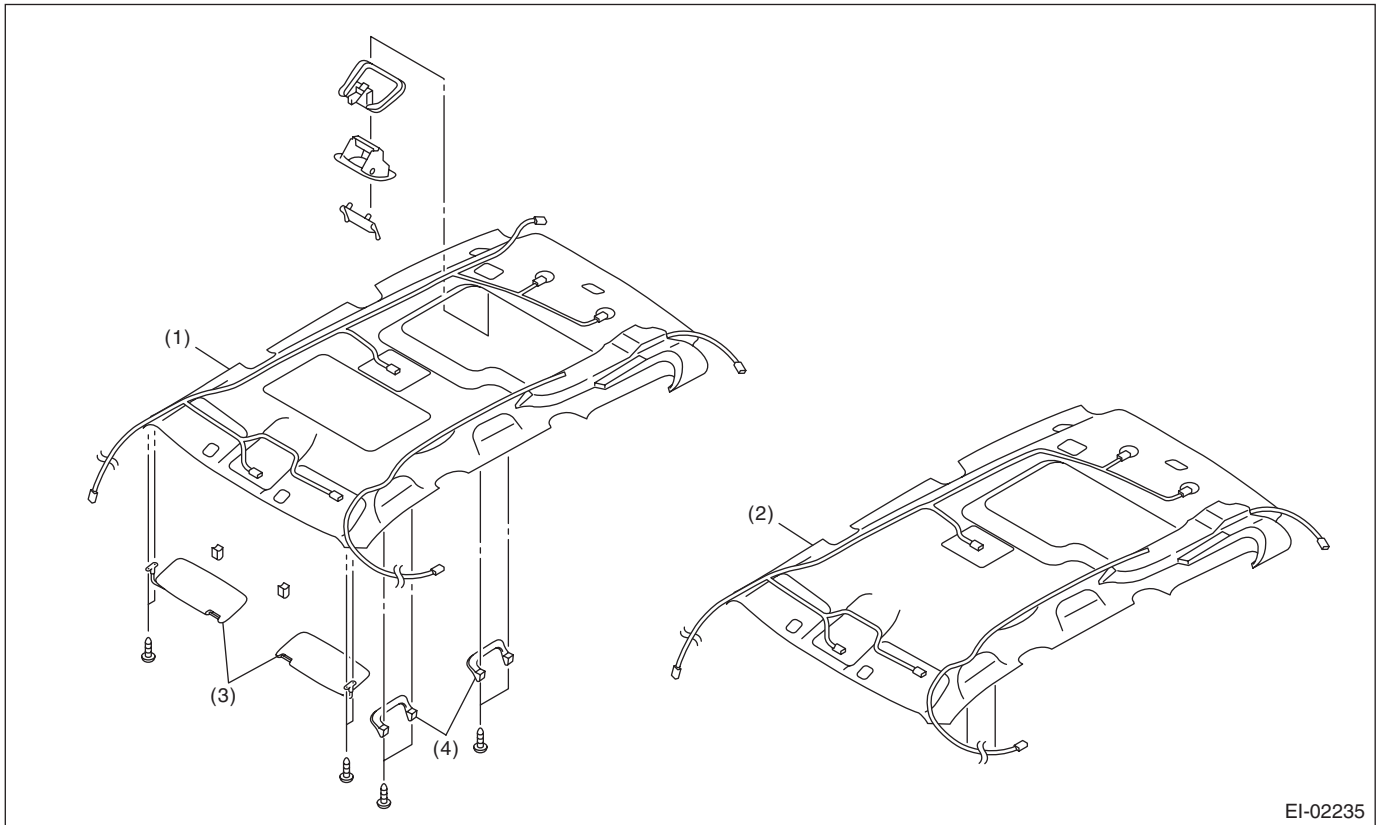


(1) Roof trim (model with sunroof)

(3) Sun visor

(4) Assist rail

(2) Roof trim

17.HEAT SHIELD COVER

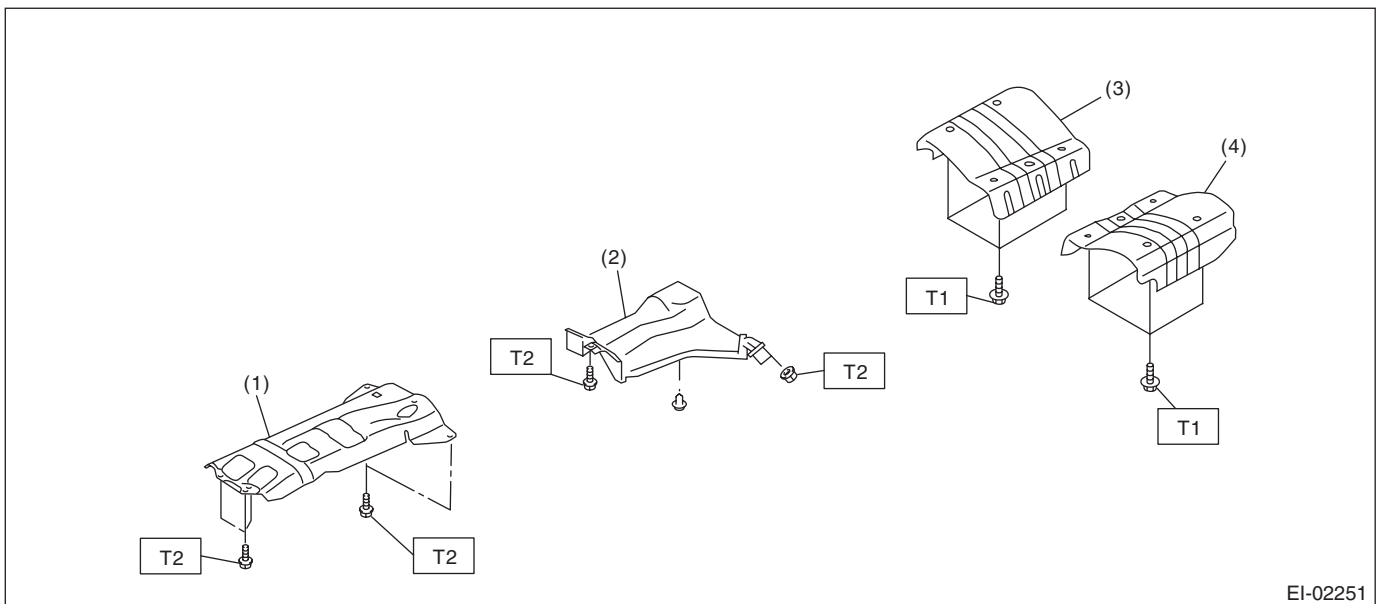

(1) Front heat shield cover

(3) Rear heat shield cover RH

(2) Center heat shield cover


(4) Rear heat shield cover LH

Tightening torque:N·m (kgf-m, ft-lb)

T1: 7.5 (0.76, 5.5)

T2: 18 (1.84, 13.3)

18.TRAILER HITCH

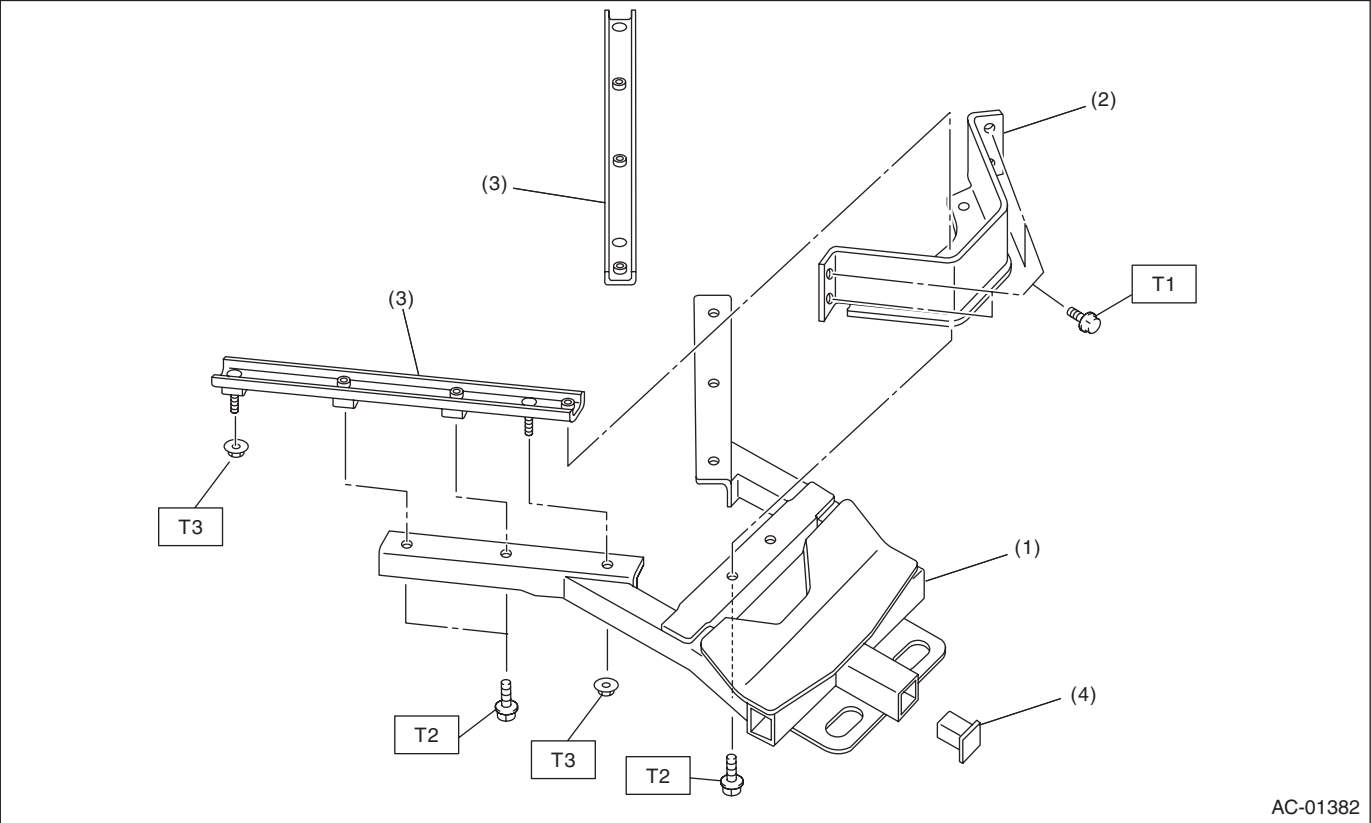

- (1)

Main frame
- (2)

Center frame
- (3)

Side frame
- (4)

Cover

Tightening torque:N·m (kgf-m, ft-lb)
T1: 13 (1.33, 9.4)
T2: 33 (3.37, 23.9)
T3: 53 (5.4 38.3)

B: PREPARATION TOOL

TOOL NAME	REMARKS
Clip remover	Used for removing trim.
Clip clamp pliers	Used for removal of various clips and clamps.