


27.Trailer Hitch

A: REMOVAL


- 1) Remove the spare tire hoist. <Ref. to WT-14, REMOVAL, Spare Tire Hoist.>
- 2) Remove the bolt, and then detach the main frame.

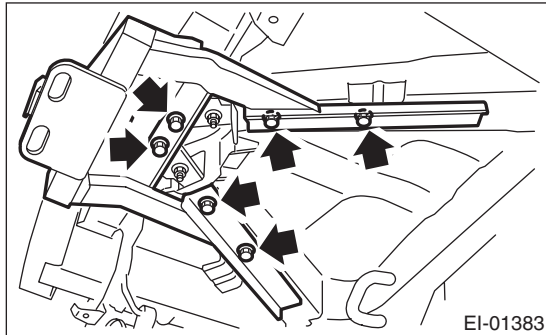

CAUTION:

The trailer hitch main frame is heavy. Be careful when removing.

- 3) Remove the bolts, and then remove the center frame.

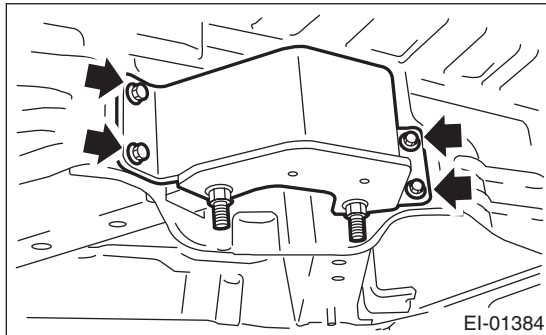

- 4) Remove the side frame from the vehicle.

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

Refer to “COMPONENT” of “General Description”.

<Ref. to EI-17, TRAILER HITCH, COMPONENT, General Description.>

EXTERIOR BODY PANELS



	Page
1. General Description	2
2. Front Hood	12
3. Front Fender	14
4. Front Door	15
5. Front Sealing Cover	17
6. Rear Door	18
7. Rear Sealing Cover	20
8. Rear Gate	21