


21. Wiper Deicer Switch

A: REMOVAL

- 1) Remove the instrument panel lower cover. <Ref. to EI-37, REMOVAL, Instrument Panel Lower Cover.>
- 2) Disconnect the harness connector and remove wiper deicer switch.

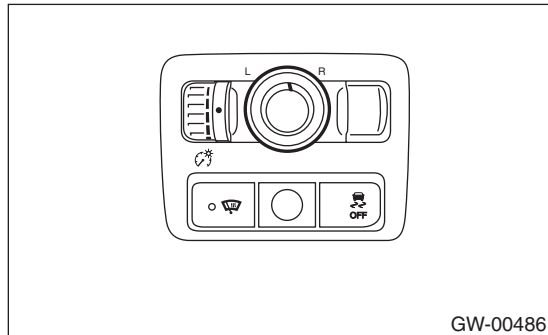

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

1. CHECK WITH SUBARU SELECT MONITOR


CAUTION:

Check whether the wiper deicer timer is in initial setting or customize setting before performing inspection.

- 1) Check the input signal when the wiper deicer switch is operated using Subaru Select Monitor.
 - (1) Prepare the Subaru Select Monitor kit. <Ref. to GW-6, PREPARATION TOOL, General Description.>
 - (2) Turn the ignition switch to ON (engine OFF) and run the "PC application for Subaru Select Monitor".
 - (3) On the «System Selection Menu» display screen, select {Integ. Unit mode}.
 - (4) Select the {Current Data Display & Save}.
 - (5) Display the data of the wiper deicer switch.
- 2) When wiper deicer switch is turned to ON, check whether it turns to OFF in 15 minutes, or it operates continuously.
- 3) If it turns to OFF in step 2) above, it is normal. When it operates continuously, replace the body integrated unit.

2. CHECK SWITCH

Remove the wiper deicer switch, and measure the switch resistance.

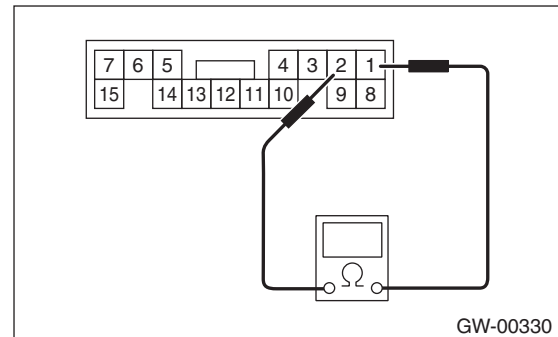

Switch position	Terminal No.	Standard
OFF	1 and 2	1 MΩ or more
ON		Less than 1 Ω

Replace the wiper deicer switch if faulty.

Wiper Deicer Switch

GLASS/WINDOWS/MIRRORS

BODY STRUCTURE

BS

	Page
1. General Description	2
2. Datum Dimensions	3
3. Body Sealing	23
4. Anticorrosion Wax	31
5. Under Coat	38
6. Galvanized Sheet Metal	42
7. Aluminium Sheet Metal	43