

6. Remote Control Mirror System

A: WIRING DIAGRAM

<Ref. to WI-138, Remote Control Mirror System.>

B: INSPECTION

Symptom	Repair order
All function does not operate.	1. Fuse (F/B No. 6) 2. Mirror switch 3. Wiring harness
One side of the mirror motor does not operate.	1. Mirror switch 2. Mirror motor 3. Wiring harness
Mirror heater does not operate.	1. Mirror switch 2. Mirror heater 3. Wiring harness

C: NOTE

For the removal of remote control mirror system component parts, refer to the corresponding section for each component.

- Scalp cap <Ref. to GW-13, Scalp Cap.>
- Outer mirror assembly <Ref. to GW-14, Outer Mirror Assembly.>
- Outer mirror <Ref. to GW-15, Outer Mirror.>
- Remote control mirror switch <Ref. to GW-16, Remote Control Mirror Switch.>