


# Outer Mirror Assembly

## GLASS/WINDOWS/MIRRORS

### 8. Outer Mirror Assembly


#### A: REMOVAL

- 1) Remove the mirror gusset cover.

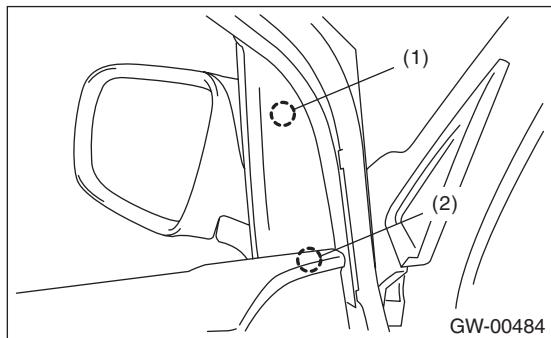

- (1) Clip
- (2) Hook


- 2) Remove the door trim. <Ref. to EI-36, REMOV-AL, Door Trim.>
- 3) Disconnect the mirror connector.
- 4) Remove the screws to remove outer mirror assembly.

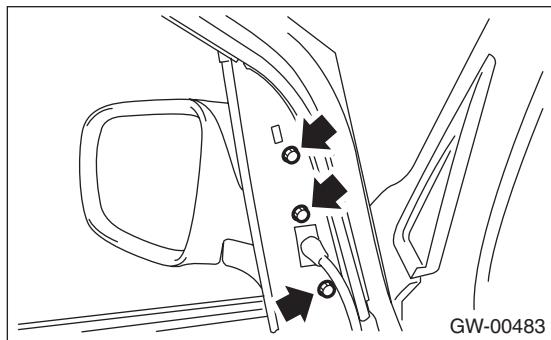


- 5) Remove the outer mirror assembly. (Model without door visor)
- 6) Using the upper part (A) of the mirror assembly as a supporting point, pull it upward while drawing the lower part. (Model with door visor)

#### CAUTION:

- Do not remove forcibly, otherwise door visor may be damaged.
- Apply protective tape as necessary in order to avoid scratching the door visor and mirror assembly.

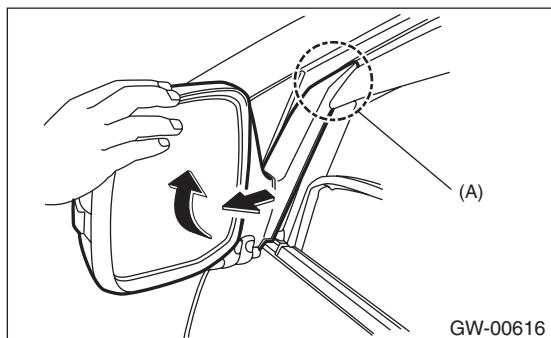

- 7) Pull the mirror assembly downward to remove from the vehicle body. (Model with door visor)

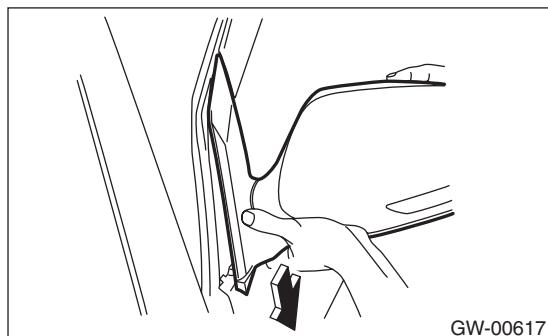

#### B: INSTALLATION


Install in the reverse order of removal.

#### Tightening torque:

Refer to "COMPONENT" of "General Description". <Ref. to GW-5, MIRROR, COMPONENT, General Description.>

#### C: INSPECTION

Check that the rearview mirror moves properly when the battery voltage is applied to terminals.

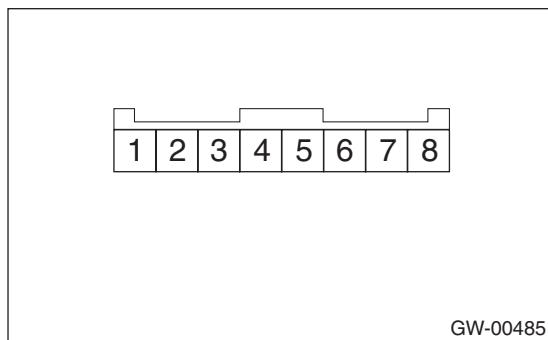

Mirror movement	Terminal No.
OFF	—
UP	5 (+) and 6 (-)
DOWN	6 (+) or 5 (-)
LEFT	8 (+) and 7 (-)
RIGHT	7 (+) or 8 (-)

Replace the outer mirror assembly if defective.