


## Heater Core

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)


### 11. Heater Core

#### A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Draw out the refrigerant with the refrigerant recovery unit. <Ref. to AC-22, PROCEDURE, Refrigerant Recovery Procedure.>
- 3) Remove the heater and cooling unit. <Ref. to AC-37, REMOVAL, Heater and Cooling Unit.>
- 4) Remove the screws and remove the heater core cover and pipe clamp.

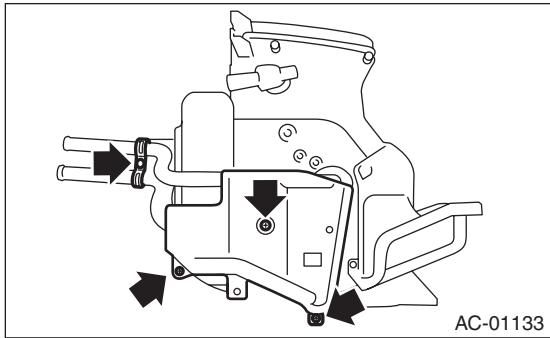

- 5) Remove the heater core (A).

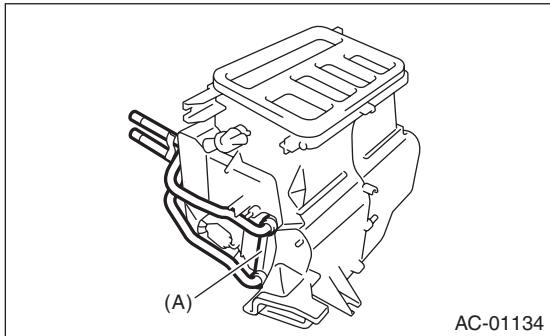

#### B: INSTALLATION

Install in the reverse order of removal.