

List of Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

1. DTC TABLE

NOTE:

When more than one DTC code is recorded, referring to their combination will make it easy to identify the possible cause. Refer to the list for typical examples.

| DTC to Check | Diagnostic Code that was displayed. | | | | | Probable cause |
|--|-------------------------------------|-----|-------|------------|---------------------------|---|
| | Body integrated unit | ECM | TCM | VDC/ABS CM | Combination meter display | |
| B1100 <Ref. to LAN(diag)-36, DTC B1100 INTEG. UNIT SYSTEM ERROR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> | B1100 | — | — | — | Er IU | There could be a problem in the body integrated unit. |
| B1101 <Ref. to LAN(diag)-37, DTC B1101 BATT P/ SUPPLY MAL-FUNCTION CONT, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> | B1101 | — | — | — | Er IU | It is possible that power supply voltage is low (battery, generator is faulty). |
| B1102 <Ref. to LAN(diag)-39, DTC B1102 BATT P/ SUPPLY MAL-FUNCTION BACKUP, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> | B1102 | — | — | — | Er IU | |
| B1103 <Ref. to LAN(diag)-41, DTC B1103 IGNITION POWER FAILURE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> | B1103 | — | — | — | Er IU | |
| B1104 <Ref. to LAN(diag)-43, DTC B1104 ACC POWER FAILURE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> | B1104 | — | — | — | Er IU | |
| U1221 <Ref. to LAN(diag)-62, DTC U1221 CAN-HS ECM NO-RECEIVE DATA, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> | U1221 | — | P1718 | C0057 | Er HC | It is possible that the ECM is faulty. |

List of Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

| DTC to Check | Diagnostic Code that was displayed. | | | | | Probable cause |
|--|-------------------------------------|-------|-------|------------|----------------------------|--|
| | Body integrated unit | ECM | TCM | VDC/ABS CM | Combina-tion meter display | |
| U1222 <Ref. to LAN(diag)-64, DTC U1222 CAN-HS TCM NO-RECEIVE DATA, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> | U1222 | P0600 | — | C0057 | Er HC | It's possible that there is an internal problem in the TCM, and a open circuit in the harness. |
| U1223 <Ref. to LAN(diag)-66, DTC U1223 CAN-HS VDC/ABS NO-RECEIVE DATA, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> | U1223 | P0600 | P1718 | — | Er HC | It is possible that the VDC/ABS CM is faulty. |
| U1321 <Ref. to LAN(diag)-81, DTC U1321 CAN-LS METER NO-RECEIVE DATA, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> | U1321 | — | — | — | — | It is possible that the combination meter is faulty. |
| U1313 <Ref. to LAN(diag)-79, DTC U1313 CAN-LS MONITOR DATA ABNORMAL, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> | U1313 | — | — | — | — | It is possible that the navigation monitor or MFD is faulty. |
| B1500 <Ref. to LAN(diag)-83, DTC B1500 KEYLESS UART COM. MAL-FUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> | B1500 | — | — | — | — | It is possible that the keyless entry module is faulty. |