


Front Fog Light Assembly

LIGHTING SYSTEM

16.Front Fog Light Assembly

A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Disengage the three clips, and then turn over the lower mud guard.
- 3) Disconnect the harness connector.
- 4) Remove the two mounting bolts, and pull and detach the fog light assembly.

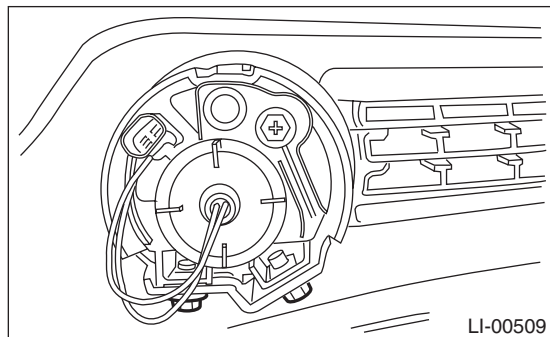

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

7.5 N·m (0.76 kgf-m, 5.5 ft-lb)

C: ADJUSTMENT

Fog light aiming

NOTE:

Before checking the fog light beam level, be sure of the following:

- Check the area around the fog light for any scratches, damage or other type of deformation.
- Vehicle is parked on a level surface.
- The inflation pressure of tires is correct.
- Vehicle's fuel tank is fully filled.

1) Bounce the vehicle several times to normalize the suspension.

2) Make certain that someone is seated in the driver's seat.


3) Measure the height of fog light center.

4) Disengage the three clips, and then turn over the mud guard.


Front Fog Light Assembly

LIGHTING SYSTEM

5) Adjust the front fog light pattern by inserting a Phillips screwdriver to the adjusting hole.

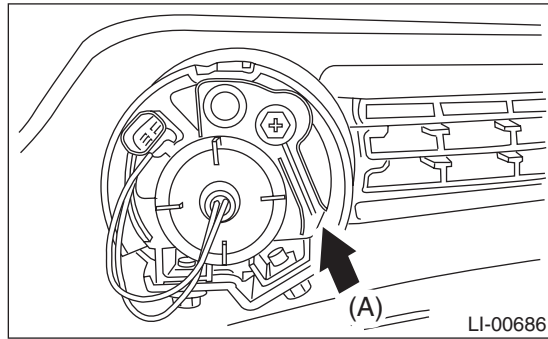

(A) Adjusting hole

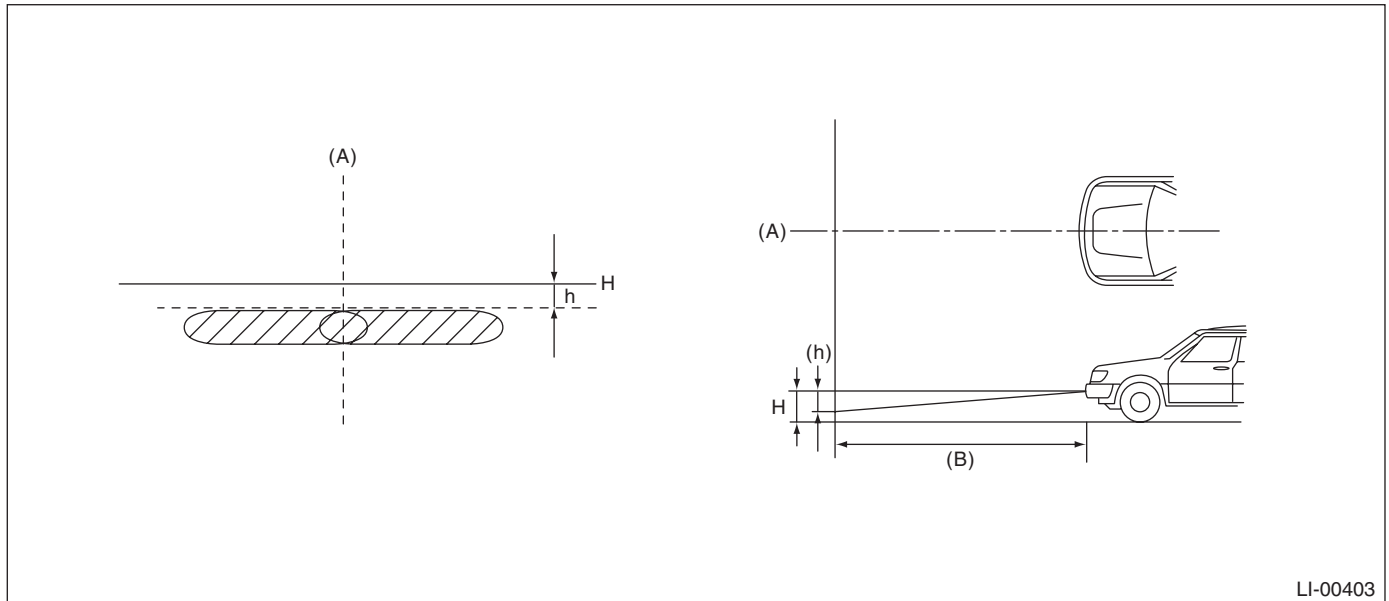

(A) Vehicle center

(B) 3 m (10 ft)

(H) Height of the center of fog light (mm)

h Dimension mm (in)	40 (1.57)
------------------------	-----------