



## 31. Rear Gate Light

### A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the bulb inspection cover of rear gate trim, then disconnect the harness connectors.

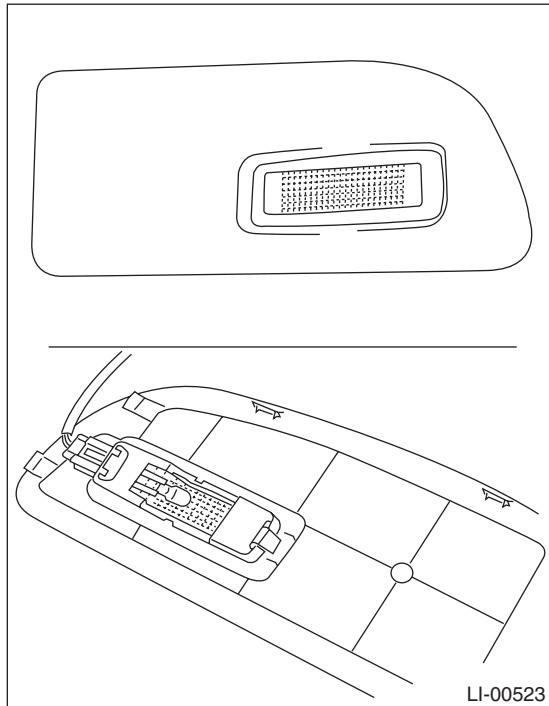

- 3) Remove the bulb.

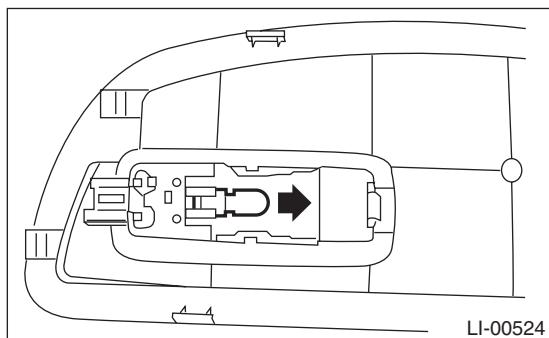

### B: INSTALLATION

Install in the reverse order of removal.

### C: INSPECTION

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATION, General Description.>
- 3) If NG, replace the bulb with a new part.