



38.Vanity Mirror Light

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Insert a screwdriver at the edge of the lens, and remove the lens.

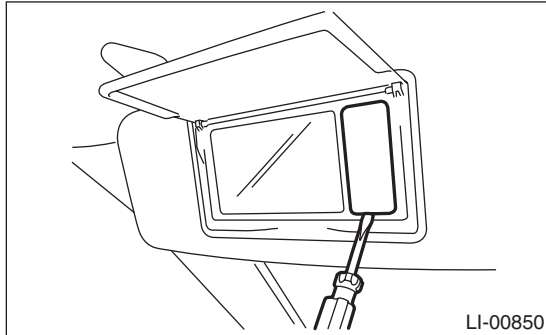

- 3) Remove the bulb.

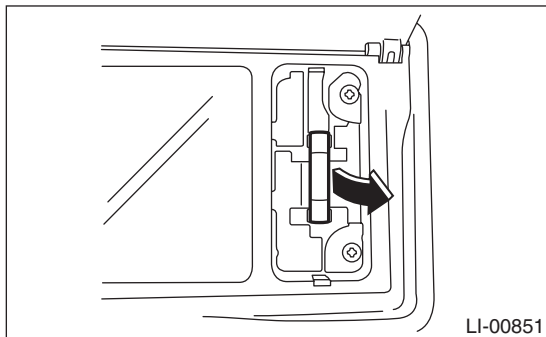

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification.
<Ref. to LI-2, SPECIFICATION, General Description.>
- 3) If NG, replace the bulb with a new part.

Vanity Mirror Light

LIGHTING SYSTEM

WIPER AND WASHER SYSTEMS



	Page
1. General Description	2
2. Wiper and Washer System	6
3. Combination Switch (Wiper)	7
4. Wiper Blade	11
5. Washer Tank and Motor	13
6. Wiper Relay Unit	15
7. Front Wiper Arm	16
8. Front Wiper Motor and Link	17
9. Front Washer Nozzle	18
10. Rear Wiper Arm	19
11. Rear Wiper Motor	20
12. Rear Washer	21