


10. Rear Outer Handle

A: REMOVAL

- 1) Raise the rear door glass to the top position.
- 2) Disconnect the ground cable from battery.
- 3) Remove the rear door trim. <Ref. to EI-36, REMOVAL, Door Trim.>
- 4) Remove the cable from rear inner remote. <Ref. to SL-36, REMOVAL, Rear Inner Remote.>
- 5) Remove the sealing cover. <Ref. to EB-20, REMOVAL, Rear Sealing Cover.>
- 6) Loosen the bolt (1) and turn bolt (2) twice.

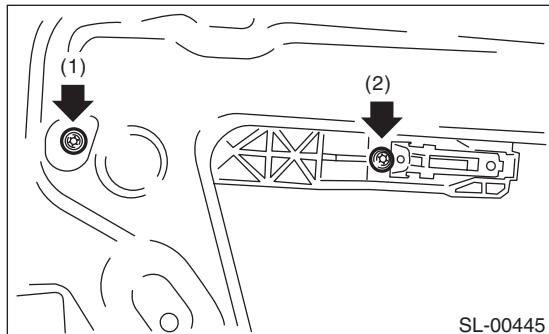

- 7) Remove the outer handle cover.
- 8) Move the rear outer handle to the rear, and detach the rear outer handle.

CAUTION:

Do not apply excessive force to remove the handle from door panel, not to deform the door panel.

- 9) Remove the outer side spacer, and slide the frame assembly forward from the inner side, then remove.

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

<Ref. to SL-2, DOOR LOCK ASSEMBLY, COMPONENT, General Description.>

C: INSPECTION

- 1) Inspect to make sure that the latch is in secure contact.
- 2) Check the handle and cable for smooth operation.